



Owners Manual



ASTORIA



PACIFIC *Edition*



Congratulations on your recent purchase of a Damon Motor Coach Recreational Vehicle. We sincerely thank you for choosing and putting your faith in Damon, and we would like you to know that your satisfaction is of great importance to us. Our major goal is to provide you with a quality recreational vehicle at a reasonable price.

Your unit has been designed to provide you with many years of carefree, comfortable travel and vacationing. We hope that it will bring you that, along with many years of enjoyment and pleasant memories.

This manual will help you better understand the features and operating performances of your recreational vehicle. Please read it and keep it in your vehicle for future reference.

Our customers are extremely important to us, and we want to assure you that we will always strive to do everything possible to continue to earn your trust and goodwill.

Welcome to the wonderful world of RVing and the Damon family.

Happy Travels!

Damon Motor Coach





The purchaser of a Damon Vehicle should complete and promptly return to Damon this registration form. This form is not necessary in order to obtain warranty service. However, a purchase receipt or other proof of date of original consumer purchase will be required before warranty service is rendered. Federal law requires that Damon maintain records of the names and addresses of the owners of its Vehicles and the respective identification numbers of such Vehicles. The information contained in this and other forms will assist Damon in the prompt servicing of such Vehicles.

I have read, understand, and am fully aware of the terms, conditions and requirements of the Damon Limited Warranty, and how to obtain warranty service under this Limited Warranty. I also have received and read a copy of the Damon Owner's Manual for this RV with a copy of the Limited Warranty.

Last Name _____ First _____ Mi _____

Address _____

City _____ State _____ Zip _____

Telephone () _____ E-Mail _____

Damon Serial Number: _____

Chassis VIN: _____

Date of Purchase: _____

Mileage or Kilometers (circle one) on Odometer: _____

Signature of Purchaser: _____

Signature of Purchaser: _____

Selling Dealer: _____

City _____ State _____ Zip _____

DAMON MOTOR COACH
CUSTOMER SERVICE DEPARTMENT
P.O. BOX 2888
ELKHART, IN. USA 46515-2888

PERFORATED - TEAR HERE

TAPE-PLEASE DO NOT STAPLE

FOLD HERE

• • • •
• PLACE •
• STAMP •
• HERE •
• • • •

DAMON MOTOR COACH
CUSTOMER SERVICE DEPARTMENT
PO BOX 2888
ELKHART, IN. USA 46515-2888

FOLD HERE

TAPE-PLEASE DO NOT STAPLE

Table of Contents

INTRODUCTION		GFCI.....	30
Introduction.....	1	Battery Control Center (BCC).....	31
How to use this manual	2	Generator	31
Reporting Safety Defects.....	2	Monitor Panel	32
Major Equipment Suppliers	3	Roof Air Conditioner	32
WARRANTY – Chapter 1		LP Gas.....	33
Damon Limited Warranty.....	5	LP Gas Tank	34
Owner Responsibility	6	LP Gas Regulator	34
Owner Responsibility Checklist	8	Home Theater Programming	35
PLANNING AND PREPARATION – Chapter 2		Home Theater Operation	36
License and Insurance	11	Home Theater Trouble Shooting	38
Inspect and Maintain	11	INTERIOR SYSTEMS – Chapter 7	
Loading and Weight.....	11	Automotive Dash	39
Controlling the Motorhome	11	Gear Selector	39
Pre-Travel Checklist.....	12	Engine Block Heater.....	39
Opening Checklist	13	Fuel Selection.....	39
Weights.....	14	Dash Board Controls	40
Federal Certification Label.....	14	Symbols of Switches	40
Weight Ratings	15	Steering Wheel	41
Capacity.....	15	Engine Brake Switch	42
Weighing Your Motorhome	16	Air Suspension	42
Weight Distribution	17	Backup Monitor.....	42
Trailer Hitches and Towing	17	Heating and Cooling Controls.....	42
Towing and GCWR	18	Parking Brakes	42
ON THE ROAD SAFETY – Chapter 3		Leveling System	42
Safety Belts	19	Storage above Cockpit	43
Fuel System.....	19	Front Television	44
Driving	19	Interior Storage Areas.....	44
Parking	20	Entry Storage and Step Cover.....	44
Changing tires	20	Under Bed Storage.....	44
Tire Care.....	21	Engine Access Panel	44
Air Pressure.....	21	Extending the Room	44
SAFETY PROVISIONS – Chapter 4		Retracting the Room.....	45
Smoke Detector	23	Hide-A-Bed Sofa.....	46
Fire Extinguisher.....	23	Sofa Bed	46
LP Gas Detector	23	Sliding Door and Latch	46
CO Detector.....	24	Day/Night Shade	46
Carbon Monoxide Precautions	24	Furnace Thermostat	46
Lighting Appliances.....	24	Water Heater Switch.....	46
Emergency Exit Locations	24	Cabinets	46
PLUMBING SYSTEMS - Chapter 5		Galley Drawers	47
Water Pump and Filter.....	25	Pantry	47
Fresh Water Fill/Tank.....	25	Range	47
City Water Hook – up.....	25	Refrigerator.....	47
Low Point Drains	26	Microwave	47
Sanitizing the Fresh Water System	26	Sink.....	47
Heated Holding Tanks	27	Faucet.....	47
Dumping the Holding Tanks.....	27	Dinette Bench Conversion.....	48
How to Prevent Blockage	27	Bath Vent	48
Termination Compartment Fixtures	28	Shower Head and Hose	48
TECHNICAL SYSTEMS - Chapter 6		Toilet	48
Chassis Electrical	29	Washer/Dryer Combination Machine	48
Coach Electrical.....	29	EXTERIOR SYSTEMS - Chapter 8	
DC System	29	Main Entrance	49
Converter / Inverter.....	30	Entry Assist Handle	49
AC System.....	30	Electric Step	49

Table of Contents

Compartment Doors	49	Sinks	63
Rear Ladder	49	Solid Surface Countertops	63
Awning	49	Upholstery and Fabrics	64
TV Cable and Telephone Hookup	50	Vinyl Cabinetry	64
120 Volt Outlet	50	Wall Coverings	64
120 Volt Cord	50	Windows (Interior)	64
Generator Compartment	50	Wood Cabinetry	64
Furnace Door	50	WINTER USE AND STORAGE - Chapter 10	
Water Heater Access Panel	50	Water Systems	65
Refrigerator Panel	51	Food Storage	65
Automotive Fuse Block	51	LP Gas System	65
Satellite Dish	51	Heating	65
Dual Stage Gas Support Pistons	51	Condensation	65
Fantastic Power Vent	51	Winterization Procedures	66
CARE AND MAINTENANCE - Chapter 9		Water Heater Bypass	67
Batteries	53	Storage and Winterization Checklist	68
Waste Water System	54	MAINTENANCE SCHEDULE	71
Fresh Water System	54	TRAVEL PREPARATION CHECKLIST	72
Electrical System	54	SERVICE / MAINTENANCE RECORD	73
Generator Power Plant System	54	FUEL / OIL RECORD	74-75
LP Gas System	55	NOTES	77
ABS Plastic Parts	55	TROUBLESHOOTING	
Motorhome Alignment	55	Roof Air Conditioner	81
Awning	55	Battery Control Center (BCC)	81
Motorhome Chassis	56	Electrical Power	82
Doors and Door Locks	56	Electric Step	82
Exterior Lights	56	Furnace	82
Fiberglass Exterior	57	Generator	83
Wax	57	Interior Lights	83
Graphics	58	Leveling Jacks	83
Sidewalls	58	LP Gas	84
Roof	58	Microwave Oven	85
Roof Vents	59	Monitor Panel	85
Seals and Adhesives	59	Outside Receptacle	85
Slide-Out	60	Oven	85
Tires	60	Power Inverter	86
TV Antenna	60	Slide-Out Room	86
Satellite Dish	61	Water Systems	87
Underbody	61	Water Pumps	87
Windows	61	Refrigerator	87
Hydraulic Fluid	61	Coach Battery	88
Appliances	62	Running Lights	88
Bath Fixtures	62	Termination Valve	88
Bathtub Seal	62	TV Antenna	88
Bedspread / Draperies / Valance / Headboards	62	Satellite Dish	89
Carpet	62	Waste Tanks	89
Ceramic Tile	62	Water Heater	90
Carbon Monoxide Detector	62	ELECTRICAL DIAGRAMS	92
High Pressure Laminates	62	INDEX	107
Hardware / Accessories / Light Fixtures	63		
Kitchen Fixtures	63		
Mini Blinds / Day Night Shades	63		

Introduction

This manual describes many features of your motorhome and provides a guide to operating procedures so that you can obtain the best performance from those features. Your motorhome has been designed to conform with, or exceed, the American National Standards Institute A 119.2, NFPA 1192, CANADIAN CAN/CSA-Z240 RV SERIES-99 (Canadian-built or units built for Canada), and applicable motor vehicle safety standards. These standards establish the plumbing, heating, electrical and other requirements for quality and safety. The seal attached just outside the entry door indicates compliance with these standards. This seal is the outward sign of internal quality.

Like all automotive equipment, your motorhome will require care and regular maintenance in order to retain its maximum performance characteristics. This manual, along with the specific instructions provided by the leading appliance manufacturers, are in your Owner's Information Kit. The Chassis Operator's Manual outlines important areas of service and provides a maintenance schedule. Please follow them carefully to ensure a safe trouble-free service. Study these instructions carefully. A good working knowledge of your unit and how to care for it will help you enjoy many miles and years of recreational living.

If you have any questions regarding operation, maintenance, or service, please contact your dealer immediately so they can assist you. Your dealer's Service or Sales Department is equipped to handle most any problem that may occur. Customer service is of the utmost importance to your dealer and is just as important to the manufacturer. This manual contains a section outlining the warranty and explaining your rights and obligations, as well as the rights and obligations of the dealer and manufacturer, under the terms of the warranty. Please read this section carefully. You will be better informed in case you have a warranty related problem and your dealer will be better able to get you back on the road again in a timely manner.

We sincerely believe that your dealer and the factory representative will be able to solve any problem which may arise. If their combined efforts are not satisfactory, please send a letter describing the circumstances to:

Damon Motor Coach
Customer Service Department
PO Box 2888
Elkhart IN 46515-2888

You must include the dealer's name, model and serial number of your motorhome. The Damon serial number is located on the bottom of the federal sticker, which is located in the driver's compartment area. ***Thank you*** for choosing our product. Your dealer and we, the manufacturer, will continually strive to merit your confidence.

NOTICE

may not be included in this of publication. The instructions included bilities of the manufacturing subsidiary, parent presented in this manual.

Some equipment and features described or shown in this manual may be optional on your model. This instructional manual is of a general nature only. Because of the continuous process of product im-conducted by Damon Motor Coach, it is possible that recent product changes manual. Specifications may change without notice. This manual is accurate as of the date in this manual are intended as a guide, and in no respect extend the responsi-company or affiliates beyond the standard written warranty as

NOTICE

Photographs or illustrations in this manual are representative of function and may or may not be specific in their depiction of actual equipment, fabrics, interior or exterior decor, or design options as installed on or in your motorhome.

NOTICE

reduce or

This product is designed to provide temporary living quarters for recreational, camping, or travel. Use of this product for long term or permanent occupancy may lead to premature deterioration of interior finishes, fabrics, carpeting, drapes, or components. Damage or deterioration due to long term occupancy may not be considered normal, and may under the terms of the warranty, constitute misuse, abuse, or neglect, and may therefore void certain warranty protection.

Introduction

HOW TO USE THIS MANUAL

Your motorhome has been thoroughly inspected before shipment to the dealer. Your selling dealer is responsible for performing a complete pre-delivery inspection of all motorhome components as specified in the pre-delivery checklists supplied by the manufacturer. You should receive a copy of these completed checklists from your dealer when the motorhome is delivered to you.

Should a problem arise, your first step is to contact your selling Damon dealer who will be glad to handle your situation. This Owner's Manual is not intended for use as a service manual, but rather as a guide to help you become familiar with your motorhome.

This manual is not model specific, which means that it is used for a variety of different models that Damon manufactures. It is of a general nature, so the illustrations and descriptions may not be exactly as they are in your particular motorhome.

If you are unclear or unfamiliar with any procedure that is described in this manual, see your Damon dealer for further clarification before proceeding.

Damon Corporation uses the following notations to warn the user of possible safety concerns and to provide information that will prevent personal injury to the user and/or damage to the motorhome.



A WARNING INDICATES AN INSTRUCTION OR PROCEDURE THAT YOU MUST FOLLOW TO AVOID SERIOUS PERSONAL INJURY.



A CAUTION INDICATES AN INSTRUCTION OR PROCEDURE THAT YOU MUST FOLLOW TO AVOID DAMAGING EQUIPMENT OR COMPONENTS. SERIOUS PERSONAL INJURY COULD ALSO OCCUR.



EXPERIENCE

A NOTICE INDICATES AN INSTRUCTION OR PROCEDURE THAT IS IMPORTANT FOR PROPER SERVICE. A NOTICE CAN ALSO SUPPLY INFORMATION THAT WILL HELP TO MAKE YOUR CAMPING MORE PLEASANT.

REPORTING SAFETY DEFECTS

If you believe that your vehicle has a defect, which could cause an accident, injury, or death, you should immediately inform the National Highway Traffic Safety Administration (NHTSA) in addition to notifying Damon Motor Coach.

If NHTSA receives similar complaints, it may open an investigation, and if it finds that a safety defect exists in a group of vehicles, it may order a recall and remedy campaign. However, NHTSA cannot become involved in individual problems between you and your dealer or Damon Motor Coach.

To contact NHTSA, you may either call the Auto Safety Hotline toll free at 888-327-4236 (or 202-366-0123 in the Washington DC area), TTY: 800-424-9153, or write to: US Department of Transportation, NHTSA, 400 Seventh Street SW, Washington DC, USA 20590. You can go to the NHTSA website, www.nhtsa.gov. You can also obtain other information about motor vehicle safety from the Hotline.

MAJOR EQUIPMENT SUPPLIERS

Please read your recreational vehicle warranty carefully. It is very important to know what Damon Motor Coach warrants, and what is warranted by other suppliers' warranties. Damon Motor Coach does not warrant some items within your vehicle. Below you will find a list of manufacturers who can help you with these components. Please contact them should a need arise.

ACME / Dash Air Conditioning	800-522-2263
ASA / Audiovox / Backup Monitor & Radio	800-688-3135
Atwood / Water Heater & Furnace	815-877-5700
Bob Gunn / Velvac / Exterior Mirrors & Backup Monitor & Camera	574-262-2518
Bristol Laminating / Corian / Countertops	574-848-4461
Carrier Transport / Roof Air Conditioning	800-450-2211
Coachstep / Electric Step	800-451-9245
Dometic / Awning & Refrigerator	574-294-2511
Flair International / Furniture	574-295-5688
Freightliner / Chassis	800-FTL-HELP(385-4357)
Generac / Generator	574-293-6503
Hehr / Windows	517-845-3061
Lippert Components / Slideout & Leveling Jacks	574-537-8900
Magnum Energy / 2000W Inverter	425-353-8833
Midwest Sales / Microwave	574-287-3385
Norco / Slideouts	574-262-3400
Odyssey Group / TV's	574-848-2277
Onan / Generator	800-888-6626
Progressive Dynamics / 80amp Converter	269-781-4241
Putnam / Hitch	517-369-2165
Sealand / Toilet	800-321-9886
Shaw Industries / Carpet	574-264-9687
Shurflo / Water Pump	800-762-8094
Thetford / Toilet (Michigan Residents 313-769-6000)	800-521-3032
Trico (Alta) / Wipers	888-421-5874
Tristar / Microwave	800-456-3340
Ventline / Range Vent & Monitor Panel	574-848-4491
Westland Sales / Washer/Dryer	800-356-0766
Williamsburg / Furniture	574-773-7711
Winegard / TV Antenna & Satellite Dish	319-753-0121

This list may not be all inclusive. If you have any questions regarding other components, call Damon Customer Service at 574-264-2900. A complete listing of all your unit's appliances along with their corresponding serial numbers is located on the wall inside your wardrobe. Please refer to this list if you need to contact the manufacturer regarding the appliance.

Chapter 1 - Warranty

LIMITED WARRANTY

When purchased from an authorized Damon Corporation ("Damon") dealer and used for its intended purpose of recreational travel and camping, Damon warrants your recreation vehicle ("RV") will be free from defects in material and workmanship attributable to Damon for a period of twelve (12) months or 12,000 miles, whichever occurs first. However, Damon further warrants the steel or aluminum frame structure of the roof, front and rear walls, and sidewalls (excluding slide-outs), for twenty four (24) months or 24,000 miles, whichever comes first.

The warranty period shall begin on the date that the RV is delivered to the first retail purchaser or the date that the RV is first placed in service by the dealer for personal use prior to sale at retail, whichever occurs first. This Limited Warranty is not transferable and covers only materials, components or parts of the RV manufactured and finally assembled by Damon, and does not replace or extend, the warranties provided by the independent manufacturers which have issued warranties attributable to their products separately for materials, components, or parts used in the manufacture of this RV. For additional limitations on this Limited Warranty, please refer to the section entitled "What is Not Covered" below.

In the event that a defect in materials or workmanship is found to exist, Damon at its option, will provide for the repair or replacement of such defective material or workmanship at no charge to the RV owner in accordance with the terms, conditions and limitations of this Limited Warranty. To obtain warranty service, the RV owner must do all of the following:

- (a) complete and return to Damon the Owner Registration Form in the Owner's Manual within ten (10) days of delivery
- (b) notify in writing Damon or one of its authorized, independent dealers of the claimed defect within ten (10) days of the date that the claimed defect is or should have been discovered; and
- (c) promptly return the RV to Damon or an authorized dealer for such repairs. All costs incurred in transporting the RV for warranty service shall be the responsibility of the RV owner.

Damon's obligation to repair or replace defective materials is the sole obligation of Damon under this Limited Warranty. Damon specifically makes no warranty as to the future performance of this RV or any of its materials, components, or parts.

Please inspect your RV at the time of delivery and make sure you accept it as delivered to you. This RV has been sold to an independent dealer, and not an agent of Damon, for resale in the ordinary course of the dealer's business on terms and conditions and equipped as he and you determine, and your agreement is solely with the dealer, not Damon. Damon does not participate in the retail sales agreement other than by the terms of this Limited Warranty.

The RV owner's obligation to notify Damon or one of its authorized, independent dealers of a claimed defect does not replace, alter, or modify the obligations, if any, placed on the RV owner to contact Damon directly when pursuing remedies under applicable state or federal laws. If, after two attempts, any required repair that substantially impairs the value, use or safety of your RV has not been addressed by the authorized Damon dealer, it is the RV owner's responsibility to contact Damon in writing so Damon can become directly involved in performing the repair. Damon may, at its option, request the vehicle be returned to Elkhart, Indiana for repair. If the RV owner refuses to allow repairs to be performed at the Elkhart, Indiana repair facility, the warranty on that repair will be voided.

Damon does not control the scheduling of service work at an authorized repair facility. Delays in scheduling or completion of work may be unavoidable. If you need assistance in obtaining the benefit of this Limited Warranty, please contact Damon at the telephone number below.

WHAT IS NOT COVERED

Chapter 1 - Warranty

This Limited Warranty does not apply to and Damon will not be responsible for the following:

1. Normal wear and usage;
2. Items added or changed after the RV leaves the possession of Damon or any damage caused by these additions or changes;
3. Any RV used for rental or other commercial purposes (a conclusive presumption that your RV has been used for commercial purposes arises if you have taken a business related tax deduction on any federal or state tax return, or it is titled or has been titled to a sole proprietorship, partnership or corporation) ;
4. Minor imperfections, including paint imperfections which do not affect the suitability of the RV for its intended purpose of recreational camping.
5. Damage, even to otherwise warranted components or parts, due to accident, misuse whether or not foreseeable (including failure to maintain and use the RV in accordance with the owner's manual), abuse, hail, earthquake, water or flood, windstorm, lightning, hurricane, other acts of nature, collision, fire, explosion, damage from foreign objects striking the RV, damage or corrosion due to environment, road salt, chemicals, or theft, vandalism or other intervening acts not attributable to Damon;
6. Scratches, dents, chips or defacing of any surface or fabric of this RV not caused by Damon or which constitute normal wear and tear;
7. Wheel alignment, tire wear, or damage due to tire failure or battery failure;
8. Periodic maintenance, including but not limited to re-caulking the body of the RV, tightening screws, adjusting doors, lubricating, cleaning or polishing the RV or chassis, replacement or repair of items as a result of RV use, wear or exposure, such as oil, filters, brake pads, and linings;
9. Minor adjustments such as adjustments to the interior or exterior doors, drawers, latches etc. will be performed by the dealer for the first 90 days of warranty coverage. Thereafter, such adjustments are the owners' responsibility as normal maintenance.
10. Items that are working as designed but you are unhappy with because of the design;
11. Any material, component, or part of the RV that is warranted separately by its manufacturer, including but not limited to tires, batteries, microwave, generator, VCR, CB radio, CD player, DVD player, tape player, radio, speakers, television, home theater, satellite dish, dryer, washer, water pump, converter, inverter, refrigerator, range, hot water heater, stove, LP detector, carbon monoxide detector, smoke detector, furnace, roof air conditioners, dash air conditioner, leveling jack system, and the chassis and other items supplied by the chassis manufacturer. The chassis includes any components of the chassis frame, power train, brake systems, air cleaning system, cooling system, portions of the dash air system, chassis electrical system, gauges, exhaust systems, shocks, struts, and steering system, or any other components supplied by the chassis manufacturer. The written warranty provided by any component manufacturer is a direct responsibility of that manufacturer; please refer to that manufacturer's warranty for any pertinent terms and conditions. Damon makes no warranty as to any of the components separately warranted by another manufacturer; and
12. Damage due to overloading the RV or any of its components.
13. Damon shall not be liable for incidental or consequential damages including, but not limited to, lost wages, lost time, commercial loss, legal expense, payments on any installment loan, towing, vehicle rental or temporary living expenses.

RV OWNER MAINTENANCE AND USE OBLIGATIONS

This RV requires proper care and maintenance by the owner. The accessories and appliances must be properly used. Failure to provide proper care and maintenance or to observe the proper handling and use of accessories and appliances may result in damage to the RV or its components.

It is the responsibility of the owner to take such preventive measures as are necessary to maintain the exterior caulking and sealer of the RV. It is the responsibility of the owner to use reasonable, prudent care to prevent foreseeable secondary damage from rainwater, plumbing leaks, condensation and the natural accumulation of moisture in the RV, such as a delaminated floor; stained upholstery, carpeting, or drapes; mold formation and growth; furniture damage, etc. Mold and mildew are natural growths

given certain environmental conditions and are not covered by the terms and conditions of this Limited Warranty.

Damon will not pay for the cost of repairing or replacing items that are damaged as a result of lack of care, prevention or improper use, nor for damage to other parts of the RV that result from such lack of care, prevention or improper use. By design, these products are not intended or equipped to meet the needs of a permanent or semi-permanent home; therefore, any such use shall void Damon's Limited Warranty.

LIMITATION AND DISCLAIMER OF IMPLIED WARRANTIES

ANY IMPLIED WARRANTY OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, OR OTHER IMPLIED WARRANTIES APPLICABLE TO THIS RV ARE LIMITED TO THE DURATION OF DAMON'S EXPRESS WRITTEN LIMITED WARRANTY OF TWELVE (12) MONTHS OR TWELVE THOUSAND (12,000) MILES, WHICHEVER COMES FIRST; OR IN THE CASE OF THE STEEL OR ALUMINUM FRAME STRUCTURE OF THE ROOF, FRONT AND REAR WALLS AND SIDEWALLS (EXCLUDING SLIDE-OUTS), FOR TWENTY FOUR (24) MONTHS OR 24,000 MILES, WHICHEVER OCCURS FIRST. PERFORMANCE OF REPAIRS OR NEEDED ADJUSTMENTS IS THE EXCLUSIVE REMEDY UNDER THIS WRITTEN LIMITED WARRANTY OR ANY IMPLIED WARRANTY. DAMON SHALL NOT BE

LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, LOST WAGES, LOST TIME, COMMERCIAL LOSS, LEGAL EXPENSE, PAYMENTS ON ANY INSTALLMENT LOAN, TOWING, VEHICLE RENTAL OR TEMPORARY LIVING EXPENSES) RESULTING FROM BREACH OF THIS WRITTEN LIMITED WARRANTY OR ANY IMPLIED WARRANTY.

SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY WILL LAST OR THE EXCLUSION OR LIMITATIONS OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATIONS MAY NOT APPLY TO YOU.

Damon makes no warranty or other representation with respect to the condition of the RV beyond that contained in this warranty. Any opinions or representations contained in any promotional literature with respect to the RV or any other Damon product are strictly the opinion of Damon, and do not constitute a warranty of any kind, including any warranty of performance or quality. No person, including without limitation any independent, authorized dealer, has the authority to enlarge, amend, or modify this Limited Warranty.

JURISDICTION AND APPLICABLE LAW

Exclusive jurisdiction for deciding any claims, demands or causes of action for defects or representations of any nature or damages due from such defects or representations shall be in the courts in the state of manufacture. The laws applicable to any litigation, dispute, mediation, arbitration or any claim whatsoever arising from the sale, purchase or use of the RV shall be those of the state of manufacture. Any action to enforce the terms of Damon's Limited Warranty shall be commenced not more than three (3) months after expiration of the applicable warranty period. Any performance of repairs shall not suspend this three month limitation from expiring. Any performance of repairs after the warranty coverage period has expired, or performance of repairs regarding anything excluded from coverage under this Limited Warranty shall be considered "good will" repairs, and they will not alter the express terms of this limited warranty, or extend the warranty coverage period or this limitation period.

CALIFORNIA ARBITRATION CERTIFICATION PROGRAM

Damon Corporation participates in the Consumer Arbitration Program for Recreation Vehicles (CAP-RV). This third-party dispute resolution program is available, at no charge to you, to settle unresolved warranty disputes for recreation vehicles. This dispute resolution program reviews eligible product and service related complaints involving warranty covered components.

PRODUCTION CHANGES

To find out more about the program, or to request an application/brochure, please call the Arbitration Administration office toll-free 800-279-5343.

For recreation vehicles purchased in the State of California: The CAP-RV program operates as a certified mechanism under the review of the California Arbitration Certification Program. You must utilize the arbitration program before claiming rights conferred by 15 USC section 2310 (Uniform Commercial Code) or Civil Code section 1793.22(b) (Son-Beverly Warranty Act). You are not required to use the program if you choose to seek redress by pursuing rights and remedies not created by those laws.

OWNER RESPONSIBILITY CHECKLIST

THIS LIMITED WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. YOU MAY HAVE OTHER RIGHTS THAT VARY FROM STATE TO STATE.

BATTERIES

Damon reserves the right to make changes in Vehicles built and/or sold by it at any time without incurring any obligations to make the same or similar changes on Vehicles previously built and/or sold by Damon.

As the proud owner of a Damon Motor Coach, you want to trust that your unit will continue to perform at its peak. To ensure this Damon has provided you this checklist of the responsibilities of the Damon owner. Please make sure that this list is carefully observed and adhered to in order to maintain your Limited Warranty.



BATTERY REPLACEMENT

Please refer to the Maintenance Schedule (p. 71) to determine when your inspections should take place.

CONDENSATION

Check both house batteries and chassis battery and tighten connections if necessary. Clean the terminals if necessary. Check to make sure that the batteries have the proper water levels in them, and fill if necessary. Check the charge and recharge if necessary. Keep connections clean and covered with a light coat of grease.

There is a certain danger involved when working with batteries. If you are unfamiliar with these dangers, contact a Damon dealer.

Just as in your home, it is the owner's responsibility to periodically check the batteries in the smoke detector, LP detector and carbon monoxide detector when applicable. We recommend that you change the batteries every six months to ensure proper working order.

The owner is responsible for checking to ensure that the vehicle has as little condensation in it as possible. The condensation in a motorhome is much greater than in most houses because the insulated walls of the vehicle are much thinner than house walls, and the small size and tight construction of the vehicle allow a quick buildup of high moisture levels in the inside air.

This can be reduced by always keeping the bathroom door closed and the window or vents open when bathing, and for a period of time when you have finished bathing to allow for dissipation of all the moisture. Use your vent hood and fan when cooking. Don't hang wet clothes in your unit to dry. When left for prolonged periods of time, condensation can cause considerable damage to your vehicle.

Most exterior parts of your motorhome are made of fiberglass, which is a very durable material, but not indestructible. Exposure to the elements can cause premature deterioration without routine maintenance, especially in hotter climates. The effects may be; fading, yellowing, or chalking, however these are surface cosmetic changes, which do not affect the strength of your unit. Simple maintenance through cleaning by washing and waxing will ensure lasting beauty.

The same fading may occur to carpeting and upholstery. Be sure to keep your shades down in extremely sunny locations and maintain proper cleaning techniques for both carpet and upholstery.

The front suspension and steering system of this vehicle was factory aligned using highly accurate equipment prior to delivery to the dealership. We recommend that the alignment is checked after you have fully loaded the motorhome according to your personal needs. If necessary, adjust alignment for the loaded motorhome. Thereafter, the alignment should be inspected yearly to help prevent uneven tire wear.

Sanitize the fresh water system at least once per year or whenever the motorhome is unused for prolonged periods of time (see p. 26). This will help keep your water system fresh and discourage the growth of bacteria that can contaminate the water supply. Make sure that the tanks are properly treated with the right chemicals for disinfection.

Your motorhome is built to withstand a certain maximum load. Check the amount listed on the Federal Certification Label in the driver's area of your motorhome to determine safe load limits. NEVER OVERLOAD THE MOTORHOME. Reference pages 11, 16 and 17 for proper loading and weight distribution.

**EXTERIOR/
INTERIOR**

**FRONT END
ALIGNMENT**

POTABLE TANK

**PROPER LOAD
BALANCE**

SEALANTS

SERVICE CALLS

**SLIDE OUT
LUBRICATION**

Weatherproofing sealants are used around the doors, windows, vents, and joints during construction of your motorhome. These sealants are subject to the same deterioration from exposure as the fiberglass components, and must be checked periodically to assure the weatherproof integrity of your unit. If evidence of cracking or voids in the sealants is apparent, have your dealer reseal these areas. Proper sealant coverage should be checked and resealed at least once every six months. Please see Chapter 9 - "Care and Maintenance" for instructions on properly sealing the roof area. Failure or neglect of proper sealant maintenance could result in leakage, and may reduce or void your warranty protection.

STEP LUBRICATION

TIRE PRESSURE

TRAVEL BARS

It is important that the owner realize that Damon's Limited Warranty covers warrantable repairs that are performed by an authorized Damon dealer at their service center or facility only. If you are unable to bring your unit in for repairs, Damon is not responsible for the cost of the actual service call charged to come out to your unit.

WINDSHIELDS

If your slide-out system becomes squeaky or makes any noises while operating, it is permissible to apply a coat of lightweight oil to the drive shaft and roller areas located below the main floor. Remove any excess oil so dirt and debris cannot build up.

WINTERIZATION

To maintain the integrity of the retractable step in your motorhome, you must periodically inspect it for rust or damage, also see that it is lubricated to function safely and to ensure proper working order.

The owner is responsible for maintaining proper tire pressure in the vehicle's tires. Check the tire specifications on the Federal Certification Label located in the driver's area for the proper pressure. You will ensure optimum driving standards by keeping your vehicle maintained.

Damon Corporation
Customer Service Department
PO Box 2888
Elkhart IN USA, 46515-2888
(574) 264-2900

Chapter 2 - Planning and Preparation

A thorough working knowledge of your motorhome is important if you are going to get the most out of the convenience and safety items built into your unit. Be as familiar with it as you are with your personal car or truck. Study all the booklets included in your Owner's Information Kit. These booklets cover details of operation for the major appliances and equipment built into your motorhome for your comfort, convenience and safety. Your selling dealer should provide you with a complete walk through of your vehicle at the time of purchase. Any questions and concerns should be addressed at that time.

The vehicle licensing laws vary from state-to-state. Check with your state license bureau or nearest branch office for the requirements of your state. Be sure to renew your license if it has expired or will expire during your trip. Your motorhome is considerably larger and heavier than your car, therefore certain precautions should be exercised. A CDL license may not be required to operate your motorhome, but Damon Motor Coach recommends you attend a CDL class to better understand the motorhomes driving and handling characteristics. Damon Motor Coach wants your driving experience to be pleasant and enjoyable.

Talk to your insurance agent about the appropriate coverages for your motorhome. Always carry your policy card.

Follow a consistent schedule of inspection and maintenance for your motorhome. Your continuing safety and comfort depend on it. This manual includes recommended maintenance intervals and instructions. Adherence to these schedules will minimize the possibility of failure of any important system or part of your motorhome. The time spent inspecting and maintaining your motorhome will provide you with many years of recreational pleasure. Improper inspections or maintenance neglect may invalidate your Limited Warranty.

Proper loading is one of the most important considerations when traveling in a motorhome. Your motorhome is built to withstand a certain maximum load. Check the Federal Certification Label located in the driver's area to determine the safe load limits. For safety's sake, NEVER OVERLOAD THE MOTORHOME. This chapter contains information about proper loading and weighing of your motorhome.

Know how to control your motorhome on the highway. Be familiar with passing and stopping requirements, and problems that can develop. Know how to brake properly, how to back up and how to turn. Practice in a secluded place until you become familiar with the handling characteristics and techniques of your motorhome. Don't overlook the laws of your state that govern driving a motorhome. Your state Motor Vehicle Department office can provide you with the applicable vehicle codes that spell out your rights and responsibilities as a motorhome owner.

READ THE BOOK

LICENSES

INSURANCE

INSPECT AND MAINTAIN

LOADING AND WEIGHT DISTRIBUTION

CONTROL OF THE MOTORHOME

Chapter 2 - Planning and Preparation

PRE-TRAVEL CHECK

Whenever you depart, be it from your home, rest area, or campsite. You should perform these pre-travel checks:

TIRES

Should be inspected before each trip for uneven wear, road damage, foreign objects, peeling or bulging, and correct tire pressure. Heat generated by surface friction will increase the tire's air pressure, therefore do not bleed air out of a hot tire. Check tire pressure after the vehicle has been parked for at least one hour. Inflate tires to recommended pressure as indicated on the Federal Certification Label located above the Drivers area. (See maintenance schedule on page 71.)



Proper tire inflation is extremely important.



When purchasing a new tire, be certain it is the same size and has same ply rating and load range as the original tire. ply with bias or bias-belted tires.

WHEEL LUGS

Must be tightened to the specifications in the Chassis Manufacturer's Owner's Manual.

WINDSHIELD

Should be clean, wiper blades inspected, and windshield washer reservoir filled.

LIGHTS

Should be tested, including brake lights, warning flashers, clearance lights, tail lights, turn signals and headlights. Clean all lens covers.

REARVIEW MIRRORS

Should be adjusted so the driver can see to the rear on both the right and left side of the unit.

POWER CORD

(120 Volt shoreline) must be unplugged from the external source and properly stored for transit, also making sure the cord hatch is secured.

WATER FILL

Hoses must be disconnected, properly drained and stored, and the caps and hatches secured. Fill the fresh water tank as required prior to storing hoses.

SEWAGE

Should be emptied from the holding tanks before traveling. Termination valves must be closed and locked. The sewer hose must be removed from the termination valve outlet and stored. Termination cap must be securely fastened to the termination outlet.

ENTRY STEP

Must be returned to its travel position. Pay special attention to this every time you move your unit. Severe damage may result if not retracted during transit.

LP GAS TANK

Levels at the monitor panel should be checked, and gas line connections should be checked for leaks.



Some states prohibit vehicles equipped with LP gas tanks from using tunnels. A few other states prohibit traveling with the service valve open and the pilot lights lit. Check the regulations of the states through which you intend to travel.

Should be closed and secured. Loose items should be secured or stored away.



Be sure all loose items are secured or properly stored while the vehicle is in motion. Possible overlooked items may include canned goods, small appliances (on countertop), cooking pans (on range), or free standing furniture. These items could become dangerous projectiles during a sudden stop.

For storage and equipment should be closed and locked, also making sure that loose items are secured or stored for transit.

Door should be secured with the travel latch, and the items inside made ready for transit.

Should be closed and secured or adjusted as desired.

If the motorhome was properly and carefully prepared for storage, taking it out of storage will not be difficult. The following checklist assumes that you stored your RV with care. If you didn't, and extensive freeze damage or other serious deterioration has occurred, consult your dealer or an authorized service center for advice.

- ☐ Thoroughly inspect the outside of your RV. Look for animal's nests in wheel wells, in engine, air cleaner, or in other out of the way places. Clean all appliance exhaust vents, ceiling vents and air conditioning covers.
- ☐ Changing the wiper blades on your motorhome is similar to your car. Remove the screw, take off the old blade, and replace with a similar style and length blade. Lubricating pivot points with thin lubricating oil is also recommended.
- ☐ Check that all furnace, water heater and refrigerator openings are free of debris, insect nests, webs, etc.
- ☐ Open all doors and compartments. Check for animal or insect intrusion, water damage, or other deterioration.
- ☐ Check charge level in batteries. Refill with distilled water and recharge if necessary. Reinstall batteries if necessary. Be sure cable ends and terminals are clean and free of corrosion. Turn the Battery Disconnect Switch off if applicable.
- ☐ Check tire pressure. Inflate to the specified cold pressure.
- ☐ Remove coverings from windows if necessary.
- ☐ Open vents and windows for ventilation.
- ☐ Drain, flush and sanitize the fresh water system. (see Chapter 5 - "Plumbing Systems") Inspect drain lines for leaks. Replace if necessary. Do not try to repair, as this is usually ineffective.
- ☐ Install a new water filter (if your unit is equipped with this).
- ☐ Operate all faucets and fixtures in the fresh water system. Check for leaks at all joints and fittings. Repair if necessary.

DOORS AND DRAWERS


COMPARTMENT DOORS

REFRIGERATOR DOOR

WINDOWS AND VENTS

OPENING CHECKLIST

Lubricate Pivot Points

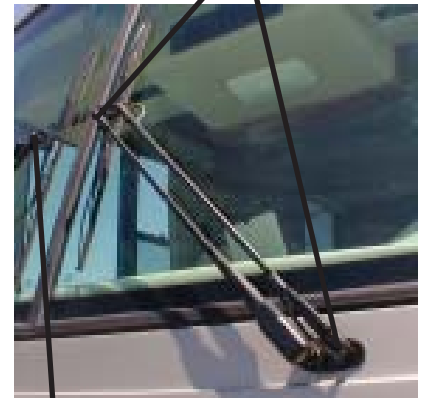

Remove Screw to Replace Blades.

Chapter 2 - Planning and Preparation

- ☐ Check 12 Volt circuit breakers and inspect all fuses.
- ☐ Operate all 12 Volt lights and accessories.
- ☐ Install new batteries in battery operated devices.
- ☐ Test LP gas, smoke and carbon monoxide detectors. Replace the batteries if necessary.
- ☐ Check the monitor panel operation.
- ☐ Open and operate all vents and vent fans. Remove any outside coverings if applicable.
- ☐ Inspect 120 Volt electrical system which includes power cord, converter, all outlets and exposed wiring. If defects are found, consult your servicing dealer or an authorized service center.
- ☐ Operate 120 Volt appliances and air conditioner(s). Be sure to uncover air conditioner shroud(s).
- ☐ Inspect the LP gas system and check for leaks. If LP tank shows signs of rust or corrosion, have it inspected by a qualified LP technician. Refill if necessary.
- ☐ Operate each LP gas appliance. Observe all burner/pilot flames for proper color and size.
- ☐ If necessary, have LP gas regulator adjusted for proper pressure by a qualified technician.
- ☐ Check sealants around all roof and body seams and windows. Reseal if necessary.
- ☐ Lubricate all exterior locks, hinges, and latches.
- ☐ Wash and wax exterior. Inspect body for scratches or other damage. Touch up or repair as necessary. Flush underside of the motorhome thoroughly.
- ☐ Check all the chassis fluid levels including engine oil, coolant, power steering fluid, brake fluid, transmission, rear axle oil and washer fluid. Top off if necessary.
- ☐ Check windshield wiper blades. Replace if necessary.
- ☐ Check all exterior lights; clearance, brake, turn, and reverse should be fully functional.

Your motorhome should be ready for a new traveling season. Your dealer can check your preparation and correct any defects or make any necessary adjustments.

These items are the absolute minimum requirements necessary for pre-travel.

A motorhome chassis (springs, wheels, tires, axles, and frame) is designed to carry a certain maximum load. This load includes everything; the weight of the empty motorhome itself, occupants, your belongings, fuel, fresh water, waste water and anything else that may be in or attached to the motorhome.

The Federal Certification Label, found in the driver's area, is installed in the vehicle as required by federal standards. It contains information that will be helpful in determining proper loading. The label will also list the date of manufacture, (GCWR), (GVWR), (GAWR) (Front and Rear), tire size, rim size, tire pressure (PSI), Vehicle Identification Number (VIN), and the type of unit.

WEIGHTS

FEDERAL CERTIFICATION LABEL



The RVIA Weight Label, found in the kitchen area, is installed in the vehicle as required by RVIA standards. It contains information that will be helpful in determining proper loading. The label will also list the Vehicle Identification Number (VIN), Gross Vehicle Weight Rating (GVWR), Unloaded Vehicle Weight (UVW), Sleeping Capacity Weight Rating (SCWR), and the Cargo Carrying Capacity (CCC).

GROSS VEHICLE WEIGHT RATING (GVWR) is the maximum permissible weight of this fully loaded motorhome.

UNLOADED VEHICLE WEIGHT (UVW) is the weight of this motorhome as manufactured at the factory with full fuel, engine oil and coolants.

SLEEPING CAPACITY WEIGHT RATING (SCWR) is the manufacturer's designated number of sleeping positions multiplied by 154 lbs.

CARGO CARRYING CAPACITY (CCC) is equal to GVWR minus each of the following: UVW, full fresh (potable) water weight (including water heater), full LP-Gas weight and the SCWR.



Dealer installed equipment and towed vehicle tongue weight will reduce CCC.

GROSS AXLE WEIGHT RATING (GAWR) is the maximum weight a specific axle is designed to carry. Each axle has its own GAWR.

These ratings are shown on the RVIA Weight Label. They are the **MAXIMUMS** for a fully loaded vehicle. You must compare the GVWR and the GAWR to the actual loaded weight of your motorhome and make adjustments if necessary. (See page 16) The GAWRs do not necessarily add up to the GVWR.

Neither the axle loads nor the vehicle loads must ever exceed their respective maximum weight ratings.



It is safer and easier to drive. Distribute your cargo evenly from side-to-side and front-to-back. Heavier items should be stowed on or near the floor and be as centrally located as possible. They should be secured so they cannot slide during a panic stop causing damage. Lighter items can be stored in overhead cabinets. Remember to leave space and weight allowance for souvenirs and other items you may purchase during your travels. A properly loaded vehicle can help you conserve fuel and prevent excessive wear on your vehicle's automotive system.

During the design and development of your motorhome, the number and size of storage compartments, the liquid tank capacities and the number of Designated Seating Positions are maximized for value and convenience. If the motorhome operator fills all liquid tanks to capacity, fills all storage compartments and cupboards to maximum volume and fills all available, as-



WEIGHT RATINGS

CAPACITY

Chapter 2 - Planning and Preparation

WEIGHING YOUR LOADED MOTORHOME



Reading 1



Reading 2



Reading 3

signed seating positions with passengers, the motorhome could be overloaded. Please use the Recreational Vehicle Industry Association's figures shown below to help you to determine your weights.

- Average vehicle occupant = 154 pounds
- One gallon diesel fuel = 6 lbs
- One gallon of water = 8.3 lbs
- One gallon of LP gas = 4.2 lbs

The operator is responsible for analyzing the conditions in which the motorhome will be utilized for each trip. The number of passengers and placement of cargo can affect the amount of water capacity that you carry. A smaller passenger capacity for camping provides reasonable cargo capacity for trips taking more than one day. A larger passenger capacity for day use provides less cargo capacity for trips or activities not involving overnight stays. It may be necessary to reduce the amount of water carried and unload some cargo items normally carried for camping in order to provide carrying capacity for the additional day use passengers.

1. Drive the front wheels onto the scale platform and take a reading. This is the front Gross Axle Weight. (Reading 1).
2. Drive the entire vehicle (all axles) onto the scale and take a reading. This is the Gross Vehicle Weight. (Reading 2).
3. Drive forward until only the rear axle is on the platform and take a reading. This reading is the rear Gross Axle Weight. (Reading 3).
4. Compare reading 2 with the GVWR (Gross Vehicle Weight Rating) of your vehicle located on the Federal Certification Label. If the reading exceeds the GVWR rating, you will have to reduce the total vehicle load.
5. Check readings 1 and 3 to verify that each is less than the GAWR (Gross Axle Weight Rating) on the certification label. If either exceeds the GAWR for the axle(s), redistribute enough of the load to ensure that loads on the front and rear axle(s) are within the required limit.

Do not exceed the gross axle weight ratings of any axle.

Do not exceed the maximum hitch weight rating.



Do not exceed the gross vehicle weight rating of either the motorhome or the towed vehicle. Do not exceed the gross combined weight rating of the motorhome. Exceeding any of these ratings may cause unstable driving and handling characteristics, damage to your motorhome chassis or towed vehicle and may void your warranty protection.

GROSS COMBINED WEIGHT RATING (GCWR): is the maximum loaded weight of this motorhome and any towed trailer or towed vehicle. See the

chart located on the Federal Certification Label located in the driver's area to determine the GCWR rate for your vehicle.

GROSS COMBINED WEIGHT (GCW): is the total weight (including driver, passengers, all cargo, fuels, and fluids) of the motorhome and the towed vehicle combined. Compare the GCW with the GCWR. If the GCW is greater than the GCWR, then weight must be eliminated until scale weights are equal to or less than the proper ratings.

The distribution of weight in your motorhome is a very important factor. Too much weight either on one side of the vehicle or too much weight in the rear compared to the front can adversely affect the handling characteristics of the vehicle, and in some cases can result in overloading the tires or axle components. When loading, you should evenly distribute the weight to ensure the axle weight is equal to or less than GAWR (Gross Axle Weight Rating) indicated on your Federal Certification Label.

This type of balance provides the best handling characteristics of the vehicle. Small percentage differences will not make a great deal of difference. A unit that is too light on the front axle and too heavy on the rear axle can result in steering difficulties.

By knowing what your vehicle weighs, you can determine the best location for your belongings. Simply because you can fit everything in one compartment for easy access, does not mean that this is the best place for an item. Your home is now moving down the road, so the little things like location of heavy items become important from more than an accessibility standpoint.

If you expect to pull a vehicle or trailer with your motorhome, please use these guidelines when choosing a vehicle or trailer:

- ◆ Do not load over the weight indicated on the label on the hitch.
 - ◆ Hitch Classification: Class III and IV = See the label on the hitch to find your maximum hitch weight and towing weight.
 - ◆ Vehicle/Trailer weight: Do not tow a vehicle/trailer weight more than recommended by the class rating of your hitch, or more than recommended by the chassis manufacturer, whichever is less.
- The motorhomes braking system is rated for operation at the total GVWR (Gross Vehicle Weight Rating) of the motorhome.


For your safety, Damon Corporation recommends that a separate functional braking system be used on any towed trailer or vehicle, including those dolly towed or towbar towed.



When towing a vehicle or trailer with your motorhome, the tongue weight must not exceed the maximum allowed hitch weight. The Gross Combined Vehicle Weight must not exceed the GCWR (Gross Combined Weight Rating)

WEIGHT DISTRIBUTION

TRAILER HITCHES AND TOWING

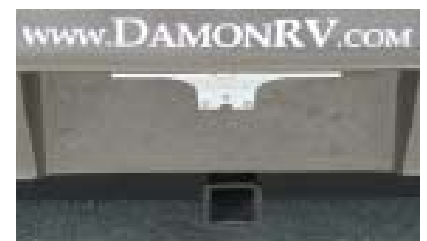

Chapter 2 - Planning and Preparation

TOWING VEHICLES AND TRAILERS

of your chassis. To determine how much weight your motorhome can tow, have your vehicle weighed when it is properly loaded, as you would have it when you are ready to depart for your trip. Subtract this total weight from the GCWR (Gross Combined Weight Rating) weight on your Federal Weight Label. This difference is the total amount that you may safely tow behind your motorhome.

**This Combined Vehicle Weight cannot
exceed your Motorhomes specific GCWR.**



GVWR of 26,850 lbs. and your unit weighs 23,043 lbs.:

GVWR= 26,850 lbs.

Subtract Unit weight= 23,043 lbs.

3,807 lbs. Available for cargo in the
motorhome providing you DO

NOT overload the individual
GAWR's.

Example: If you have a GCWR of 31,850 lbs. and your unit is fully loaded to its maximum GVWR of 26,850 lbs.:

GCWR= 31,850 lbs.

GVWRi= 26,850 lbs.

5,000 lbs. Available to tow a vehicle or
trailer behind the motorhome.

This will be the MAXIMUM
weight your unit is certified by
the chassis manufacturer to
safely pull. DO NOT exceed the
ratings of the label on the hitch
or the GCWR of the chassis.

Chapter 3 - On the Road Safety

Seat belts are an important safety feature of your vehicle. Each designated seat is designed to carry passengers while the vehicle is in motion. Each Designated Seating Position is equipped with either a type 1 (lap belt) or a type 2. (shoulder and lap belt) The number of seats equipped with seat belts is to provide a choice of seating locations. This does not necessarily mean that you may safely carry that many passengers. Refer to "Cargo Carrying Capacity" (page 15) in the loading section for proper loading techniques.

To adjust your seat belt:

- Pivot the buckle at a right angle to the belt and pull to the desired length.
- Make sure the belt is not twisted, and press the tongue end into the buckle end. Be sure the two are latched together, and adjust the belt snugly around your abdomen.
- To release, simply depress the button on the buckle and remove the tongue.

Child restraint seats may be used with the lap belts provided. Check the restraint seat instructions for proper installation and adjusting. Child restraint seats are required to a certain age. Check with the states in which you will be traveling for the proper age requirements.



While the motorhome is in motion, passengers should be seated with seat belts fastened. Do not allow passengers to occupy any position that is not equipped with a seat belt.

Use only recommended fuel as specified by the chassis manufacturer. Do not overfill the fuel tank, but allow for expansion of fuel (caused by rising temperatures) by stopping the filling process when the pump automatically shuts off.



Modern fuel systems may build up vapor pressure within the tank as the fuel warms during use, or in hot weather. Under certain conditions, sudden release of this pressure when the filler cap can spray fuel from the opening, causing a possible hazard. When removing the filler cap, rotate it slowly, only far enough to allow pressure to release. After any hissing sounds die down, complete the removal of the cap. To protect the gasoline system from excessive pressure or vacuum, or from sudden release of pressure, replace lost caps with caps of the same design available from your motorhome dealer.

When driving your motorhome, your driving a large vehicle, and you should become accustomed to the feel of the controls and the reference points from the driver's seat. Become familiar with the position of the motorhome in traffic, and be cautious while maneuvering to allow for the length and width of the vehicle. Always allow extra room to corner and to change lanes. Learn to use the side mirrors to view the road behind. Check them often.

Drive with consideration on the highway, observing all speed and safety regulations.

SAFETY BELTS

FUEL SYSTEM

DRIVING

lations. The best cruising speed of your motorhome will vary with road and weather conditions.

Remember that your motorhome is heavier than a car, making it less maneuverable and harder to stop. Brake pedal pressure and travel may vary significantly from that of a car. Be prepared to brake earlier than you normally would a car. Also, because of its greater side surface area, it is more easily affected by cross winds. Allow extra distances for passing and stopping, and drive at a moderate speed, particularly in traffic and in gusty wind conditions.

Driving on winding or mountain roads is not difficult if done with reasonable care. Observe proper vehicle speeds when ascending or descending hills and always operate in the proper transmission range. Downshift on hills to avoid overheating or undue engine loads. Downshift before descending grades. Engine braking power will help control vehicle speed (see Engine Brake Switch page 44), and relieve some of the strain on the brakes.

Road conditions, terrain, weather, and other driving factors are sometimes unpredictable, and mountain driving or desert temperatures can put extreme demands on drive train components, especially the transmission. Under extreme heat conditions you may need to turn off the vehicle air conditioner to improve engine and transmission cooling.

Allow for the extra height of your motorhome and avoid areas having low overhead clearance. Check for low hanging tree branches or other obstructions wherever you drive or park. Avoid low roof heights when pulling in for service. This may be particularly important if you drive with the overhead vents open or if the motorhome is equipped with a roof air conditioner, roof rack, or TV/radio antenna. Check the total height for your particular motorhome and make sure that you are aware of it when driving under bridges or underpasses.

PARKING

When parking parallel to a curb, be sure to allow for poles or obstructions as the front and rear portions of the motorhome will swing wider than an automobile. Remember that your motorhome is larger than your automobile and will require more space. Be careful your unit does not occupy road space or block driveways while parking. When parking on an incline, turn the front wheels into the curb in the direction of the roll to aid the parking brake. Always set the parking brake when parking.

CHANGING TIRES

Changing a tire on a motorhome is more difficult than an ordinary automobile. Motorhome tires are larger and heavier than ordinary tires. Whenever possible, call for roadside assistance to help you in changing your tires. This task should not be done alone due to the weight of the unit. Motorhomes are extremely heavy. Changing a flat tire is best left to a professional mechanic with the proper equipment.

If absolutely necessary, change the tire on a level and firm surface. If you are on the roadside, activate the vehicle's hazard warning flashers. Apply the parking brake. Set

up flares and or warning lights. See the chassis manufacturer's owner's manual for specific jacking and tire removal, and replacement instructions, which pertain to your unit. Lug nuts vary from chassis to chassis, and the GVW (Gross Vehicle Weight) of your motorhome. (See Chassis Owner's Manual for specific instructions on tightening lug nuts). After operating 50-100 miles, retighten to the same specification. If you don't have proper equipment, stop at the nearest service facility and have the torque of the lug nuts checked.

Never place the jack under a bumper or under the edge of the sidewall.

Always place the jack as specified by the chassis owner's

manual.

Never use the rear differential as a jacking point.

CAUTION When changing tires. NEVER get underneath the vehicle when using the jack; never get under the vehicle when the vehicle is on the jack.

The most important factor in maximizing the life of your tires is maintaining proper inflation pressure. An under inflated tire will build up excessive heat that may go beyond the prescribed limits of endurance of the rubber and the radial cords. Over inflation will reduce the tire's footprint on the road, reducing the traction, braking capacity, and handling of your vehicle. An over inflated tire will also cause a harsh ride and uneven tire wear.

To determine the correct air pressure for your tires, load your motorhome as you would normally for travel, including water and fuel. Determine the correct air pressure for the weight on each axle and adjust the pressure according to the Federal Certification Label when the tires are cool or have not been driven for more than one mile. Never reduce the air pressure in a hot tire.

Never let air out of a hot tire.



Now that you have found what the correct air pressure per axle needs to be for your motorhome when loaded, you need to know when to check your air pressure. You should check the air pressure every two weeks or at least once a month and before any major trip. Your motorhome's air pressure should be checked every morning on long trips. On short trips of a day or less of driving each way, your tires should be checked before you start your trip home. If your vehicle is stored for any length of time, the air pressure should be checked prior to storage, but more importantly, when it comes out of storage.

Check your tires when they are "cold" and have not been driven for more than one mile. The stated load capacity for a given cold inflation pressure is based on ambient outside temperature.

To maintain the inflation pressure in your tires you will need the proper equipment. It is recommended that you purchase a quality truck tire air gauge, which has

TIRE CARE

CHECK AIR PRESSURE

Chapter 3 - On the Road Safety



an angled dual head. This type of gauge allows you to check inflation on the inner dual wheel which has the valve stem pointed away from you. Nothing should restrict your ability to check your tire's air pressure daily when you are driving your motorhome. Pressure sealing valve caps should always be used to prevent air from escaping from the valve stem. If you use valve stem extension hoses, make sure they are good quality stainless steel braid reinforced, and are securely anchored to the outer wheel. If your motorhome has wheel covers which must be removed to check the inflation, then consider removing them as the extra time and effort required may lead you to avoid checking your pressure.

When replacing your tires always make sure the proper size and rating is used. Check the federal certificate located in the drivers area for your model's specific size and the rating.



cerns with the weight and size of spare tires, Damon does not equip diesel pusher RV's with a spare tire.

In a sudden stop or collision, loose equipment could strike someone. Storing a jack, a tire, or other equipment in the passenger compartment of the vehicle could cause injury. Store and these items in a proper place.



Damon does not provide jacks with our motorhomes.



Chapter 4 - Safety Provisions

Your motorhome has been supplied with various safety features and equipment for your convenience and for safe operation. As with all areas in life, the chance for accidents is possible, and the recreational life-style is no exception. Please take the time to familiarize yourself with the safety features of your motorhome now to prevent any question of how they are used if an emergency should arise.

Please refer to the smoke detector manual in the Owner's Information Kit for operating instructions.



Test smoke detector operation after vehicle has been in storage, before each trip, and at least once per week during use. Replace battery every six months.



The motorhome should never be operated or occupied unless the smoke detector is present and functioning properly.

Each motorhome is equipped with a portable fire extinguisher mounted close to the main entry door. This fire extinguisher is rated for Class B (gasoline, grease, flammable liquids) and Class C (electrical) fires. Test your extinguisher as recommended by the fire extinguisher manufacturer, and replace after use. Be familiar with your fire extinguisher location and its operation.

An LP gas detector, located near the floor in the galley area, will sense the presence of LP gas leakage. The leak detector will sound an alarm if LP gas is detected. Test the leak detector weekly.

The LP detector gets its power from one of the circuits in the load center. Because these circuits are on the load side of the battery-disconnect, the LP detector will be disabled (along with all other 12 Volt house powered devices) when shore power is removed and the battery disconnect is in the storage mode. While this is ideal when your coach is in storage and the LP system is shutdown, there will be no warning if this should happen while camping and an LP leak occurs. To warn you of this possible hazard, a label is located near the LP gas leak detector.



The LP gas detector is operated by the 12 Volt house wiring and will be disabled when batteries are in the storage mode and shore power is removed.



The motorhome should never be operated or occupied unless the LP gas detector is present and functioning properly.

A carbon monoxide detector is installed in each vehicle. It is usually located on the

SMOKE DETECTOR



FIRE EXTINGUISHER



LP GAS DETECTOR



CO DETECTOR



CO SAFETY PRECAUTIONS

bedroom or hall wall about five feet from the floor. Test it before every trip to ensure that it is functioning properly.

Carbon monoxide is a colorless, tasteless, odorless gas. It is a by-product of combustion in the engine, generator and LP appliances. The engines in your motorhome and generator system produce it constantly while they are running. CARBON MONOXIDE IS DEADLY. Please read and understand the following precautions to protect yourself and others from the effects of carbon monoxide poisoning.

Exhaust gases are deadly. Do not block the tail pipe or situate your vehicle or LP appliance exhaust systems in a place where the exhaust gases have any possibility of accumulating either inside your vehicle or any nearby vehicles. Outside air movements inside the vehicle through windows or other openings remote from the exhaust outlet. Operate the engine only when safe dispersion of exhaust gases can be assured.



The motorhome should never be operated or occupied unless the CO Detector is present and functioning properly.



Do not under any circumstances operate the vehicle or generator engine while sleeping.



The detector is installed without batteries. To install the batteries, press the tab at the top of the CO detector and slide the detector upwards. Open the battery compartment door by hinging the left lower side downward. This exposes the battery compartment. Install the batteries as indicated. The detector should beep indicating correct installation. Reverse the above procedure to reinstall the detector. Test the detector before you start every trip.

BATTERY INSTALLATION

LIGHTING APPLIANCES

When lighting your LP gas appliances for the first time, or after refueling the LP gas tank, trapped air will need to be purged from the system which could take a few seconds or a few minutes, depending on the distance of the appliance from the tank. Follow the appliance manufacturer's lighting and operating instructions found in the Owner's Information Kit. Be sure that the water heater has water in it prior to igniting.

Every sleeping area in your recreational vehicle is provided with exits. These exits are either in the form of an exit window (which will be labeled EXIT in red letters) or the main entry door, which is not labeled, serves as an exit. The exit window handles will also be red in color. Lift the handles and push the window open to exit. Make sure all occupants are aware of the exit locations and their operation.

EXIT LOCATIONS



Chapter 5 - Plumbing Systems

Your motorhome is self contained, able to carry fresh water in the potable storage tank and hold the wastewater in dual holding tanks for dumping when convenient. Water connections are also available for a city water hose hookup to an external pressurized water source.

The fresh water storage tank supplies potable water to all fixtures within your motorhome by means of a 12 Volt water pump. This pump is located close to the storage tank and is equipped with a check valve that ensures directional flow away from the tank. The pump has an on/off switch, which is located on the monitor panel, bathroom, or termination compartment. The pump will automatically build up pressure and maintain that pressure when turned on. The pump should be turned off when the fresh water tank is empty or when the motorhome will not be in use. Continued operation with a dry tank may damage the pump. Your pump has a filter on the inlet side. This filter should be cleaned after each tankful of water for the first few uses. To remove the cover press in firmly and twist counterclockwise about one eighth turn. Pull the screen out of the bowl and rinse clean. Reassemble in the reverse fashion. For more information check your water pump Owner's Manual located in your Owner's Information Kit.

The fresh water tank can be filled by an external hose through the potable water fill located outside your unit. To fill, make sure that the tank and low point drains are closed. Simply connect the external hose directly to the receptacle labeled "Potable Water" on the outside of your motorhome. Turn on the external water source and the tank will fill up. Check the monitor panel while filling the tank to determine how full the tank is. When full, water may spill back out through the inlet or vent. There is no automatic shut-off for the fresh water tank fill. When completely filling the tank to maximum water capacity, fill all water lines and the water heater as well. When possible, traveling with an empty fresh water tank will provide for more cargo carrying capacity and better gas mileage.

If you choose to use city water directly for your water source, simply attach the external hose to the inlet labeled "City Water" located in the termination compartment of your motorhome. Now you have a pressurized water supply from the motorhome park or city water supply hookup. The same water lines are utilized as with the fresh water storage tank and pump; however, the pump's check valve bypasses both the pump and the fresh water tank. Turn on the water supply and open faucets to purge any air trapped in the water system.



Some water sources develop high water pressure, particularly in mountainous regions. These campgrounds or hookup locations may not have regulated water pressure, which could be considered excessive. High pressure is anything over 55 psi. Excessive pressure may cause leaks or damage to your water system. Water pressure regulators are available to protect the water system against high pressures. Check with your dealer for recommendations of water pressure regulators.

Low point drains are located either in the holding tank compartment or in a rear

FRESH WATER SYSTEM

FILTER/WATER PUMP



FRESH WATER FILL



CITY WATER HOOK-UP



Chapter 5 - Plumbing Systems

LOW POINT DRAINS



SANITIZING THE SYSTEM

storage compartment on the driver's side of the coach. These drains are used when the system is to be completely cleared of water.

You should sanitize and disinfect the fresh water system upon delivery of the unit and at least once per year or whenever the motorhome is unused for prolonged periods of time. This will help keep your water system fresh and discourage the growth of viral and bacterial contamination, which may be contained in your water supply. Use a chlorine and fresh water rinse as follows:

1. Drain the fresh water tank by opening the drain valve. All of the faucets should be in the closed or off position.
2. Prepare a solution of 1/4 cup household liquid chlorine bleach (5% sodium hypochlorite) to one gallon of water for every 15 gallons of tank capacity. Do not pour bleach straight into tank. Bleach must be diluted in water prior to filling.

Example: Add 6 - 2/3 gallons solution to a 100 gallon tank.

This mixture puts a 50 PPM (parts per million) residual chlorine concentration in the motorhome's water tank. This will act as quick-kill dosage for some harmful bacteria, viruses, and slime-forming organisms. Concentrations higher than 50 PPM may damage water lines and/or tank.

3. Close all faucets and drains, and fill the fresh water tank with the rinse solution through the potable water fill.
4. Turn on the pump switch and circulate the rinse solution throughout the entire system.
5. Once the rinse solution has been circulated through the entire system, fill the fresh water tank until it is full.
6. Close all faucets and drains and let the system sit for approximately three (3) hours.
7. Drain the entire system.
8. Flush the complete system with fresh water until chlorine odor disappears.
9. Finally, close all drains and fill the fresh water tank as you normally would. Make sure the water heater has water in it prior to igniting.

**Chlorine is poisonous. Recap bottle and clean any
neces used with soap and water.**



WASTE WATER SYSTEM

The waste water system is comprised of dual holding tanks with individual termination valves. The holding (solid waste) tank as indicated on your monitor panel, collects all the waste material from the toilet. The gray water tank collects all of the liquid waste material from the sinks, drains, and showers. Both tanks are joined together after the termination valve to provide a single termination outlet for convenient dumping of waste materials. A flexible sewer hose is required to make the connection between your unit's termination valve and the approved dump station inlet.

The drainage system is very similar to that of your home. The system is trapped and

vented to prevent waste gases from entering your motorhome. The drain piping is made of ABS material and is resistant to most chemicals. The "P" traps at the sinks, showers and tubs are available for use as clean-outs if necessary.

Your vehicle's holding tank compartments are heated by the furnace duct work. It will heat the tanks when the furnace is operating.

As mentioned previously, your holding tanks terminate together at one location for convenience in dumping your tanks. A twist-on cap is located at the terminal outlet to help prevent leakage of materials.



The holding tanks are enclosed sewer systems, and must be drained into an approved dump station. Tanks should be thoroughly drained and rinsed to prevent any accumulation prior of the tanks.

1. Twist off the termination cap counterclockwise. Some liquid may be trapped between the valves.
2. Connect the sewer hose by turning it clockwise, making sure that the connection end levers are locked over the termination end.
3. Deposit the other end of the sewer hose into an approved dump station inlet.
4. Open the black termination valve first and drain.
5. Open the gray (smaller) tank valve to drain and flush out the hose.
6. Rinse the tanks and hose thoroughly with fresh water before disconnecting.
7. Close the termination valves.
8. Rinse the sewer hose with the faucet provided in the termination compartment.
9. Replace the sewer hose to the storage location.
10. Replace the termination cap on the outlet, making sure that it is secured and locked.
11. You may wish to add an approved deodorant chemical, approved for your sewer system, to aid in the breakdown of solid wastes as well as making your system more pleasant to use.



Do not leave the termination valves in the open position or open them prior to having the sewer hose connected. Do not remove the termination cap with the termination valves in the open position.

The most common holding tank problem is blocking the drain lines, which can be minimized by following a few simple suggestions:

- Prior to dumping, make sure your tank is at least 1/3 full.
- Keep the tank valves closed, and the termination cap on.
- Fill and cover the bottom of the tank with water after dumping is complete and leave the water in the tank.
- Use only approved, biodegradable, toilet tissue designed specifically for motorhome systems.

HEATED HOLDING TANKS

DUMPING THE HOLDING TANKS

DUMPING INSTRUCTIONS



HOW TO PREVENT BLOCKAGE OF DRAIN LINES

TERMINATION COMPARTMENT FIXTURES



- Always use plenty of water when flushing.
- Do not put facial tissue, paper, or sanitary napkins into your holding tanks.
- Do not put solid objects into the tank which could puncture or scratch your tanks.

The termination compartment has many operations. Listed below are the fixture call outs and functions:

1. Compartment light. This is controlled by the compartment light switch at the entry door.
2. Pressure water fill selector valve. With the potable water hose attached and the handle in the 12:00 o'clock position this will provide pressurized water for the motorhome. With the handle in the 9:00 o'clock position this will pressure fill the potable water tank. Be sure to check the filling process with the monitor panel and turn this valve off when the tank is full.
3. Exterior faucet. For mixing the water temperature for the exterior shower head.
4. Exterior shower head. For washing animals, hands, sewer hose, or any exterior cleaning job.
5. City water connection. Used as a potable water hookup from the RV park water supply.
6. Sewer holding tank flush attachment. Attach the city pressure hose and allow the water to flow for three minutes. Be sure to open the termination valves and have the sewer hose attached and draining into an approved waste disposal system.
7. Low point drains. Use these to drain your water tank and lines in preparation for winterization.
8. Termination valve handle. To open, grab handle, and pull outward. Make sure that the drain hose is connected.
9. Termination cap. Remove this to install the sewer hose. Be sure that the termination valves are closed before removing this cap.
10. Termination valve handle. To open, grab handle, and pull outwards. Make sure that the drain hose is connected.
11. LP Valve switch. Switch on or off to control the LP tank.
12. Water pump switch. Switch your 12 Volt water pump on or off from this position.
13. Hatch cover. Open this and pass your city pressure hose through. Close with hose passing through small opening in the cover.

Chapter 6 - Technical Systems

The basic utility systems in your unit can be classified under two general titles, Electrical, and LP Gas. This section outlines these systems, describing their function, operation, and simple maintenance. This section is not intended as a service guide. Should a problem arise, we recommend that you contact your Damon dealer.

The electrical system in your motorhome is designed and built in accordance with the latest codes, standards, and regulations effective at the time of construction. It consists of two types of systems, alternating current (AC) 120 Volt service and direct current (DC) 12 Volt service. Because of the many model variations and options, it is not possible to provide wiring diagrams in this manual. We recommend that any electrical work be done by a Damon dealer or a qualified RV electrician.

The chassis electrical system is separate from the coach electrical system, except for the emergency start which may provide power from the auxiliary batteries to the chassis battery. The chassis system gets its power from the automotive battery, providing power to all of the dash controls and their functions. If any chassis electrical system should fail, first check the fuses at the circuit panel under the interior dash on the driver's side. These are automotive type fuses, which are available at many service stations. The dash fuses will be located either under the dash on the driver's side, or in the Battery Control Center (BCC) in the compartment in front of the drivers front tire.

Replace fuses or bulbs only with those of equivalent size and type as marked on the fuse or bulb. Incorrect sizing will not match component circuitry causing a possible electrical hazard.



The direct current (DC) system supplies all the power to operate the 12 Volt devices in your vehicle. It is made up of four parts:

1. Auxiliary Coach Batteries
2. Chassis Batteries
3. Converter/Inverter
4. Battery Control Center (BCC)

The system has been designed to provide adequate power during travel, dry camping or campground use.

When shore power is unavailable, the coach batteries power all house 12 Volt devices. The coach batteries are of the golf cart variety and are capable of being deeply discharged. With a large reserve rating, the batteries are able to provide limited use for several days before needing to be recharged. Because of the large power rating, the batteries must be recharged for a minimum of 24 hours to reach a full charge.

Never expose batteries to open flame or electrical spark. Chemical action in the battery generates hydrogen gas which is flammable and explosive. Do not allow battery electrolyte

ELECTRICAL SYSTEM

CHASSIS ELECTRICAL



COACH ELECTRICAL DIRECT CURRENT SYSTEM



Coach Batteries



Chassis Batteries

CONVERTER/ INVERTER



ALTERNATING CURRENT SYSTEM



WARNING

Do not contact skin, eyes, fabric, or painted surfaces.
Be careful when working with batteries.

Charging of the batteries comes from one of two sources, the engine alternator or the converter. When driving, circuitry in the BCC (Battery Control Center) directs charging current from the chassis electrical system to the coach battery bank. When power from either the campsite or generator is present, the converter charges the batteries while also providing power for the house circuits. The converter is an electronic device with an output rating of 80 amps DC (Direct Current) for units equipped with 50 amp AC (Alternating Current) service. It is connected directly to the coach batteries through the battery disconnect in the BCC. All of the converter's output, minus the house power needs, is available to charge the batteries. Units with 50 amp AC service are equipped with a Charge Wizard to control the demand for charge directed to the batteries.

The inverter converts 12 Volt power from your house batteries to 120 Volt power for your motorhome. The inverter will power the front and rear TV, Home Theater, the VCR, the GFCI (Ground Fault Circuit Interrupter) circuit, the microwave and all 120 Volt receptacles. Be aware that batteries are a limited power source and will quickly discharge under high loads.

The AC electrical system provides grounded electrical power to your 120 Volt electrical appliances through the external shoreline or your power generator. The shoreline is a one-piece molded cord that provides a weatherproof cable assembly. Included in this cord is a grounding pin. If any adapter or extension cord is used, ensure the wire is sufficiently sized for the amperage of the motorhome. Be sure the grounding pin is maintained.

Electrical output devices, extension cords and adapters must be grounded and suitable for the electrical requirements of your motorhome. Failure to provide sufficient electrical power can

WARNING

cause damage to your appliances and motorhome.

Receptacles are located throughout your unit for your convenience. Certain circuits are dedicated to individual appliances (i.e. air conditioners, microwave/convection oven) because of load requirements.

Your motorhome is provided with a Ground Fault Circuit Interrupter (GFCI) receptacle located in the bathroom or galley which also provides protection to all outside receptacles. The GFCI is designed to limit the time of exposure to an electrical shock caused by current leakage to the ground.

The GFCI should be checked once a month to assure proper operation. To test the GFCI:

NOTICE

Push the TEST button.

The RESET button will pop up. If the RESET button does not pop up, a loss of ground fault protection is indicated. DO NOT USE that outlet or

other outlets on the same circuit until a qualified RV electrician has checked out the electrical system.

3. To restore power, push the RESET button.

If the outside receptacles do not work, check the GFCI receptacle to make sure the reset button has not been

tripped.

NOTICE

The Battery Control Center (BCC) houses all the fuses for your auxiliary coach circuits. The BCC is located in front of the drivers front tire inside the compartment of the fenderskirt. To remove the BCC cover locate the tabs on each side of the box, pull away slightly and remove. Inside you will find a series of fuses for the extra circuits not available on the automotive or interior house 12 volt fuse boards. These style fuses are available at any automotive or RV store. If it should become necessary to replace any of these fuses, be sure to replace them with the same style and amperage rating. The circuit wiring is sized for that particular amperage. The BCC will sense when to charge either set of batteries. If the voltage falls below the minimum requirements, the BCC will switch the charge to that set of batteries. Terminals inside the BCC are available for testing its functionality. This testing should be performed by a qualified RV technician.

If your motorhome is equipped with a generator, it will provide independent AC power. When the generator is in operation an automatic switch will change the AC appliances to generator power from the previous AC source. A short delay occurs before the switching process is complete to allow the generator to stabilize its output. The generator is mounted to allow for easy access during service functions. Refer to the Generator Owner's Manual for necessary service requirements and operating instructions.

EXHAUST GASES ARE DEADLY. Do not block the tail pipe or situate the vehicle in a place where the exhaust gases have any possibility of accumulating either outside, underneath, or inside your vehicle or any other nearby vehicles. Outside air movements can carry exhaust gases inside the vehicle through windows or other openings remote from the generator engine only when safe dispersion of exhaust gases can be monitored. Monitor outside conditions to be sure that exhaust gases continue to be dispersed safely.


WARNING

Do not under any circumstances operate the generator engine while sleeping.

Test



BATTERY CONTROL CENTER (BCC)

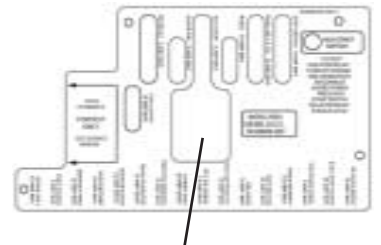

Artwork inside BCC gives fuse size and usage

GENERATOR



MONITOR PANEL



ROOF AIR CONDITIONER



The monitor panel allows you a convenient check of the approximate levels of all tanks. It is located in the hallway and includes:

WARNING

The water pump switch

The level test button for:

- LP gas tank
- fresh water tank
- holding tank 1 (black/toilet waste water)
- holding tank 2 (gray/sink and shower waste water)

Push and hold the button until the panel registers a reading.

The levels are registered as:

F (full)

2/3 full

1/3 full

The monitor panel gives its readings of the water and waste tanks by means of an electrical signal between the tank probes. If there is an extremely low mineral content in the water, or if there is buildup or coating on the sensor probes on the interior of the tank(s), the readings on the monitor

NOTICE

Avoid pouring grease, oils, or similar substances down your drain or toilet. If this should occur, the holding tanks may need to be washed out with soap and water. Inaccurate monitor panel readings could occur.

NOTICE

Each may be equipped with two roof mount air conditioners, one in the front and one in the rear. Both air conditioners can be operated on either generator power or by an external power source. Your motorhome may be equipped with an electric heat pump. Using this for heat will reduce your furnace LP consumption. Use the Remote to select your appliance and set the temperature. There is a timer available for setting the heat or A/C operating times. You may notice some delays while changing from heat to A/C and back. This prevents damage to the compressor. When changing the batteries in the remote, be sure to press the Reset button with a pen or pencil. See your Air Conditioner Owner's Manual in the Damon Owner's Information Kit for more details.

This vehicle is designed with a liquefied petroleum system to provide a safe and reliable fuel source for your range, furnace, water heater, and refrigerator. As with any flammable and volatile material, proper handling and precautions should be exercised at all times. The following warnings must be reviewed and adhered to for safe and trouble free operation.

LIQUEFIED PETROLEUM GAS SYSTEM

LP gas containers should not be placed or stored inside the vehicle. LP gas containers are equipped with safety devices that relieve excessive pressure by discharging gas into the atmosphere.



It is not safe to use cooking appliances for comfort heating. Cooking appliances need fresh air for safe operation. Before operation:

- Open window.



located in the cooking area to remind the user to provide an additional source of fresh air for combustion. Use proper ventilation when using the cooking appliances to avoid the dangers of asphyxiation.

Do not fill containers to more than 80 percent of capacity. Over filling the LP gas container can result in uncontrolled gas flow, which can cause fire or explosion. A properly filled container will contain approximately 80 percent of its volume as liquid LP gas.



Portable fuel burning equipment, including wood, charcoal grills, and propane stoves, should not be used inside the motorhome. The use of this equipment inside the vehicle may cause asphyxiation.



Do not bring or store LP gas containers, gasoline, or other flammable liquids inside the vehicle because fire or explosion may result.



LP gas has a distinctive odor. If you are unaware of the nature of an odor contact a Damon dealer. If you smell LP gas:



- Turn off open flames, pilot lights, and all smoking materials.
- Turn off any electrical switches.

Shut off the gas supply at the tank valve or gas supply connection. Open all windows.

- Wait until the odor clears.
- Have the gas system checked immediately by a certified RV technician.

The LP gas tank is mounted to the chassis below the floor between the frame rails and behind the lower compartment door of your motorhome. The tank needn't be removed, as it is accessible for filling through a remote fill under the lower compartment door in the drivers side. The tank and fittings have been completely assembled; however, upon initial filling, all connections should be checked for leakage by a certified RV technician.


The LP gas is stored in the tank as a liquid under pressure and vaporizes under the control of the pressure regulator for use with all of the LP appliances. The LP gas in the tank is much colder than the air that surrounds the tank, but as the air temperature drops closer to the temperature of the liquid in the tank, the liquid doesn't vaporize as easily. Consequently, the BTU value of the LP drops dramatically.

LP GAS TANK



Chapter 6 - Technical Systems

LP GAS REGULATOR

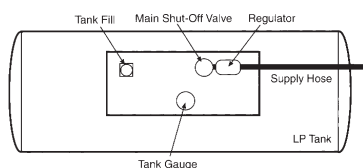

cally. The closer the tank is to full during cold temperatures, the better the BTU value will be; however, do not fill the tank to more than 80 percent (80%) of capacity.

Freezing of the LP gas system is a potential problem during cold temperatures because of moisture in the LP gas or supply system. Precautions should be taken to keep your tank and system free of moisture. Check with your LP service station about approved antifreeze or deicers, which may be available to reduce the possibility of a freeze.

The tank has a gauge installed to show the level of LP in the tank. The tank level can be remotely read from the monitor panel. The monitor panel is usually located in the hallway.

The LP gas tank has a regulator installed adjacent to the main shut-off valve. The regulator controls the pressure to the appliances as required for proper operation. This regulator has been preset by the regulator manufacturer and should not be adjusted unless necessary, and then only by a qualified LP gas service technician.

The regulator has a vent to permit it to breath, allowing the diaphragm to move up and down, and also allowing a release for excess pressure which may build up. This vent must be facing downward and should be checked periodically to make sure that it is clean and free from obstructions. Clogging from corrosion, dirt, insects and other debris is the most common cause of regulator malfunction.

The LP gas regulator must always be installed with the diaphragm vent facing downward. Regulators that are not in compartments have been equipped with a protective cover. Make sure that the regulator vent faces downward and that the cover remains in place to minimize vent blockage that could result in excessive gas pressure, causing fire or explosion.



PIONEER VSX-D515 PROGRAMMING INSTRUCTIONS-1:

1. Turn the receiver power ON.
2. Press the RECEIVER button on the top left side of the remote.
3. Press the SYSTEM SETUP button located at the center of the remote.
4. Press the RIGHT ARROW button near the center of the remote until the display reads SP SETUP. Then press ENTER on the remote twice.
5. Press the DOWN ARROW button on the remote until the display reads F LARGE. Then press ENTER.
6. Press the DOWN ARROW button until the display reads C SMALL. Then press ENTER.
7. Press the DOWN ARROW button until the display reads S SMALL. Then press ENTER.
8. Press the DOWN ARROW button until the display reads SB NO. Then press ENTER.
9. Press the DOWN ARROW button until the display reads SW YES. Then press ENTER.
10. Press the RETURN button three times. This button is located just above and to the right of the arrow keys.
11. For more programming information please refer to the pioneer vsx-d515 owners manual in your motorhome.


PIONEER VSX-D515 PROGRAMMING INSTRUCTIONS-2:

1. Press the DVD/LD button on the pioneer receiver.
2. Press the SIGNAL select button on the receiver until the display reads DIGITAL.
3. Push the STANDARD button on the receiver until the display reads DOLBY PL.
4. Press the DVR/VCR button on the pioneer receiver.
5. Press the ADVANCED SURROUND button on the receiver until the display reads 5-STEREO.
6. Press the CD-R/TAPE button on the pioneer receiver.
7. Press the ADVANCED SURROUND mode button on the receiver until the display reads 5-STEREO.
8. Press the AM or FM button on the pioneer receiver.
9. Press the ADVANCED SURROUND button on the receiver until the display reads 5-STEREO.
10. Press the CD button on the pioneer receiver.
11. Press the SIGNAL select button on the receiver until the display reads DIGITAL. Press the ADVANCED SURROUND mode button on the receiver until the display reads 5-STEREO.
12. Press the TV/SAT button on the pioneer receiver.

HOME THEATER PROGRAMMING



Power

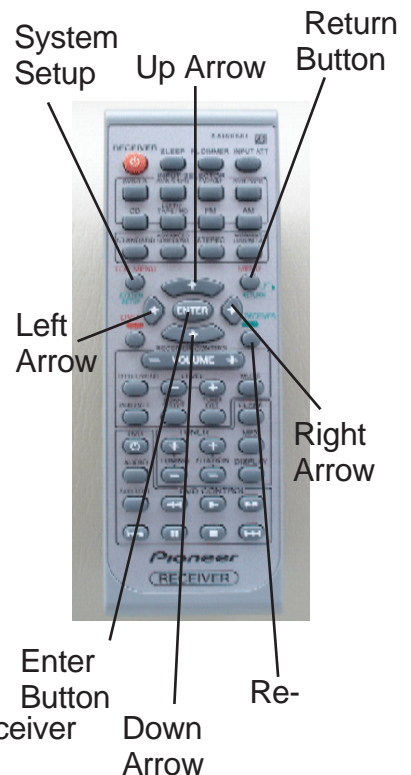

HOME THEATER OPERATING INSTRUCTIONS



DVD/CD



DVD/VCR



TV/SAT

13. Hit the ADVANCED SURROUND button on the receiver until the display reads "5-stereo."

NOTICE

On the home theater system the DVD 5.1 button is unusable.

Playing a DVD:

1. Make sure the receiver, tv and dvd/cd player are ON.
2. Press the TV/VIDEO button on the tv remote until the tv screen reads VIDEO 1.
3. Press the DVD/LD button on the receiver.
4. Press the OPEN/CLOSE button on the dvd/cd player.
5. Place dvd disc in the player.
6. Press the PLAY button on the dvd/cd player.
7. Follow instructions on screen using the dvd remote.
8. Adjust volume on the receiver as desired.

Playing a VCR Tape:

1. Make sure the vcr, tv and the receiver are turned ON.
2. Insert the tape and press PLAY on the vcr.
3. Press the DVD/VCR button on the receiver.
4. Press the TV/VIDEO button on the tv remote until the tv screen reads VIDEO 1.s
5. Adjust the volume on the receiver as desired.

Watching TV:

1. Make sure the tv and the receiver are turned ON.
2. Tune the tv to the desired channel.
3. Press the CD-R/TAPE button on the receiver.
4. Adjust the volume on the receiver as desired.

Watching a Satellite Station:

1. Make sure the tv, receiver and the satellite receiver are turned ON.
2. Press the TV/VIDEO button on the tv remote until the tv screen reads VIDEO-1.
3. Select the desired channel on the satellite system.
4. Press the TV/SAT button on the receiver.
5. Adjust the volume on the receiver as desired.

Playing CD's:

1. Make sure the receiver and dvd/cd player are turned ON.
2. Press the CD button on the receiver.
3. Press the OPEN/CLOSE button on the dvd/cd player.
4. Place the cd disc and press the PLAY button on the dvd/cd player.
5. Adjust the volume on the receiver as desired.

Listening to the Radio:

1. Make sure the receiver is turned ON.
2. Use the band button on the receiver to switch between AM or FM.
3. Adjust the volume on the pioneer receiver as desired.

On the home theater system the DVD 5.1 button is unusable.

NOTICE

Playing the Rear TV:

1. Make sure the tv is ON and on channel 4.
2. Make sure the dvd/cd is on.
3. Press the DVD button for the tv 2 on the amplified video distribution switch box.
4. Press the modulator button on the amplified video distribution switch box on channel 4.
5. Press the PLAY button on the dvd/cd player.
6. Follow instructions on screen using the dvd remote.
7. Adjust volume on tv as desired.

When playing the dvd and the dts mode is set up in the dvd, the rear tv will not play sound.

If there is no sound:

1. Be sure that the receiver is programmed according to the instructions start-

NOTICE



CD



FM



Video Distribution Box



TROUBLE SHOOTING TIPS

The rear speakers in the system are producing special effects sounds to give the system a fuller sound. They will not sound the same as the front speakers, and might in some situations not play at all.

NOTICE

These instructions are to be used only as a guide for the set up of the various systems. Please refer to the individual component Owner's Manuals included in the Damon Owner's Information Kit.

NOTICE

Chapter 7 - Interior Systems

Driving a motorhome is similar to driving a car. You have an ignition switch, gear-shift controls, turn signals, and dash components. As you sit in the driver's seat the center of the cluster includes tachometer, speedometer, fuel gauge, oil gauge, temperature gauge, and amp meter. Switches may have symbols to describe their function. See pages 40 and 41 for more detailed information on the function of each switch. Switch locations may be different from model to model.

The dash radio can be played without turning the ignition key "on" provided that the battery disconnect is in the "use" position. For units with the home theater, the dash radio can only be played if the ignition is in the "accessory" or "run" position. The cruise controls are on the turn signal lever. You can set, resume, and disengage the cruise control from this location.

Located to the left of the driver is the gear selector. The electronic uses a push button key pad with an economy mode. The number in the digital display is the highest forward gear range available in the selected position. If the display is flashing, the shift is inhibited. Be sure the service brake is applied when making this selection. See the Chassis Owner's Manual for more information.

Your motorhome is equipped with an engine block heater. This heater will assist starting the engine in freezing temperatures. The heater is plugged into a 120 volt recept in the engine compartment. The switch is located by the bed base or rear wall. The power switch is a standard 120 volt switch and is powered by either the shore line (when plugged into a park outlet) or by the motorhomes generator. You should use the engine heater if the ambient temperatures are expected to be 20 degrees F (+20°F) or below. Turn the switch on and the indicator light will glow. This will glow as long as there is power to the switch. Remember to turn off the switch whenever you start the engine or when the ambient temperature is above 20 degrees F (+20°F). If the switch is left in the ON position the engine heater will turn on every time you plug in the shore line power or start the generator.

During winter seasons most truck stops and reputable filling stations have winter blend diesel fuels available. In sub freezing temperatures #2 diesel fuel may form small wax crystals that can block the fuel system. At sub zero temperatures the fuel can thicken and become slushy. If this happens, have the vehicle towed to a heated facility to thaw the fuel system. Commercial products are available called anti-gel additives to help control this situation. Plan your destinations to avoid any problems that may be associated with waxing or gelling.

Refer to your chassis manual for the proper fuel specifications and additives.

Below are descriptions of the various controls on your da

AUTOMOTIVE DASH



GEAR SELECTOR



ENGINE BLOCK HEATER



FUEL SELECTION



Chapter 7 - Interior Systems

DASH BOARD CONTROLS



mind that these controls may be located in different positions depending on the model of your particular vehicle.

ICC – Courtesy Flasher (DOT-Lights): Flash after a semi-truck passes you or as a thank-you flasher when you are passing.

FOG LIGHTS/DRIVING LIGHTS: Are offered to provide more visibility. Fog lights will function with low beams, Driving lights will function with high beams.

SERVICE-LIGHTS: Provide under the hood lighting.

AISLE LIGHTS: Provide lighting in the aisle of the motorhome.

AIR HORN: Operates the air horns.

DASH FANS: Provide air flow in the cockpit area. They can be of assistance to the defroster system during cold temperatures, or circulate cool air from your air conditioner during hot weather. This is a two speed switch for low and high speed operation.

AUXILIARY START SYSTEM: Permits using the auxiliary battery power to aid in starting the motorhome engine if the vehicle battery has become discharged. When the ignition key is turned to the start position and one or more clicking sounds are heard, it may be necessary to use the auxiliary start system as follows:

NOTICE

Always set the parking brake prior to using the auxiliary start system.

the AUX START switch located on the dash.

2. Turn the key and start the engine in the normal manner.
3. Release the AUX START switch and operate motorhome in a normal manner.

Do not hold the ignition key in the start position for more than 30 seconds. Be careful not to run down the auxiliary RV battery as this could leave you without any 12 Volt power.

CAUTION

GENERATOR START: A switch on the dash, in the bedroom or on the generator allows remote starting or shutdown of your power generator. When the generator is running, a light on the dash switch will be illuminated. An hour meter shows the total amount of time the generator has been in operation.



HEADLIGHTS: Operates like the one in your automobile. Turning the knob to the first

position turns on the parking lights. Turning the knob to the second position turns on the headlights. Pulling up on the knob turns on the fog lights. Rotating the knob controls the brightness of the dash lights. (Set this according to your preference.)

REMOTE MIRRORS: This switch allows you to set the viewing angle of your mirrors from the convenience of the driver's seat. To adjust the driver's side mirror, move the lever to the left. For the passenger's side, move the lever to the right and adjust as needed.

HEATED MIRRORS: Use this switch to defrost your mirrors.

WIPERS: This switch is for HIGH, LOW or intermittent operation.

WASHER: This switch located on to the wiper switch provides washer fluid to the windshield. Check the washer fluid level prior to trips. Some washer fluid can freeze, so be aware of the temperature conditions where you will be traveling in order to add the proper type of fluid to your washer reservoir.

SUNVISORS: These switches control the sunvisors. Each shade works separately, with each assigned switch. Lower the sunshade to desired level.

The tilt steering wheel can be moved to allow additional room for entering and exiting the driver's seat, as well as for selected driving positions. Operate the tilt mechanism by lifting the smaller lever on the left side of the steering column just below the directional signal lever. Move the steering wheel to the desired position and release the lever to secure. Your motorhome has a steering column with a tilt/telescoping feature. To telescope, push the small lever on the left side of the steering column, adjust and release. To tilt, pull this lever and release when properly adjusted.

Never attempt to adjust the steering wheel while the vehicle is in motion. Loss of vehicle control could result.

⚠ WARNING Brake slows the vehicle down. It is not a substitute for the vehicle service brakes and will not bring the motorhome to a complete stop. When



STEERING WHEEL



Tilt/Telescope

ENGINE BRAKE



used properly, it will allow the service brakes to remain cool and ready for any emergency. To activate, flip the switch. Then simply remove your foot from the accelerator pedal and let the brake engage. (Cruise control may prevent the exhaust brake from engaging.) The dash will display a ENG BRK light whenever the engine exhaust brake is engaged.

The engine exhaust brake should not be operated in wet or slippery road conditions. Loss of traction and vehicle control

could result.

⚠ WARNING

The air suspension system consists of brackets and beams to hold the axles in place, and four air bags that support the motorhome above the axles. With the valve lever in the AUTO position, the suspension will operate normally. When placed in the LOWER position, the valves open and allow air to drain from the air bags. Use this feature with the leveling jacks. See the Chassis Owner's Manual for more information.

The motorhome should never be driven without air in the air suspension. Severe damage and injury could result.

AIR SUSPENSION



BACKUP MONITOR



⚠ WARNING

The backup camera is located in or on the dash. It will turn on when the gear selector is placed in reverse, or when you engage its power button. It will allow you to see behind your vehicle as you back up or park. The camera is located on the rear cap of the coach.

HEATING & COOLING CONTROLS



The climate controls in your motorhome are similar to the controls in many cars. You can adjust the fan speed, cool/warm air mixture, and climate settings, with the turn of a knob. Your climate control console includes settings for maximum A/C, normal A/C, vent, floor heat, a mixture of floor and dash heat, and defrost. Setting controls to maximum A/C circulates and cools interior air. Setting controls to normal A/C conditions outdoor air. This chassis climate control is not intended to heat or cool the entire motorhome.

The parking brake is engaged when the shift selector is placed into the N position and the yellow parking brake knob is pulled. To release, press in on the yellow parking brake knob.

Be sure the service brakes are engaged whenever applying or releasing the parking brakes.

PARKING BRAKES



LEVELING SYSTEM



The leveling jack control pad is located on the drivers left side panel. The parking brake and the ignition system must be on before engaging the leveling jacks. Be sure that the motor coach is on level ground before beginning to level the coach. Using the control pad, push the ON/OFF switch pad. The system is now operational and the electronic level lights will become active. Push the AUTO switch pad to begin the automatic leveling cycle. To retract the jacks in automatic mode, press the RETRACT ALL JACKS button. The jacks will then start

⚠ CAUTION

to retract and return to the full retract position.

In automatic mode, the RETRACT ALL JACKS button needs only to be pressed once and released for the jacks to fully retract.

NOTICE If necessary, simply push and hold the MAN switch pad for approximately five seconds until the light under this button is illuminated. Push the appropriate leg pad to override the system and level the motorhome to your satisfaction.

When leveling your motorcoach, the coach should be leveled FRONT to REAR, then LEFT to RIGHT.

NOTICE Motorhome ignition should be on. Push the ON/OFF switch to level. Push and release the RETRACT ALL JACKS switch pad. All jacks will start to retract and return to their full upright position.

In manual mode, the RETRACT ALL JACKS button will only retract the jacks as long as the RETRACT ALL JACKS button is depressed.

NOTICE When the JACKS DOWN light will go out. Read your leveling jack Damon Owner's Information Kit for more details.

Never lift all the wheels off the ground to level the coach.

WARNING Be sure to park the coach on solid, level ground.

NOTICE Clear all jack landing locations of debris and obstructions. Locations should be also free of depressions.

NOTICE When parking the coach on extremely soft surfaces, utilize load distribution pads under each jack.

NOTICE People and pets should be clear of the coach while operating leveling system.

NOTICE Be sure to keep hands and other body parts clear of fluid leaks.

NOTICE Storage compartments for the VCR, DVD, Global Positioning System, CD Changer and Digital Broadcast System. The TV antenna hookup with power booster switch is located here. The light is illuminated when the booster is on. The 120 Volt outlet for the TV is also located here. The video center will allow you to switch the signal from the antenna/VCR to the front or rear television sets.



STORAGE ABOVE COCKPIT



Chapter 7 - Interior Systems

FRONT TELEVISION



LIVING AREA INTERIOR STORAGE AREAS

The front television will only operate when the vehicle ignition switch is turned off. Once the engine ignition switch is on, the television will automatically shut off. This is a safety requirement.

Interior doors and drawers have travel latches to keep them closed while you are in transit. To open drawers lift slightly to clear the catch, then pull open.

When storing articles:

- Always keep tools and equipment stored in areas where they will not shift while traveling.
- Whenever possible, place heavy articles in storage compartments which are low and near the axles for better weight distribution. Pack articles carefully in the storage compartments to minimize shifting. If necessary, use straps to prevent movement.
- Be sure liquid containers are capped and cannot tip or spill. Secure all glass containers and dishes before traveling.

Storage is available under the first entry step on some models. It can be latched for safety. Step covers are provided for customer comfort and safety. Some models have an electric step cover.


ENTRY STORAGE AND STEP COVER



UNDER BED STORAGE



INTERIOR ENGINE ACCESS PANEL

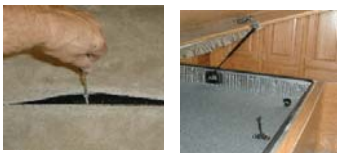

Additional storage is accessible directly beneath the bed. Simply unlatch and lift the foot of the bed. The device is equipped with gas struts to assist with opening, holding, and closing the bed storage lid.

To access the engine from the inside, extend the slideout, if bedroom is so equipped. Lift the bed to locate the access panel. Next, lift the carpet edges on all sides. Remove fasteners and access panel. For coaches without slideouts: Lift bed, release latches. Then lift panel and secure.

SLIDE-OUT OPERATION

EXTENDING THE ROOM



1. Before operating the system, verify your coach batteries are fully charged.
2. Before extending slide room, verify the following:
 - Turn chassis ignition off. This system will not function with your key on. Level your motorhome by utilizing the hydraulic leveling jacks.
 - Before extending the slide room, remove the travel locks from the slide room by rotating and removing, and move the driver's seat to the furthest forward position, and place the seat back in the vertical position.

- Verify that there are no objects (trees, electrical box, people, etc.) in the way of the slide room before extending it.
3. After the above steps have been verified, locate the switch for the slide room in the bedroom or above the entry door of the motorhome. Turn the key to the ON position. As you press the switch to the OUT position, the room will begin to travel outward. (As a safety feature, if you let up on the switch, the room will stop moving).
 4. As this slide room is designed to roll across the carpet, it may be necessary to vacuum the floor after each extension of the room.
 5. It may be necessary to re-level your motorhome after the room is extended.
1. Before operating the system, verify that your coach batteries are fully charged.
 2. Before retracting the room, verify the following:
 - The driver's seat in a motorhome is in the most forward position, and the seat back is in the vertical position.
 - No debris is caught between the slide room roof and awning. Verify that any cargo inside the motorhome during the retraction mode will not restrict the slide room.
 3. Turn the key to the ON position. Press the slide room switch to the IN position. (As a safety feature, if you let up on the switch, the room will stop moving).
 4. Turn the key to the OFF position. Insert the travel lock into the wall socket, two if provided. (The tension on the travel lock may be tightened by rotating the center portion of the travel lock clockwise, counter clockwise to loosen).
 5. Retract leveling jacks before moving the motorhome.
 6. Return driver seat to the driver's preferred position.

Your slideout requires very little maintenance. To ensure the long life of the system, read and follow these few simple procedures:

- When the room is out, visually inspect the inner slide tube assemblies. Check for excess build up of dirt or other foreign material; remove any debris that may be present.
- If the system squeaks or makes any noises, it is permissible to apply a thin coat of lightweight oil to the drive shaft and roller areas. Remove any excess oil so that dirt and debris cannot build up.

The hide-a-bed sofa is very similar to the one that you would find in a home. To open into a bed, pull off all cushions, pull the handle located on the top of the mattress up and out. The bed will pull out to reach a full bed size, so check to make sure that there is adequate room before opening the bed. Use the bed as you would a normal



RETRACTING THE ROOM



Chapter 7 - Interior Systems

HIDE-A-BED SOFA



bed. To replace the bed back to the sofa position, reverse the procedure and push the bed both in and away from the front of the sofa.

Your Damon model may have a sofa bed. To convert the sofa into a bed, pull bench out and up. To convert back into a sofa, reverse procedure.

SOFA BED



SLIDING BEDROOM DOOR AND LATCH



Some Damon bedroom doors slide conveniently out of the way beside the wall. Damon provides a vinyl travel strap or a slide latch to secure the door while the motorhome is in motion. The door latch is a bayonet type, which is engaged by turning the handle. Some models have an accordion type door which latches to the wall when the door is closed.

Your motorhome may have day/night shades, which are designed to serve a dual purpose. For daytime use, pull down the bottom half of the light colored shade which allows light to enter the motorhome while affording some privacy. For night use, or to shut light out and increase your privacy, pull the top, darker part of the shade down.

DAY/NIGHT SHADE



For your comfort we have 15,000 BTU Carrier air conditioners some with heat pumps. There is a remote control for the air conditioners for your convenience. This remote also controls the furnace. Simply point to the A/C, press heat on the remote and set your degree of comfort level.

AC/ FURNACE THERMOSTAT



The hot water heater start switch is located on the wall in the galley, bathroom, or monitor panel area. The light illuminates when the switch is turned on. The light goes off when the burner is on and the water is heating. If the light comes back on, the burner is not yet lit. It may take several tries to light the water heater burner. The white 120 Volt switch may be located in the bathroom. This controls the 120 Volt heating element. Turn this on to supplement the heating capacity of your water heater. When the element is turned on the red light will glow. Be sure the tank is full of water before using.

WATER HEATER SWITCH



For your convenience, there is plenty of storage above and around the range area for canned goods, kitchen utensils, etc. Please ensure that the doors are closed and latched before travelling to prevent the contents from falling out.

GALLEY AREA CABINETS



Drawers are designed to ensure that they do not open inadvertently during travel. To open the drawers, pull out until catch releases. Until you get used to the operation of the drawers, you may think that they are stuck.

Some Damon models have a wire framed pull out pantry. To extend this pantry, remove the travel lock pin at the bottom track and pull the pantry rack outward. To prepare for travel, push the pantry rack in and reinsert the travel lock pin.

The range cover provides extra counter space and covers the burners when not in use. When opened, it acts as a grease and splash guard. To raise the range cover, lift and push back until it snaps into place. To return the cover to its counter flush position, lift straight up to disengage the holding mechanism, and return it to the original position. The range has a piezo lighter. To operate, turn the burner valve on, then turn the piezo lighter. At that point, the pilot light will remain on for the oven until it is manually turned off. The oven is not self cleaning, and will need routine cleansing. Please do not store anything in your oven, and do not cook while the vehicle is in motion. For further instructions, please refer to the Range Instruction Manual in your Owner's Information Kit.

The refrigerator in your motorhome runs on either LP gas or electric power. The controls are at the top of the unit. If you use the auto mode on your refrigerator, the refrigerator will operate on 120 Volt power when available, and automatically switch to LP when shoreline is removed. You can control how cold you want your refrigerator to be with the thermostat control. Your refrigerator is equipped for large capacities with plenty of storage shelves and a crisper. The refrigerator requires normal cleaning and care. Please refer to the Refrigerator Owner's Manual in your Owner's Information Kit for more information.

The microwave operates on 120 Volt power provided by the generator or shoreline. It will de-program when the power is discontinued and must be re-programmed when power is restored. For usage instructions, please refer to the Microwave Owner's Manual in your Owner's Information Kit.

The kitchen sink is much like the one in your home. It comes equipped with a sink cover board which, when in place, increases counter space. Only waste water should be disposed of down the drain. Never put grease, food, or other obstructions down the drain because you may plug the holding tank.

The faucet in your motor coach is a single lever faucet with sprayer. To use the sprayer, pull out on the head of the faucet. Press the button on top to release the water. To reinsert the hose, gently guide it back to the original position. If you are not hooked up to a pressurized water system at the city water fill, you must turn the water pump switch on. You can find the water pump switch on a bathroom wall or on the monitor panel in the hall. The water pump is a demand pump, so it will only operate when a faucet is opened to release the pressure.

To convert the dinette table into a bed:

- Release the locking mechanism located at the front of the tabletop by turning clockwise. The lever is pointing to the right in the locked position.
- Remove the back cushions from the dinette and place aside. Lift up

GALLEY DRAWERS



PANTRY



RANGE



REFRIGERATOR



MICROWAVE



SINK



FAUCET



Chapter 7 - Interior Systems

DINETTE BENCH CONVERSION



on the bench seats.

- Press down on the tabletop until flush with the booth seats.
- Replace dinette cushions on top of the table as fits best.

Underseat storage may be reached by lifting up the bench seats.

There is a power roof vent in the bathroom ceiling for use during shower and hot water use. By opening the vent and turning the fan on, hot moist air will escape, reducing condensation in the motorhome. It is extremely important that you use the fans and vent every time you use the shower or tub to eliminate excess condensation.

BATHROOM

BATH VENT



The shower hose has a bracket that keeps the shower head from dropping and contaminating the fresh water system. It also has a vacuum breaker to prevent the head from siphoning water back into the fresh water system. The shower operates just like the shower at your home with two knobs that control the mix and flow of water, and a center valve to divert water into the shower head. A stopper is provided so that you can fill the tub.

SHOWER HEAD AND HOSE



TOILET



The toilet in your motorhome is a marine type toilet. It can be flushed by depressing the foot pedal the side of the toilet. Make sure that you use only biodegradable toilet paper. Also use plenty of water to flush to prevent backups or blockages in the system. Your toilet model may have an attached hand sprayer. Use this to rinse out the bowl, as there is not a continuous flow of water, such as in your home.

Your motorhome may be equipped with a washer/dryer combination machine. See the products Owner's Manual for correct usage and instructions.

WASHER/DRYER COMBO



Chapter 8 - Exterior Systems

When locking and unlocking the main door, there is a deadbolt and a latch bolt which are keyed separately. Unlock both, pull the latch open, and pull out on the door handle. The main entry door is a two piece door. You can use the screen door separately from the main door by unlatching it. Slide the screen handle cover closed to keep insects out of your motorhome. If the door needs adjustment, see a Damon dealer for service.

Adjacent to each entry door is an entry assist handle for convenience and safety in entering and exiting your unit.

The electric step is automatic. When the ignition switch is activated, the step will automatically retract. When the door is opened, the step will extend automatically even if the engine is running. If the switch for the step is in the OFF position, the step will fail to operate automatically. If the step malfunctions, check the battery voltage, fuses, switch alignment, and verify that the step switch is in the ON position.

The lower compartment doors have a pocket latch. To open, simply insert your fingers under the flap and pull up. The door will continue to raise on the gas assisted struts until fully open. Push down to close the compartment, and the latch will close automatically. The doors under the slide-out and doors that are mounted below gas fired appliances with exhaust may have a prop rod so the exhaust does not damage the door. Most models have pass-through compartments for storing longer items. Always keep the doors locked when traveling to prevent accidental opening or theft.

Damon motor coaches have plywood reinforced roofs which are strong enough to walk on. Use the two piece ladder to climb up on the roof for inspecting the roofing seal and components. Remember to store and secure the lower section before traveling. Take the ladder into consideration when backing up or parking your motorhome.

Your motorhome may be equipped with a side or door awning. These awnings may be electric with an operating switch on the key fob. The operating switch is in the passengers area. To extend a manual awning you first have to loosen the round knob and lever at the bottom of the side rails. Using the provided awning rod, unlatch the lever at the top right side of the awning. Using the same awning rod, pull on the loop in the center of the awning. To retract, have the rod in the loop and release the lever at the top right side. Be careful, the awning is under spring pressure and will start to retract immediately. The awning is a convenient way to extend your campsite to include a patio within your location. When using the awning, always set one side lower than the other to allow for water runoff. For complete instructions

MAIN ENTRANCE



ENTRY ASSIST HANDLE



ELECTRIC STEP



COMPARTMENT DOORS



REAR LADDER



AWNING



loosen



unlatch



pull loop

CABLE HOOKUP AND PHONE JACKS



on the use of your awning, please refer to the instructional guide in your Owner's Information Kit. When used properly, your awning provides a comfortable atmosphere during your camping excursions.

Many RV parks have cable television and telephone jack connections available. This will enable you to watch cable television in either the bedroom or the living area by utilizing the video selector box in the dash overhead. It will also allow you to access a telephone jack hookup. Simply plug in the TV cable or telephone cord into the outside cable and telephone receptacle.

120-VOLT OUTLET



Plug in 120 Volt AC devices here. The kitchen, bathroom, and outside receptacles are protected by a ground fault current interrupter. If the appliance does not operate, check the circuit breaker located in the 120 Volt breaker box. (see page 30)

120-VOLT POWER CORD



The 120 Volt power cord is stored in one of the rear compartments on the driver's side of the motorhome. Connect the coach end (large yellow) of the cord into the receptacle on the side wall of the motorhome. Turn the locking collar to hold into place. Plug the shore end (black end) into a suitable 50 amp power receptacle to provide external power to the motorhome and converter/charging system.

GENERATOR COMPARTMENT



The generator compartment is accessed by lifting the front hood on the front cap. You can start/stop the generator from outside the unit by pushing the start button in and holding it until you hear the generator start/stop. Refer to the Generator Owner's Manual for operating and maintenance information.

FURNACE DOOR



Damon furnaces have electronic ignition, and there is no need to access this panel except for service. As with all appliances, service is best left for your dealer. To remove the panel to check for insect nests, you will need a Square or a Phillips head screwdriver. For further information, reference the furnace manufacturer's manual provided with your vehicle.

WATER HEATER DOOR



You can gain access to the water heater control panel to check for insect nests by turning the tab at the top and allowing the door to hinge down. Due to the electronic ignition, it is no longer necessary to access this compartment for lighting the pilot. It has an electronic module board, electronic ignition lighter, and a safety pop-off valve to relieve the pressure, should it be necessary.

The refrigerator is an electronic ignition appliance and there is no need to access

this panel except for service or checking for insect nests. If a problem is encountered, follow the guidelines for use as outlined in the Refrigerator Owner's Manual located in the Owner's Information Kit. If the problem is not resolved, contact an authorized Damon dealer.

The fuse block is located in the battery control center compartment in front of the drivers front tire. These fuses control the automotive ignition and dash systems. To check the fuse, pull straight out and remove from the fuse block. The fuse can then be checked either visually or with an electrical tester.

Your motorhome may be equipped with a satellite dish. With an automatic satellite the control pad is located in the cockpit overhead. Before raising the dish make sure that there are not any obstructions. Please refer to the Satellite Dish Owner's Manual in your Owner's Information Kit.

Your motorhome is equipped with dual stage supports for the lower compartment doors under the slide outs. These supports allow the compartment door to open at 90 degrees (90°) to allow the slide out clearance to the compartment door. With the slide out IN, the lower compartment door will raise fully to access the storage compartment. Simply grasp the door in the 90 degree (90°) position and gently pull upward. The door will raise and hold in a position to allow access to the lower compartment.

This ceiling vent will exhaust interior air by placing the switch into either the manual or the automatic setting. In the to manual setting the vent will open and the fan speed will be set manually by turning the lower knob. The farther you turn it clockwise, the faster the fan will operate. In the automatic setting the vent will open and the fan will start when the inside temperature reaches the setting listed at the lower knob. As the interior temperature cools, the fan will stop until the temperature reaches the listed setting again. To close the vent, simply turn the upper knob to the off position. Your motorhome may have a rain sensor. This sensor will automatically close the vent if rain should start. In an area with heavy evening moisture, the vent may close as it detects the water on the sensor. If you prefer to keep the vent open and operating overnight use the rain sensor override switch located on the fan in the ceiling. There is also a fuse in this location. If the vent should not operate, remove this fuse by lightly pressing and turn counter clockwise. Inspect the fuse visually or with an electrical tester. If necessary replace with the same size and type.

Before using the battery disconnect switch to disconnect the power, be sure you close this vent.



REFRIGERATOR PANEL



FUSE BLOCK



SATELLITE DISH



DUAL STAGE GAS SUPPORT PISTONS



FANTASTIC POWER VENT



Chapter 9 - Care and Maintenance

Periodic maintenance and cleaning of your recreational vehicle is necessary to retain the dependability, safety, and appearance that will provide you with many miles of trouble free operation, as well as protecting your investment.

Make sure you read and follow all the maintenance tips and schedules that appear not only in this manual, which for your convenience we have provided for you; (reference pages 71-75), but also in the manuals provided by the chassis manufacturer and various component manufacturers. Keep good records of maintenance functions performed, and make sure you perform all owner obligations as may be required to keep your warranty in force.

It is also important to note that operating conditions will affect service timetables. Driving in extreme conditions such as heavy dust, continuous short trips, or start and stop heavy traffic means that service durations will be shortened. Discuss service timetables with both your dealer and chassis service representative. Preventative maintenance will pay for itself many times over by catching or preventing problems before they occur. Many repair costs are greatly increased due to the fact that a small problem can begin to affect other parts and systems of the motorhome if left unattended.

If a situation arises involving maintenance or cleaning activity for which you are not sure of the proper procedure, do not hesitate to contact your dealer, or chassis service representative for information.

The chassis batteries are 12 Volt automotive batteries, which provide power for all vehicle requirements. Have these batteries serviced when servicing other vehicle systems.

Auxiliary batteries (house batteries) for motorhomes are dual auxiliary 6 Volt batteries to provide living area power requirements. Have these batteries serviced when servicing other vehicle systems.

When operating properly, the motorhome alternator will be able to handle normal vehicle driving requirements and also recharge the batteries in a reasonable time when on the road.

- Every 30 days check battery mounting. Tighten battery cables and clean terminals if necessary.
- Check and recharge as necessary. Keep connections clean and covered with a light coat of grease.
- Check the water level weekly and add distilled water if necessary.

NOTICE

Vehicles left in storage for extended periods of time require further provisions to maintain a proper state of charge of the vehicle batteries. Parasitic loads (drains) from the radio, clock, powertrain control module, courtesy lights or other accessories will discharge a battery if the vehicle is not used for an extended period of time. A discharged battery can actually freeze in temperatures of 32 degrees F (32°F), resulting in permanent damage to the battery. Batteries may also be permanently damaged if allowed to stand for long periods of time in a state of discharge.

GENERAL INFORMATION

BATTERIES

Chassis Batteries



Auxiliary Batteries



WASTE WATER SYSTEM



To alleviate battery discharge, during periods of storage of two weeks or less, disconnect the battery by pressing the battery disconnect switch located by the entry steps to the store mode. For extended periods of time the battery should be disconnected by removing the negative cable from the battery.

A disconnected battery may also self-discharge, especially in high ambient temperatures, therefore every disconnected battery should be checked periodically and recharged if necessary.

The drainage system, including the tanks and associated drain piping should be periodically inspected for loose fittings from vibrations. Any deterioration of the sealant around joints and fittings should be repaired immediately.

Check the operation of the termination valves. If they pull or close with effort, lubricate the shaft and slide valve with spray silicone. Termination valves that leak should be repaired or replaced as soon as possible.

Sometimes, a buildup of paper or other material in the inside groove of the termination valve can obstruct the valve and cause it to seat improperly. If you suspect that this is occurring, the valve can be removed from the drainage line by removing the four screws that hold it in place and sliding it out. The valve groove may then be cleaned out with a screwdriver or similar tool. Replace the valve in the line and reinstall the screws to secure it in place.

FRESH WATER SYSTEM



It is recommended that fresh water not be left in the storage tank for long periods of time. The water should be drained when the unit is being stored or not in use. Drains are located in a variety of compartments. To drain the tank and lines, simply open the low point drains and allow water to run out. After water has drained, close the valves to prevent pests from entering the system. See also "Sanitizing the System" in Chapter 5 - "Plumbing Systems" (page 26) for more information. Check all hoses, fittings, and connections regularly for leaks and signs of wear. Make sure to keep the system sanitized, and take care to winterize during cold weather.

ELECTRICAL SYSTEM

The electrical system requires minimal maintenance under normal circumstances. Most electrical maintenance in the recreational vehicle involves the chassis and auxiliary batteries. Keeping the batteries properly maintained will help to eliminate many frustrating electrical problems. For example, 12 Volt power is needed for the furnace, refrigerator, water heater, and some air conditioner functions.

GENERATOR POWER PLANT SYSTEM

The generator is another area in which simple preventive maintenance can head off problems before they happen. Read the manual supplied with the generator in the Owner's Information Kit for the care and maintenance required on a regular basis.

If you experience electrical problems with your recreational vehicle, make sure to have it checked by an authorized Damon dealer or a qualified RV technician.

Generator power plant service, recommended by the generator manufacturer, should be performed at an authorized service center. Routine or emergency service,

such as adding oil, changing filters, or replacing spark plugs, could be accomplished at an auto service center, but must be done in accordance with the service instructions specified by the generator manufacturer. Refer to the Generator Owner's Manual for further information.

The LP gas system should be checked regularly for leaks and road damage. Follow the lines, looking for kinks or flattened spots that may have occurred during travel or maintenance on the recreational vehicle. A qualified LP gas service technician using proper equipment should check the entire system annually or whenever you suspect a problem.

The line pressure for LP gas appliances should be checked at least every six months. Most LP gas suppliers have this equipment to do the test for you.

All service procedures should be performed only by a certified LP gas service technician.



Some components of the recreational vehicle are constructed of strong, light-weight ABS plastic. Sometimes, it may be necessary to remove stains, or generally clean. A mild solution of soap and water will clean many stains, and should be used initially. Tougher stains may require stronger cleaners, but be sure to read the label to determine if the product is recommended for use on plastics. Avoid abrasive cleansers (even the liquid and cream types), alcohol based products, and solvents such as acetone and MEK. Gasoline and kerosene should not be used because of the damaging effect they have on the plastic surface, as well as the fire hazard they present. Often the damage caused by solvents, alcohol, and oil based products may not be immediately noticeable, but the plastic is made weaker, and thus more prone to stress cracking.

The front suspension and steering system of this vehicle was factory aligned using highly accurate equipment prior to delivery to the dealership. However, we recommend that alignment be checked and if necessary, adjusted after you have fully loaded the motorhome according to your personal needs. Thereafter, the alignment should be inspected annually to help prevent uneven tire wear. All alignments and incurred costs are the responsibility of the retail owner.

Check that the top and bottom bracket screws are tight at the start of each camping season.

1. Lubricate the rafter arms and support arms using paraffin wax or silicone spray. Also lubricate the threads on the knobs.
2. Periodically clean the awning fabric as follows: For a vinyl material use a mixture of 1/4 cup of dish soap and 1/4 cup of bleach mixed with 5 gallons of warm water. Liberally apply this mixture on the top of the fabric, then roll the awning up for 5 minutes. This will apply the mixture to the bottom as well. Roll the awning

LP GAS SYSTEM

ABS PLASTIC PARTS

MOTORHOME ALIGNMENT

AWNING EXTERIOR

back out and hose off with fresh water. Repeat if necessary. Allow to dry before rolling back up. Avoid the use of caustic household cleaners, mildew removers or hard bristle brushes. Do not scrub!

For an acrylic material, periodically hose off the fabric with water then let dry completely before rolling it back up. The acrylic material is water repellent, not water proof. The fabric is pretreated with a water retardant finish. Mildew cannot form on the fabric, but rather will form on dirt or dust on the fabric. The key is to keep the fabric clean. Do not scrub!

Whenever the awning is wet while rolled up, as soon as conditions allow, roll it out, hose it off and let it dry completely before rolling it back up again.

If you get water streaking or seeping behind the awning rail, inspect the rail for loose screws or peeled sealant. Always make sure the awning is extended high enough before opening the entry door.

Lower one end of the awning for proper water run off and to avoid water pooling and possible damage to the awning.

Refer to your awning users guide for complete instructions on the care and maintenance of your awning.

Failure to lower one side of the awning could result in damage to the awning fabric and/or hardware due to the weight of water pooling.

MOTORHOME CHASSIS



Operator's Manual for information on chassis service

Have the engine coolant and engine oil level checked each time when refueling.

Proper engine servicing and record of servicing may be mandatory to ensure chassis warranty protection. Follow the manufacturer's instructions on periodic maintenance checks.

DOORS AND DOOR LOCKS



Entrance door and lock should be adjusted and lubricated at intervals as needed depending on use. Screws and fasteners should be checked and tightened periodically. Check weather-stripping seals to assure proper fit and seal. Refer to the Owner's Manual from the door manufacturer for more in-depth instructions for care and maintenance of the entrance door.

EXTERIOR LIGHTS

Make sure to check the operation of all exterior lights often. Check headlights, clearance, turn signal, brake, and backup lights to make sure they are working correctly. Remember to check any towed vehicle or trailer lights also. Replace burned out bulbs as soon as possible.

The care of fiberglass siding is essentially the same as any automotive finish. Take care to avoid spraying water directly into any vents when washing the motorhome.

It is important to note that any finish will deteriorate with time. Dulling, fading and

yellowing will be increased by exposure to extreme sunlight, air pollutants, and excessive moisture. Motorhomes located in warmer weather climates are more prone to this type of premature fading. Surface weathering of fiberglass does not change the strength of the fiberglass. Regular washing and waxing of exterior surfaces is the best insurance against surface deterioration. If deterioration has occurred, check with your dealer for the steps required to restore the finish. Buffing or even painting may be necessary in extreme cases. Small cracks known as gel coat crazing are a common characteristic of the gel coat finish (not warrantable defects).

Wax fiberglass surfaces at least once a year with a standard liquid or nonabrasive paste wax. Make sure to follow the directions for use as outlined by the product manufacturer. Make sure to wash and wax your unit out of the hot sun when the exterior surfaces are cool.

Clean and wax all trim extrusions when waxing the recreational vehicle sidewalls, to help avoid surface pitting. Special aluminum cleaners are available to restore the original luster to aluminum surfaces. Make sure to follow the instructions for use as outlined on the product package.

Storage of the recreational vehicle out of direct sun is also a primary way to help preserve fiberglass finishes.

Physical damage to fiberglass should be taken care of immediately to avoid moisture from entering through breaks or cracks, causing problems with interior walls and components. Cover breaks in the fiberglass with plastic, sealing the edges with tape until the proper repairs can be made.

DO:

Wash your RV with liquid detergents.

Wax the sidewalls using nonabrasive automotive waxes or cleaner/polishes developed for use on fiberglass boats, showers, and tubs. Follow the directions on the package.

DON'T:

Use abrasive cleaners.

Use rubbing compounds.

Dry wipe surface; clean only with water and liquid detergent.

Proper care and maintenance of vinyl graphics or paint is critical in maintaining its appearance. The following cleaning and maintenance recommendations should be followed to ensure the maximum appearance and performance of your vehicle's custom designed finish:

When washing, flush the surface with water to loosen large particles of dirt and

**FIBERGLASS
EXTERIOR**

WAX

GRAPHICS

grime.

Fill a bucket with warm water (not to exceed 120 degrees F. (120°F)) and use a mild detergent or a liquid car wash mixture. Follow manufacturer instructions on the container.

SIDEWALLS

Using a clean soft cloth or sponge and the liquid car wash mixture, wipe the entire surface, using horizontal motions until it is clean. Rinse off the detergent with clean water starting from the top and rinse downward until it is clean.

Dry your vehicle with a clean soft cloth or let the vehicle air dry.

When waxing, ALWAYS use an automotive grade nonabrasive wax and cleaner. Use EXTREME care when waxing your vehicle and ALWAYS rub in horizontal motions.

DO NOT use a pressure washer.

It is strongly recommended that you DO NOT use a rotating brush car wash as it can lift the ends of your vinyl graphic or scratch your paint finish.

DO NOT use alcohol, strong solvents, bug remover, or tar remover on your painted or vinyl surface as it may leave a foggy appearance in that area.

Minimize any fuel contact with your paint finish or vinyl graphics. Prolonged contact can damage the finish.

Power buffers ARE NOT recommended.

Do not use petroleum solvents, harsh abrasives, or citric based cleaners.

Inspect the roof components at least twice a year to make sure that all the seals are not cracked or worn. Proper maintenance of seals is necessary to keep moisture from entering and causing severe damage such as rot, mold, or mildew. If you encounter damaged, cracked, or weathered seals, make sure to reseal as necessary.

CAUTION Remove old seals first before reapplying the new seals. Check with your dealer for the type of caulking required for thermoplastic polyolefins (TPO) roofs and the correct methods of resealing. Silicones and synthetic sealers cannot be used on the TPO roofs. Special sealers are also required for the skylights. Your Damon dealer may perform the periodic roof seals for you if desired.

ROOF

It is especially important to check the seals before and after periods of extended storage or nonuse. Fall and spring inspections are recommended. Check the membrane for possible damage and check all accessories and fasteners. The roof may be cut or punctured by sharp objects so care must be taken when parking and driving. If damage does occur, the roof may be patched. Check with your dealer for additional information. Parking in areas where fruits, nuts or tree sap may stay on the roof for extended periods of time may result in unremovable stains.

For Normal Cleaning:

- Use a mild laundry detergent.
- Rinse the complete roof with clean water to remove any loose dirt or debris.

- Use a medium nylon bristle brush along with your selected cleanser mixed with water and scrub the entire roof. Rinse thoroughly with clean water to avoid residue buildup on the roof or sidewall of the unit.
- For more difficult stains contact your Damon dealer for the correct heavy duty cleansers. **Do not use general-purpose cleaners containing petroleum solvents, harsh abrasives, or citric based cleaners.**

If your roof should somehow be punctured, cover the puncture to seal out moisture, and have it repaired as soon as possible (check with your dealer).

The membranes used on the roof may have an extended warranty that is covered by the membrane manufacturer. This is for manufacturing defects only and does not include leaks or punctures due to improper sealing, normal wear and tear, or owner damage. See membrane manufacturer's warranty for details.

Check roof vents regularly for debris that may block air flow or jam the cranking mechanism. Lubricate the cranking mechanism with light oil.

It is important to maintain the seals and adhesives of your recreational vehicle to prevent moisture from entering and destroying the components. When washing your recreational vehicle, inspect the seals for signs of drying out, cracking and wear. You should inspect and reseal, if necessary, every six months.

Check seals around doors, windows, vents and external seams. If a seal is cracked or dried out, it should be replaced to prevent leakage.

Check roof seals every six months to see if they are cracked or peeling.

Check engine covers and firewall every six months to see if they are cracked or peeled.

Be aware that weather, sun, and road vibration will affect seals, causing them to dry, crack, or separate. If you are unsure what to look for, have your dealer instruct you, and also show you the correct method for renewing the seals. If you prefer, they will be able to perform seal maintenance for your convenience.

The exterior of your motorhome is made of pre-finished aluminum and fiberglass. Wash it frequently with a mild soap and soft rag in lukewarm water. If you travel roads that have been salted for ice, wash your motorhome as soon as possible. The most common causes of corrosion are accumulation of road salt, dirt, and moisture in hard to reach areas under the motorhome. Make sure you wash the undercarriage and wheel wells as well as the exterior of the motorhome. A good automotive cleaner should be used occasionally to remove tree sap, road tar, insects and industrial pollution that may damage surfaces. Do not use naphtha or turpentine. We recommend that you wash your motorhome about every three weeks.

Your motorhome may be equipped with a slide-out room for added space and comfort. Proper care and maintenance is required to achieve the maximum performance. Follow the guidelines listed below for your slide-out.

ROOF VENTS

SEALS AND ADHESIVES

SLIDE-OUT



It may be necessary to lubricate the slide assembly (rollers, slide tubes, lever assembly) once a month with light oil to prevent rust buildup. This may be required more frequently due to road spray (salt, sand, dirt, etc.).

If you park your unit for long periods of time, run the room in and out 2–3 times to keep the moving parts lubricated and the seals moving more freely.

Keep the slide room away from tree branches. Visually inspect the room and awning before retracting. Branches rubbing against the room while retracting could cause damage to the seals.

Whenever possible, wipe down the exterior walls before retracting the room to prevent water from draining onto the carpet.

The rollers under the slide room are not sealed rollers, therefore, some residue may appear on your carpet. This is a normal function, so be aware and take proper precautions. Vacuum the carpet after each extension of the slide out room.

Verify that your house batteries are fully charged before operating the room.

In areas where the hot sun constantly beats down on the motorhome, shading the tires by covering can reduce tire sidewall cracks from forming. Tire covers can be purchased at any motorhome supply store. Check your Chassis Owner's Manual for the tire rotation requirements. Due to the weight of the motorhome you should have a qualified service center rotate the tires if recommended by your chassis manufacturer.

TIRES

To lubricate the elevating gear, apply a liberal amount of silicone spray lubricant to the elevating gear with the lift in the down position. Run the lift up and down a few times to distribute the lubricant over the gears.

If rotating the antenna becomes difficult, lubricating the bearing surface between the rotating gear housing and the base plate can restore operation. Any spray type silicone lubricant may be used.

Elevate the antenna and remove the set screw from the rotating gear housing. Spray lubricant into the hole and around the edges of the gear housing. Rotate the gear housing until the lubricant coats the bearing surfaces and the antenna rotates freely. Replace set screw.

TV ANTENNA



Some motorhomes have a satellite dish. Elevate the dish and spray all hinge areas with a silicone spray. Rotate the dish and spray the base plate with a silicone spray. Continue until the elevation and rotation is free of resistance. Wash the dish surface and LNBC with a mild soap and water solution.

Buildup of mud under the body can cause rust, and can add unnecessary weight, which contributes to the gross weight of the vehicle. This effectively reduces the amount of cargo you can still carry and remain within your GVWR and GAWR limits.

Check the condition of the frame regularly. Keep it clean, and repaint as necessary to help avoid rust. Corrosive materials such as those used for ice and snow removal accumulate on the underside of the motorhome. These materials should be removed by flushing the underbody regularly with water, especially in areas where mud and other foreign materials collect.

Make sure that all windows remain operative by adjusting and lubricating latches and moving parts annually. Use powdered graphite or light oil to lubricate moving parts on windows.

Vinyl seals around windows should be checked every six months, cleaned regularly and kept pliable by use of a silicone spray (make sure to follow the directions of the product).

Keep screens and window slides clean and free of debris to maintain proper operation and to avoid component damage. Test the operation of all windows occasionally to make sure they are working properly, making sure that they close flush and that the locks hold tight.

Check with your dealer if you are unsure about the correct methods of lubrication and adjustment.

Be aware that moisture can accumulate in locks and hinges of windows and doors, causing damage or faulty operation. Do not force the operation of these components in subfreezing weather.

Check fluid levels. If levels are low, take to your dealer to have the motorhome serviced by a qualified RV technician.

NOTICE

These are guidelines for the care and maintenance of your motorhome. Always refer back to the product's Owner's Manual for more information on the care and maintenance of that product.

Be sure to remove all food and ice from the refrigerator at the end of each trip. Prop the doors open slightly to keep the interior dry and free of mold, mildew, and odors.

Make sure to read all literature provided with each of the appliances and follow the maintenance instructions included. Pay particular attention to any cautions or warnings included.

SATELLITE DISH



UNDERBODY

WINDOWS

HYDRAULIC FLUID



INTERIOR

Clean your tub/shower, sinks, and toilets as you would at home. A nonabrasive cleaner is recommended. When cleaning mirrors or shower doors, a vinegar and water solution works very well to remove hard water spots and stains.

Inspect every 90 days and reseal as necessary. Use a clear silicone sealant.

APPLIANCES

We recommend dry cleaning for your bedspread and draperies just as you would for your draperies and comforters at home. Although this is more expensive, proper care of material will help ensure a longer life. Care of headboard and bedroom valance fabric should be done with same instructions given for upholstery fabrics. Laundering and improper cleaning may result in fabric shrinking, fading or deteriorating prematurely. Read the label on the bedspread for proper cleaning.

BATH FIXTURES

BATHTUB SEAL

Professional cleaning is recommended for major cleaning. Frequent vacuuming is recommended to remove daily accumulations.

BEDSPREAD AND DRAPERIES

Sweeping and vacuuming is necessary. To clean the grout, use a grout cleaner.

Test the detector operation after vehicle has been in storage, before each trip, and at least once a week during use. Push the test button until a short beep (about 2 seconds) is heard. Release the button. The detector then resumes normal operation. In normal operation, the detector will flash the red LED once every thirty seconds.

CARPET

CERAMIC TILE

CO DETECTOR

High-pressure laminate counter tops are quite easy to keep clean. Waxing is not necessary. Glass rings, food spills, water spots and smudges usually wipe off with a damp cloth or sponge. Stubborn stains can be removed with a spray cleaner. Laminated surfaces resist alcohol, fruit acids, cosmetics and most household chemicals. It is better to avoid contact with dyes, strong laundry bleaches and bluing solutions. Indelible inks used on food packages may leave a stain so take care when unpacking groceries on a damp counter top.

Sharp knives can damage the finish so confine slicing to a good cutting board. The counter top resists moderate heat and boiling water. Pots and pans straight from the oven or broiler should be placed on hot pads. Keep irons on an ironing board and lighted cigarettes in an ashtray. For lasting beauty, avoid using harsh abrasives, scouring powders, peroxides or bleaches. These can dull surfaces, making the counter top more likely to accept stains.

COUNTER TOPS WITH HIGH-PRESSURE LAMINATES

Wipe clean as you would for daily cleaning. Use a nonabrasive cleaner to avoid damaging the finish.

To clean, wipe with a soft damp cloth. Warm water will remove dry water spots. Do not use cleansers which contain abrasive or harsh chemicals. Never use alcohol or other organic solvents.

Keep your blinds looking new by wiping with a soft cloth. Vacuum shades regularly. Use a mild detergent to spot clean if necessary. Close the blinds and shades all the way to properly clean inside and out.

Clean with hot soapy water or a good liquid cleaner. Avoid using abrasive cleaners. Never use steel wool on stainless steel, since the steel particles left in the sink can rust and become unsightly. Also, when cleaning stainless steel with a mild cleanser, rub gently with the grain, and rinse well. Rinse after each use and wipe dry.

Preserve the luster by cleaning with a damp cloth and any household detergent designed for that purpose. To remove most stains, hard water deposits, cigarette burns and minor scratches use an abrasive cleanser or an abrasive pad such as 3M ScotchBrite brand green "Kitchen Scrub" pads. To remove deep stains and scratches use fine sandpaper (120 - 220 grit), then sand using (in the following order) 320, 400, and 600 grit sandpaper to restore the standard finish. A satin sheen or high polish can be obtained with polishing compounds.

Certain chemical substances can seriously mar surfaces even during brief periods of contact. If spilling occurs, wipe area off immediately, and then rinse with water. Potentially harmful compositions include: Toilet bowl cleaners, rust removers, contact adhesive solvent, ceramic cook top cleaners, paint or varnish removers, drain cleaners, metal cleaners, tile cleaners, lacquer thinners, or oven cleaners. Contact the manufacturer should you need further assistance.

Your RV is a small living area so soiling may occur more frequently and items will need more attention than your furniture at home. Please follow these guidelines for cleaning your upholstered fabrics.

- Do not use water based cleaners.
- If a spill does occur, blot up the spot, but do not rub it in. Some solvents are not recommended since they may have an adverse reaction on specific backings of your upholstery fabric.
- To prevent overall soiling, vacuuming or light brushing to remove dust and grime is recommended.
- Spot clean, using a mild water-free solvent or dry cleaning product.
- Clean only in a well-ventilated area and avoid any product containing carbon tetrachloride or other toxic materials.

HARDWARE

KITCHEN FIXTURES

MINI BLINDS & DAY/ NIGHT SHADES

SINKS

SOLID SURFACE COUNTERTOPS

UPHOLSTERY AND FABRICS

- Pretest a small area before proceeding.
- Use a professional furniture cleaning service for an overall cleaning.

Use a clean damp cloth to clean surfaces. Avoid using abrasive cleansers as they may scratch the finish.

Your upholstery fabrics have been manufactured with the same quality you would expect to find in a furniture store. However, they are not completely resistant to possible damage. Special care is needed when your motorhome is exposed to very humid, or very hot climates or if it is closed up for an extended period of time. If you know you are going to be away, cover upholstery and make sure window coverings are closed to protect upholstery from any sun damage.

Your decorative wall coverings are not much different from wallpaper that you may have in your home. They should be cleaned with mild soap and water. They can easily be maintained with proper care.

VINYL CABINETRY

Any glass will develop water spots if glass is not cleaned properly. This spotting effect is magnified when glass has a reflective finish. Use a squeegee immediately after washing to reduce water spotting. To remove stubborn water stains from reflective glass, there are several aftermarket specialty glass cleaners. The inside window track must be kept free of debris to keep the drain holes clear.

WALL COVERINGS

These products should be cared for as you would any fine piece of wood furniture. Apply a furniture polish when you clean to maintain the natural beauty and luster of wood. This will keep your cabinetry looking new and keep wood from drying out. Murphy's Oil Soap is a good choice for wood cabinets.

WINDOWS

WOOD CABINETRY

Chapter 10 - Winter Use and Storage

Many people choose to use their motorhomes throughout the entire year. Extensive usage is not recommended in severe cold weather. However, winter traveling can be safe for you and your motorhome if you follow the precautions outlined in this chapter. For those who choose to use their motorhomes only during the warmer months, winter storage is necessary. This section will guide you through the proper steps to winterize your motorhome, which is critical to maintain maximum durability over the life of your vehicle.

The fresh water storage tank is located inside a lower storage compartment. The furnace will heat the fresh and waste water compartments. In severe cold however, it is wise to monitor the water temperature in the tank, and take appropriate steps to drain and winterize if necessary. In severe cold weather, it may also be necessary to open the lower cabinet doors at night in both the bath and kitchen areas to keep warmer air circulating around the water fixtures.

If you are going to leave the coach unheated for any length of time in severe cold conditions, it is best not to keep water in the fresh water system. It may work best to carry cooking and drinking water with you in plastic jugs instead.

If you will be using your motorhome when conditions fall below the freezing level, it may be necessary to protect the drainage system components from damage by the addition of an approved antifreeze solution as outlined on the product directions. Any drain lines exposed to external air temperatures are especially susceptible to freezing and precautions should be taken to protect them from damage.

In the event that the motorhome is left for a period of time without the furnace in operation, canned goods and other foods packed in water should be stored as high as possible, since heat rises. They might also be stored in the refrigerator as insulation against the cold. Store dry foods, and other items that are not damaged by freezing temperatures in the lower storage areas.

Make sure to use an LP gas that will vaporize properly in the colder temperatures. Check with your LP gas representative for the proper fuel.

Use only the furnace to heat the recreational vehicle. It is properly vented to the outside.



Never use the range for heating as carbon monoxide may build up inside the unit and asphyxiation could result.

Cooking produces large amounts of moisture, not just as steam from pots and pans, but also as a product of combustion. Make sure to use the exhaust vents and open a window slightly to control the humidity. At night, leave a roof vent and/or a window slightly open.

When a motorhome is exposed to freezing temperatures, it could be severely dam-

TIPS FOR WINTER USE

WATER SYSTEMS

FOOD STORAGE

LP GAS SYSTEM

HEATING

CONDENSATION

WINTERIZATION PROCEDURES

aged by ice expansion. This is especially true of the water lines, water pumps, water heaters, washer/dryer, ice makers, holding tanks, and faucets, which are at risk for damage if not properly drained during the winter. All water must be drained from the motorhome. The procedure to do so is as follows:

- ☐ Drain the fresh water tank by opening the low point drain valve. Let the water drain out until the tank is empty.
- ☐ Drain both the black (waste) water tank and the gray (sink) water tanks and flush out completely. (See complete instructions located in Chapter 5 - "Plumbing Systems"). Drain the black tank first and allow the gray water tank to rinse out the flexible hose drain line. You may now add a commercial holding tank chemical cleaner. Driving the unit around for a few miles will allow the cleanser to circulate within the tanks and drains. Drain and flush once more with fresh water.
- ☐ After all the tanks have been drained, make sure that any water remaining in the lines is either blown out, or replaced with a nontoxic RV antifreeze solution which will prevent any water that remains from freezing. To blow out the water lines, proceed as follows:
 - Open all faucets including the toilet flushing device and the shower head sprayer. Open any other water lines that are closed. You will need access to an air compressor along with an adapter that will connect the air to your unit. These adapters can be purchased at an RV supply store. Do not exceed 55 psi when hooked up to the water lines to avoid damage. If your vehicle is equipped with a water filter, remove and drain it before proceeding. Replace it with a diverter tube, which will come with the unit. This will create a bypass in the water line so that the antifreeze will not go into the filter assembly.
 - Turn on the water pump and allow it to run to clear all water from lines. Turn off the water pump.
 - Open all low point and water tank drains.
 - Open the water heater cover and remove the water heater drain plug located on the lower front side of the water heater (see photo).
 - Hook an air hose to the city water connection located in the termination compartment. Blow out the water lines (do not exceed 55 P.S.I.) until no more water can be seen coming out of the lines. Pause for several seconds and repeat until clear.
- ☐ Put nontoxic RV antifreeze in the drains, p-traps, and water tanks.
- ☐ If you do not have access to an air compressor, you may use the "wet" method of winterization.
 - After you have completely drained all the tanks, water heater and lines by opening the low point drains and switching the water heater bypass valves to the bypass position (if equipped-see page 67), close the low point, water tank and the water heater drains.




Water Heater Drain Plug

- Pour 4-6 gallons of RV antifreeze into the fresh water tank and let the water pump circulate the mixture. Do not dilute.
- Open the furthest faucet or water valve from the pump and work your way through the entire system. Turn on one (hot and cold) at a time until the antifreeze solution is observed, then close the valve. Allow at least 2 cups to pass through for complete protection. Make sure to include all water lines such as showers and tubs, toilet, washing machines, dishwashers, ice makers and outside shower faucets. The antifreeze should be left in the sink, washer and shower p-traps and toilets during storage to protect those lines. Open all faucets one half way to relieve pressure on the valve seats during storage. Wipe all fixtures clean to prevent staining.

Antifreeze must be nontoxic in nature and must be flushed from the fresh water system before human use. Automotive antifreeze is poisonous and **SHOULD NOT** be used in drinking water systems.

WARNING Draining and water lines in your motorhome is half the battle of winterizing. Refer to the Storage and Winterization Checklist (page 68) to ensure protection of your motorhome. An authorized Damon service dealer can help you in the winterization process for your convenience.

A water heater bypass valve system is located inside your motorhome usually behind the water heater. When the system is closed, water is shut off to the water heater. This will eliminate circulating an additional six to ten gallons of antifreeze through the water heater system when winterizing the system. Be sure to remove the drain plug from the outside of the water heater to drain the water heater tank.

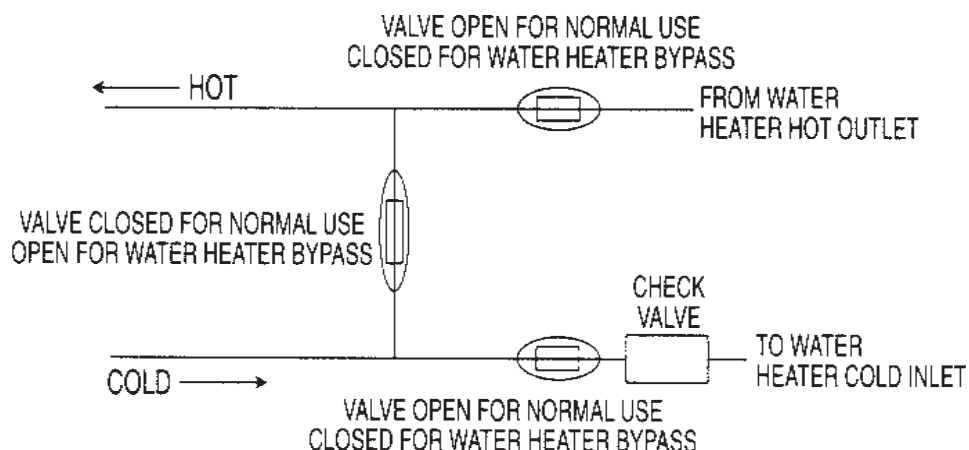

WATER HEATER BYPASS



Water Heater Drain Plug

STORAGE AND WINTERIZATION CHECKLIST

When storing your motorhome for the winter (or other extreme conditions), certain precautions need to be made to protect it until you open it up again for use. Make sure to talk with your local dealer concerning any special requirements for storage in your particular geographic area. The following steps are general, and your dealer can help you choose those that are most appropriate for your needs.

- ☐ **Chassis** – Run engine for 30 minutes once a month if possible. Prepare as outlined in the Chassis Owner's Manual.
- ☐ **Generator** – Prepare as outlined in the Generator Owner's Manual.
- ☐ **Plumbing Lines** – Drain and protect by filling with approved RV antifreeze. (see pages 66-67)
- ☐ **Water Heater** – Drain. (pages 66-67)
- ☐ **Toilet** – Drain. Hold pedal down and pour RV antifreeze into bowl.
- ☐ **Fresh Water Tank** – Drain, pour RV antifreeze solution and run through the fresh water system, or use the dry method (pages 66-67).
- ☐ **Water Filter** – Remove and discard the filter. Install diverter tube in place of filter assembly.
- ☐ **Body** – Clean and wax. Oil locks and hinges. Seal roof trim as needed.
- ☐ **Tires** – Block up motorhome with wooden blocks or manufactured jack-stands on a hard level surface to relieve the constant pressure on one area of the tires. Partially deflate the tires. Cover to protect against sunlight with burlap, plywood or specially designed tire covers which are available at RV dealerships.
- ☐ **Countertops and Cabinets** – Wash with mild soap and water.
- ☐ **Curtains and Blinds** – Close all the drapes and curtains, and protect the curtains from sun fading by placing foil or paper between the windows and the curtains/blinds.
- ☐ **Windows** – Close and lock. Inspect and reseal if necessary.
- ☐ **Holding Tanks** – Drain and rinse. Close valves. Add a small amount of RV antifreeze to keep valves and gaskets lubricated.
- ☐ **Drain Traps** – Pour a cup of RV antifreeze down all drains. Wipe all fixtures clean.
- ☐ **Refrigerator** – Clean. Leave both doors propped open. Cover exterior panels and roof vents. Leave an opened box of baking soda inside the refrigerator to prevent any musty odors from accumulating.
- ☐ **Ice Maker** -- Refer to your refrigerator owner's manual for proper winterization procedures.
- ☐ **Air Conditioner** – Remove air filters and clean or replace. Cover shroud.
- ☐ **Roof** – Must be kept clear of significant snow accumulation or damage may occur. Inspect and reseal if necessary.
- ☐ **Vents** – Check all furnace, refrigerator, range hood, A/C, etc. vents and close securely. Cover or tape up to prevent mice or insects from building nests that

can disturb the air flow and keep the appliances from functioning properly.

- ❑ **Sinks and Showers** – Clean and then pour one cup of nontoxic RV antifreeze into the drains to prevent freezing. Wipe all fixtures clean.
- ❑ **Batteries** – Add distilled water and recharge if necessary. If possible, remove batteries and store them in a cool dry place (approximately 50 – 60° F). Check them periodically and recharge as needed. Be sure that both the chassis and auxiliary (house) batteries have the proper electrolyte level and that they are fully charged. A discharged battery will freeze and may crack the case, causing severe damage to the battery and surrounding area. In storage, a battery will lose charge gradually over a 30 to 45 day period, even when disconnected by the use of the Battery Disconnect Switch. We recommend that the batteries be checked for charge at least monthly. You may wish to remove the batteries from the motorhome and store them in a heated area. However, even when warm, the battery charge level must still be maintained. A warm battery accepts charge much more readily than a cold one.

Keep the battery vent caps in place during storage and prohibit smoking, welding, and other work involving the use of flames in the area.



- ❑ **Dash Air Conditioner** – Run for a short period of time to assure the compressor seal is lubricated.
- ❑ **Interior** – Check the interior of the motorhome monthly while in storage to make sure leaks have not developed, or condensation has not formed that can cause damage to interior components. Condensation can most readily be observed as moisture accumulation on windows and mirrors. To reduce condensation, make sure to air out the motorhome occasionally during storage.

--

Maintenance Schedule

ITEM	Every Trip	Every 30 Days	Every 90 Days	Every 180 Days	Every Year	Prior to Storage	As Required	PROCEDURE TO BE PERFORMED:
								Maintenance schedules are minimum requirements. Heavy use, unusual temperatures or humidity, or other extreme conditions may require more frequent maintenance.
Roof & Components				X		X	X	Inspect and reseal roof and exterior attachment areas
			X					Clean roof
					X			Lubricate roof vent mechanism w/light oil. clean as needed
Fiberglass Exterior		X						Wash w/warm water & mild detergent
					X			Wax with liquid or nonabrasive wax
Windows & Doors		X						Check vinyl seals when washing exterior
			X					Check seals for damage & repair as needed
			X					Lubricate door hinges & step components with spray lithium grease
					X			Adjust & lube latches w/graphite or light oil
					X			Lubricate door locks & strike pockets. exterior compartments
Seals & Adhesives		X						Inspect and reseal as necessary
LP Gas Systems					X		X	Check for leaks & damage
					X			Check line pressure: system should be checked by technician
Water Systems		X						Check hoses, fittings & connections for leaks
	X							Check drainage system for leaks
					X	X	X	Sanitize and flush system
					X			Winterize system if necessary
Electrical System		X						Check GFCI circuits
							X	Perform maintenance procedures per generator manual
							X	Check & service batteries
							X	Add distilled water to batteries if necessary
Safety Equipment	X							Test LP detector
	X							Test smoke detector
	X							Test CO detector
	X							Test and check fire extinguisher
Carpet	X							Vacuum after every trip
							X	Shampoo as needed
Front Wheel Alignment							X	Inspect and align as needed
Seats							X	Lubricate all mechanisms & inspect for proper operation
							X	Check all seat belt buckles. webbing and releases
Chassis & Components							X	Per chassis manufacturer manual
Power Step			X					Clean and lubricate with spray lithium grease
Weight & Distribution	X							Check for proper weight distribution per specifications
Fabrics & Upholstery							X	Clean per manufacturers specifications
Chassis Fluid Levels	X							Check fluid levels including: oil, brake fluid, washer fluid, engine coolant. transmission fluid. battery water. etc.
Tires	X							Inspect for tire wear and proper inflation
	X							Check all wheel lug nuts and tighten per chassis specifications
Window Seals				X		X		Inspect for damaged seals. reseal if necessary
Bathtub/Shower Seal				X			X	Inspect for damaged seals. reseal if necessary
Appliances							X	As required by appliance manufacturer

Travel Preparation Checklist

CLOTHING

Dresses
Gloves
Hat or Cap
Jackets, Coats
Jeans, Dress Pants
Pajamas
Shirts, Blouses
Shoes, Sandals
Shorts
Socks
Sweaters
Swimsuits
Undergarments

TOOL CHEST

Electrical Tape
Four Step Ladder
Furnace Duct Tape
Hatchet
Masking Tape
Saw
Shovel
Small Level
Tire Pressure Gauge
Various Tools

HOUSEKEEPING

Dish Cloths, Dish Towels
Dishwashing Soap
Disposable Gloves
Garbage/Trash Bags
Mop, Broom, Dust Pan
Paper Towels
Surface Cleaner, Degreaser
Throw Rug
Trash Can
Vacuum Cleaner

SAFETY

Compass
First-Aid Kit
Flares
Flashlights
Reflectors

SLEEPING GEAR

Blankets
Pillows, Pillow Cases
Sheets
Sleeping Bags

PERSONAL COMFORT

Anti Bacterial Wet Wipes
Ash Tray
Personal Medications
Personal Toiletries
Sewing Kit, Scissors
Soap
Sunscreen
Toilet Paper
Toothbrush, Toothpaste
Towels, Wash Cloths

MEAL PREPARATION

Baking Pans
Bottle Opener, Can Opener
Coffee Maker
Foil or Plastic Wrap
Glasses, Cups
Plastic Containers
Plates
Portable Grill
Pots, Pans, Skillets
Salt & Pepper
Silverware, Spatulas, etc.
Toaster

ENTERTAINMENT

Binoculars
Books, Magazines
Camcorder
Camera, Film
Music/CD's
Toys, Games, Playing Cards
VHS Player, DVD Player
Yard Games

MISCELLANEOUS

Alarm Clock
Batteries
Bucket
Clothes Hangers
Clothes Line, Clothes Pins
Fresh Water Hose
Fuses
Grounded Extension Wire
Umbrella
Wheel Chocks
Y-Type Water Hose Fitting

CAMPFIRE COMFORT

Bug Repellant
Bug Zapper
Charcoal
Enclosed Screened Tent
Firewood
Grill
Matches
Picnic Table Cloth, W/Clips
Yard Chairs

PET COMFORT

Food & Water Dish
Leash
Litter
Litter Box
Pet Food
Portable Cage
Scoop with Bags
Screw Stake for Tie Out
Tick Repellent
Toys

OTHER

Service / Maintenance Record

Date	Service Work Performed	Mileage	Dealer Name, Address & Phone	Cost

Fuel / Oil Record

[illegible]

Fuel / Oil Record

[illegible]

Notes

Notes

Notes

Troubleshooting

Will not operate.

- ☐ Make sure unit is turned on.
- ☐ Check circuit breakers in coach.
- ☐ Have a Damon dealer check to see if there is proper voltage from shoreline or generator.

Unit runs, but coil freezes and compressor cycles too soon.

- ☐ Control setting may be too low, cycles too soon.
- ☐ Make sure the filter is clean and unobstructed.
- ☐ Have the coolant level checked by a qualified service facility.

Does not get cold enough.

- ☐ Start unit before the day gets too hot.
- ☐ To offset heat gain:
 - Close all windows and blinds.
 - Keep entrance doors closed.
 - Use awnings.
 - Avoid using heat-producing appliances.
- ☐ Make sure the outside coil is not blocked or damaged.
- ☐ Have a Damon dealer check to make sure you have the proper voltage.
- ☐ Should your A/C still not work after the above checks have been made, contact a qualified service facility to perform more extensive testing.



Working with electrical appliances can be extremely dangerous.

Checking the fuses.

- ☐ The Battery Control Center is built in two layers, the printed circuit board and the relays. The box has been designed so that nearly all troubleshooting can be done without the removal of the printed circuit board. Have a Damon dealer remove the circuit board if necessary.
- ☐ Remove the outer cover.
- ☐ Check fuses visually or with an electrical tester.
- ☐ Check for power on both sides of the fuse.
- ☐ Replace the fuse with a new one of the same ampere.

ROOF AIR CONDITIONER

BATTERY CONTROL CENTER



ELECTRICAL POWER

No AC power to unit.

- ☐ Check circuit breakers at power center. The 120 Volt circuit breaker may be off or tripped.
- ☐ Have a dealer check that there is power to the shoreline receptacle.

ELECTRIC STEP

Electric step does not operate.

- ☐ Verify that step switch is in ON position.
- ☐ Check battery voltage. Recharge or replace as needed.
- ☐ Check door switch alignment. Realign or repair if necessary.
- ☐ Check 25 Amp fuse in the battery control center.
- ☐ Check step frame for damage or misalignment. Replace if necessary.
- ☐ Lubricate step assembly with a lithium spray grease if necessary.

Step operates intermittently.

- ☐ Check door switch alignment. Realign if necessary.
- ☐ Check step frame for damage or insufficient lubrication. Replace or lubricate if necessary.

FURNACE

Furnace does not ignite and/or cycles frequently.

- ☐ Check that LP gas tank is full.
- ☐ Remove any obstruction over furnace exhaust.
- ☐ Inspect exhaust tube for any obstructions.
- ☐ Check fuse in fuse panel and replace if necessary.
- ☐ Make sure that return air grill is unobstructed.
- ☐ Remove anything that is stored in furnace compartment that could block air flow.
- ☐ Check that heat outlet registers are open and that register openings are unobstructed.
- ☐ Contact a Damon dealer if the problem persists.
- ☐ Make sure that 12 Volt power is present.
- ☐ Point the remote at the air conditioner to ignite the furnace.

Furnace does not light and fan does not run.

- ☐ Replace fuse with one of the same ampere rating.



Turn thermostat and furnace gas control valve off and contact your dealer or an authorized service center. DO NOT attempt to repair or adjust the furnace yourself.

Starter engages while holding the start button down, but generator does not start.

- ☐ Generator may be out of fuel. Check the chassis fuel level. (Generator will not operate when the chassis fuel tank is less than 1/4 full).
- ☐ Generator may be low on oil. Check the oil level.

Nothing happens when the generator start button is pushed.

- ☐ Check that the battery disconnect switch is in the USE position.
- ☐ Check 12 Volt fuse on generator.
- ☐ Reset circuit breaker if necessary.
- ☐ Contact a Damon dealer or qualified RV technician if problem is not resolved.

Generator starts, but lacks electrical power.

- ☐ Breaker switches may be off or tripped at generator. Reset breaker if necessary.
- ☐ Breaker may be off or tripped inside power center. Reset main breaker if necessary.

Generator makes clicking sound when trying to start.

- ☐ Battery condition may be low. Recharge if necessary.
- ☐ Check for poor ground or battery connection.

Lights flicker.

- ☐ Loose or defective bulb. Tighten or replace as needed.
- ☐ Converter is overheating. Open the cover to cool down and reduce the load by turning off some 12 Volt lights.

Lights dim or are half bright.

- ☐ Low battery condition. Check battery condition and recharge if necessary.
- ☐ Possible converter malfunction. Have converter checked by an authorized service center.
- ☐ Possible loss of ground. Check for loose wire connection.

Jack retracts after coach is level.

- ☐ Check tank reservoir for the proper fluid levels.
- ☐ Hose or jack may have an external leak.
- ☐ Fluid is leaking back to reservoir through the control valve.

Jacks will not retract completely.

- ☐ Jack may be clogged with ice or mud.
- ☐ Main rod is bent or scored. Have replaced or repaired if necessary.
- ☐ Valve plunger is not completely depressed by the valve handle.
- ☐ Spring is weak or broken.
- ☐ Hydraulic line is pinched.

GENERATOR

INTERIOR LIGHTS

LEVELING JACKS

Ignition switch is on, but no power to pump and/or control panel.

- ☐ Parking brake is not set.
- ☐ 12 Volt from power source is not available. Check the in-line fuse under the dash by the O.E.M. fuse panel.
- ☐ Faulty wire or electrical connection. Have checked by a qualified service technician.

Pump will not activate.

- ☐ Grounding switch on valve is not working.
- ☐ Pump relay not functioning.
- ☐ Pump not grounded.

Hydraulic pump activates without use of control valve pad.

- ☐ Grounding switch at valve may have shorted.
- ☐ Pump relay may be stuck.
- ☐ Relay control wire shorted to ground.
- ☐ Oil supply is low in reservoir.
- ☐ Store levers not in the operate position.
- ☐ Pump is not developing pressure.
- ☐ Broken hydraulic line.

Yellow leveling lights are not functioning properly.

- ☐ Yellow lights will not go out when vehicle is level. Adjust the sensing unit located under the main body floor in a center storage compartment. See your manufacturer's manual.

Red warning lights are not functioning properly.

- ☐ Lights will not come on: check for broken wire at warning switch on the jack.
- ☐ Lights will not go out: faulty warning switch or wires are shorted to the ground.

LP GAS

Smell gas in or around unit.

- ☐ LP tanks may be overfilled.



Working with LP gas can be dangerous.

- ☐ Follow these instructions:
 - Extinguish any open flames, pilot lights and all smoking material.
 - Do not touch electrical switches.
 - Shut off gas supply at the tank valve or gas supply connection.
 - Open doors and other non-powered venting openings.
 - Leave the area until odors clear.
 - Have the gas system checked immediately and leakage source corrected by a Damon dealer or qualified service center before using again.

Will not operate.

- ☐ Door open or timer OFF. Close door and turn timer ON.
- ☐ No power to oven. Check power supply and circuit breaker.

No lights on panel when switch is pressed.

- ☐ Check battery voltage and condition.
- ☐ Check fuse in the Battery Control Center labeled BD RELAY; if fuse is good have a Damon dealer or a qualified RV technician check the condition of panel.

Holding tank lights deliver false readings (i.e., 1/3 or 2/3 indication).

- ☐ Verify tank is empty.
- ☐ Debris may be built up across probes. Clean and flush tank using four parts vinegar mixed to two parts water.

LP gas indicator display indicates E or F all the time.

- ☐ Ensure LP gas tank is full.
- ☐ If display is F, check the wiring or sending unit for malfunction.
- ☐ Have it inspected by a certified technician.

No power to outside receptacle.

- ☐ Make sure you have power to the shoreline.
- ☐ Check breaker on generator.
- ☐ GFCI receptacle switch may be off or tripped. Reset GFCI at receptacle in bathroom or kitchen.
- ☐ Check the breaker in the power center or panel box.
- ☐ Contact a Damon dealer or a qualified RV technician if problem is not resolved.

Oven slow to heat up.

Poor baking.

Poor ignition of burners.

Pilots won't stay lit.

Popping sound from top burners.

Carbon on pilot shield.

Burner flame too low or too high.

- ☐ A defective gas pressure regulator may cause these conditions. Have the regulator tested by your gas dealer or a certified RV technician.

Top burner or oven burner won't light or won't stay lit.

- ☐ Check position of top burners and flash tubing.
- ☐ Clean clogged burner ports with a toothpick.
- ☐ See Oven Owner's Manual for proper care and maintenance.

Gas smell.

MICROWAVE OVEN

MONITOR PANEL

**OUTSIDE
RECEPTACLE**

OVEN

POWER INVERTER

- ☐ Check all connections with leak detector solution.

Never Use a match or flame to check for leaks.



All LP connections should be checked periodically as vibrations from travel may cause them to loosen.



bottom.

- ☐ Oven too full for proper circulation. Use smaller pans or put less food in the oven.

Inverter does not work.

- ☐ Be sure the batteries are properly charged. If the batteries are low, they will trip the breakers on the inverter or force the inverter into low voltage drop out.
- ☐ Reset the breakers on the inverter or reset inverter control.
- ☐ The 2000 watt operates the GFCI circuit, the front TV entertainment center, rear TV and the microwave and general outlets.

SLIDE-OUT ROOM

Room moves in and out very slowly, binds or squeaks.

- ☐ Grease the slide-out tubes and rollers.

Grease marks appear on the carpet where the rollers are located.

- ☐ The rollers are not a true sealed roller, so this may happen over time. Take precautions when lubricating.

Water is getting in at the bottom corners of the room.

- ☐ Verify the exterior seals are against the room at the top corners and not turned in when room is out. Also, check for voids in the seal on the roof.

Room will not move in or out.

- ☐ Ensure ignition switch is in the OFF position.
- ☐ Check the auto-resetting fuse located by the slide out motor. (See the manufacturers manual)
- ☐ Check battery condition and state of charge. Recharge if necessary.

Rollers leave tracks in the carpet as the room extends.

- ☐ This is normal. There are many pounds of weight pressing these rollers down on the carpet and rollers will compress the nap of the carpet down. Raking the nap or vacuuming will solve the problem.

Wet areas near water connections, pump runs while the faucets are closed, and no other fresh water fixtures are being used.

- ☐ There is a possible leak.

- ☐ Close all low point water drains and tank drains.
- ☐ Turn off all fixtures.
- ☐ Check all fixtures and connections for tightness. Do not overtighten fittings as this may cause additional leakage.

Pump will not start.

- ☐ Check that house battery disconnect switch is on.
- ☐ Check pump switch at monitor panel.
- ☐ Check fuse in power center.
- ☐ Check to see if water is frozen.

Will not prime, sputters. (No discharge, but the motor runs.).

- ☐ Check to see if there is water in the tank, or if air collected in the hot water heater.
- ☐ Check for frozen water lines or water tank.

Pump will not shut off. Runs when faucet is closed.

- ☐ Turn off pump or city water supply.
- ☐ Check for damp areas around plumbing appliances.
- ☐ Check plumbing for leaks and inspect for leaky valves on toilet.
- ☐ Have the pump checked by your Damon dealer or a qualified RV technician.

The control panel lights are not illuminated.

- ☐ Check coach circuit breakers and GFCI receptacle.
- ☐ Verify that refrigerator is plugged into the 120 Volt outlet.
- ☐ If using LP gas, verify house batteries have adequate charge.

Lights are illuminating, but no cooling.

- ☐ Use a proper power source that is available and cooling operation to specification.
- ☐ Make sure the refrigerator unit is level.
- ☐ Allow sufficient time for proper cool down and try to load with precooled food.
- ☐ Have a qualified RV technician check that the vents and chimney at the rear of the refrigerator are clear and unobstructed.
- ☐ Have a qualified RV technician make sure the burner jets or burners are not dirty or damaged.
- ☐ Have a qualified RV technician check the fuses in the black electrical box on the rear of the refrigerator.

Extinguish all flames. Never use a match or flame to check for leaks.

WATER SYSTEMS

WATER PUMPS

REFRIGERATOR

COACH BATTERY

⚠ WARNING

on evaporator fins.

- ☐ Defrost the freezer and refrigerator.
- ☐ Have the refrigerator checked by your Damon dealer or a qualified RV technician.

Battery boiling.

- ☐ Water low in battery. Refill water to correct level in battery, using distilled water.
- ☐ Bad battery. Replace the battery with new.
- ☐ Defective converter. Have converter checked by a qualified RV technician.

Continuous use of converter can cause evaporation of electrolyte in battery.

NOTICE

Working.

RUNNING LIGHTS

- ☐ Blown fuse. Replace fuse with one of the same ampere rating.
- ☐ Bad bulbs. Replace the bulbs with new.

TERMINATION VALVE

Termination valve leaks.

- ☐ Debris keeps valve from seating. Clear debris from and around valve o-ring set.
- ☐ Bad gasket. Have a Damon dealer or a qualified RV technician replace gasket with new.

TV ANTENNA

Poor TV reception.

- ☐ Power jack is not turned on. Turn power jack switch to ON.
- ☐ Bad connections at TV or wall plate. Make sure the connections are good at both TV and wall plate.
- ☐ Antenna not pointed in direction of sending station. Point antenna in proper direction.
- ☐ Cut or torn cable. Have a Damon dealer or a qualified RV technician replace bad cable where needed at TV and antenna.

Elevation handle turns, but antenna does not raise or lower.

- ☐ Handle may be loose. Tighten screws.
- ☐ Gears may be stripped. Have a Damon dealer or a qualified RV technician replace the gears.

Antenna will not rotate.

- ☐ The rotate handle is engaged to the ceiling plate. Pull down on handle to disengage from the ceiling plate.
- ☐ Possible obstruction (tree branch, etc.). Remove obstruction.
- ☐ Friction adjustment. Adjust center lock nut.

- ☐ Design of antenna limits rotation to 350°. Adjust as necessary.

Dish does not rotate or is hard to rotate.

- ☐ Check antenna on roof, make sure that the mount has not been damaged.
- ☐ Check for caulking between gear housing and base plate.
- ☐ Be sure cables are not binding.

Dish does not raise or is hard to raise.

- ☐ Check antenna on roof, make sure that the mount has not been damaged.
- ☐ Check for caulking on elevating shaft.

Poor Reception.

- ☐ Have you entered your correct current location zip code?
- ☐ Do you have the TV tuned to channel 3 or 4? (Same channel as the output of the receiver)
- ☐ Be sure there are no trees, buildings, mountains, etc. in the line of sight to the satellite.
- ☐ Check connections at the receiver, TV and antenna.
- ☐ Fine tune reception by slowly moving the antenna left, then right until you find the position that gives the highest signal strength. **It is important that you turn the antenna slowly. The signal is digital and it takes a few seconds to lock on.**

Waste tank (black) will not drain.

- ☐ Buildup or debris in tank. Check for buildup in tank at stool.
- ☐ Always use a minimum amount of biodegradable toilet paper.
- ☐ Always use plenty of water when flushing.
- ☐ Check termination valve for proper operation.

Temperature-pressure relief valve weeping.

- ☐ Weeping or dripping of relief valve while water heater is running does NOT mean it is faulty.

SATELLITE DISH

WASTE TANKS

WATER HEATER



Water Heater Drain Plug


There is an odor that smells like rotten eggs.

- ☐ If your fresh water source has a rotten egg odor, you will need to find another source of fresh water before flushing and refilling the entire RV water storage system. To remove the hydrogen sulfide (rotten egg) odor:
- ☐ Turn off your main water supply; that is your pump or your water hookup source.
- ☐ Drain your water heater tank by removing the drain plug. Approximately two quarts of water will remain in the bottom of the tank. If you notice during the draining that the water is flowing sporadically or slowly, instead of flowing freely, you should open your relief valve to allow air into the tank.
- ☐ If the water does not flow freely, take a small gauge wire or coat hanger and push through the drain opening to eliminate any obstructions.
- ☐ After thoroughly draining the tank, flush the entire system from the water inlet all the way to the holding tank. To flush, use four parts of vinegar mixed with two parts of water. If you decide to use air pressure (55 PSI max.), it may be applied either through the inlet or outlet on the rear of the tank. It may also be applied through the relief valve port. In this case, it will be necessary to first remove the relief valve. You may then insert your air pressure through the relief valve support flange. In either case, with the valve open, the air pressure will force the remaining water out of the tank. If air pressure is unavailable, you may flush your tank with fresh water. Fresh water should be pumped into the tank with the assistance of the on board water pump or with the assistance of external water pressure. Once again, external pressure may be pumped into the unit either through the inlet or outlet found on the rear of the water tank, or using the relief valve inlet located on the front of the unit.
- ☐ Continue this flushing process for approximately five (5) minutes allowing ample time for the fresh water to agitate the stagnant water on the bottom of the tank and force the deposits through the drain opening.
- ☐ Upon completion of the steps above, close the drain plug as well as the relief valve. Refill with fresh water, circulate and rinse.
- ☐ If you use your vehicle frequently or for long periods of time, flushing the water heater several times a year will prolong the life of the water heater storage tank.


Electrical Diagrams



Electrical Diagrams

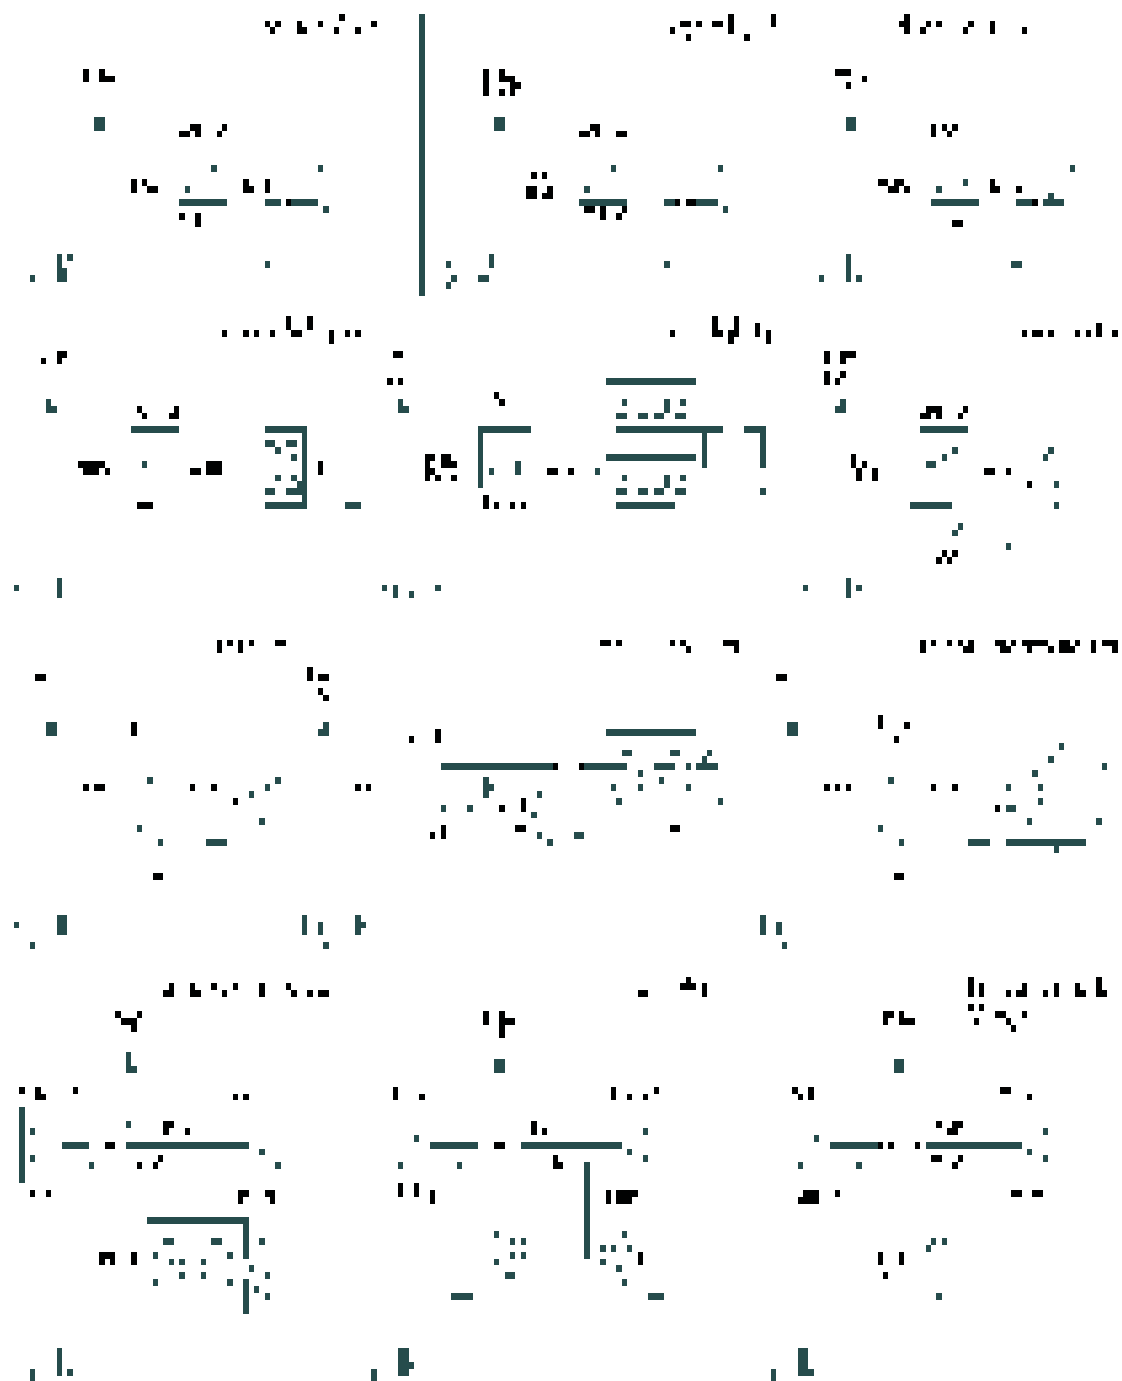


- 1/24/2021
 Jump to +4
 Overlap

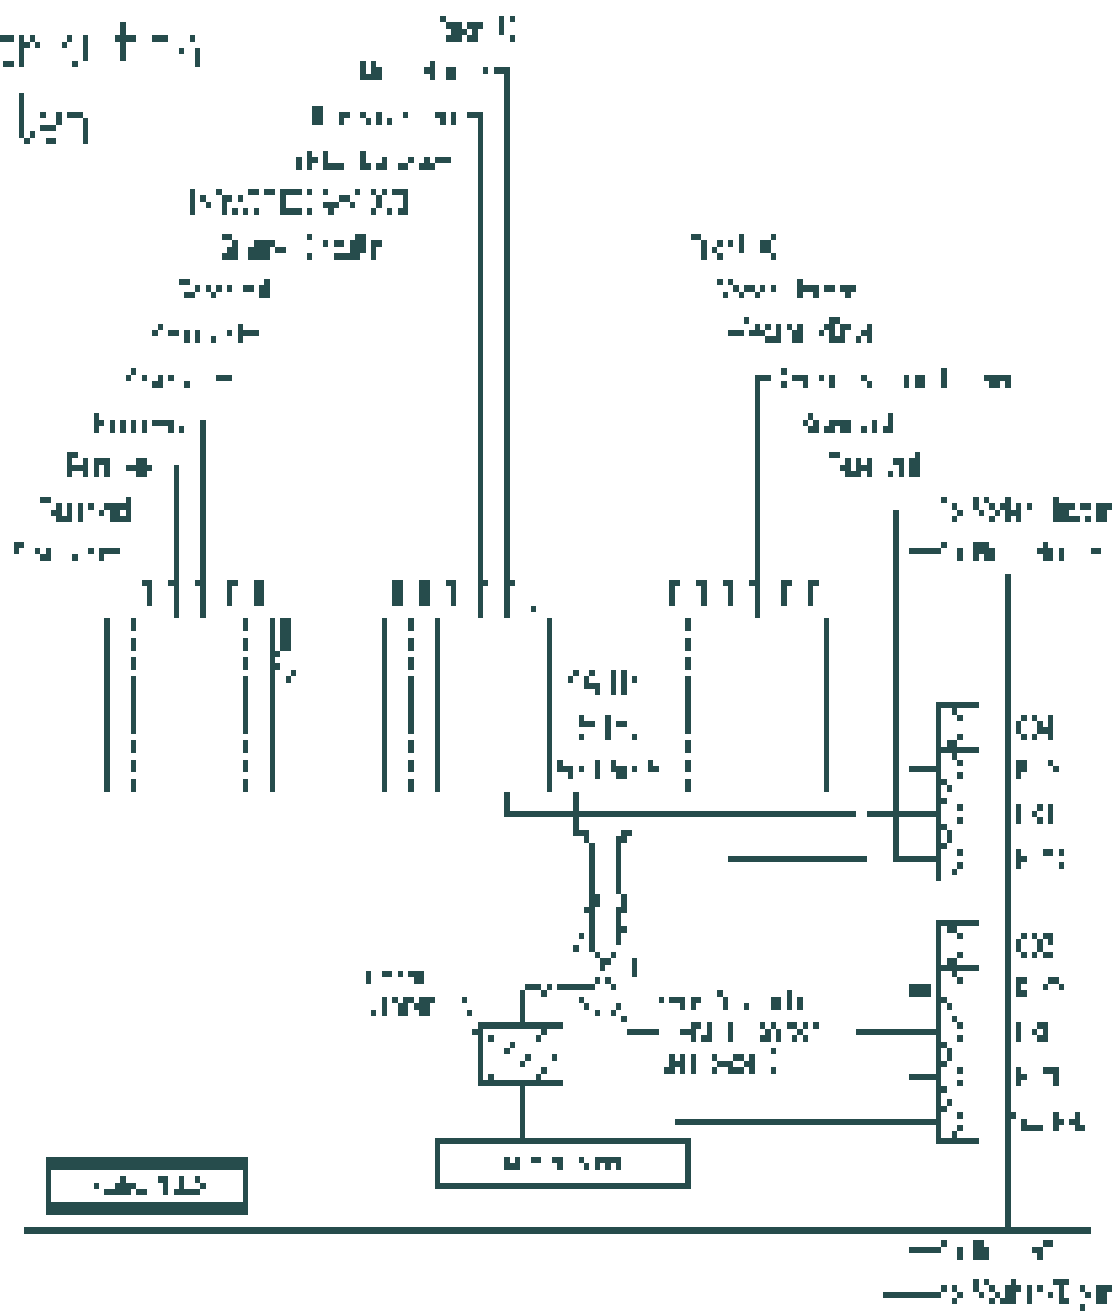

Notes:

- Shared and Volatile are not shown in Larry
- See current layout for layout details
- Set all 1s and 0s to 1000
- Block 1000: See Fixed Configs


Electrical Diagrams

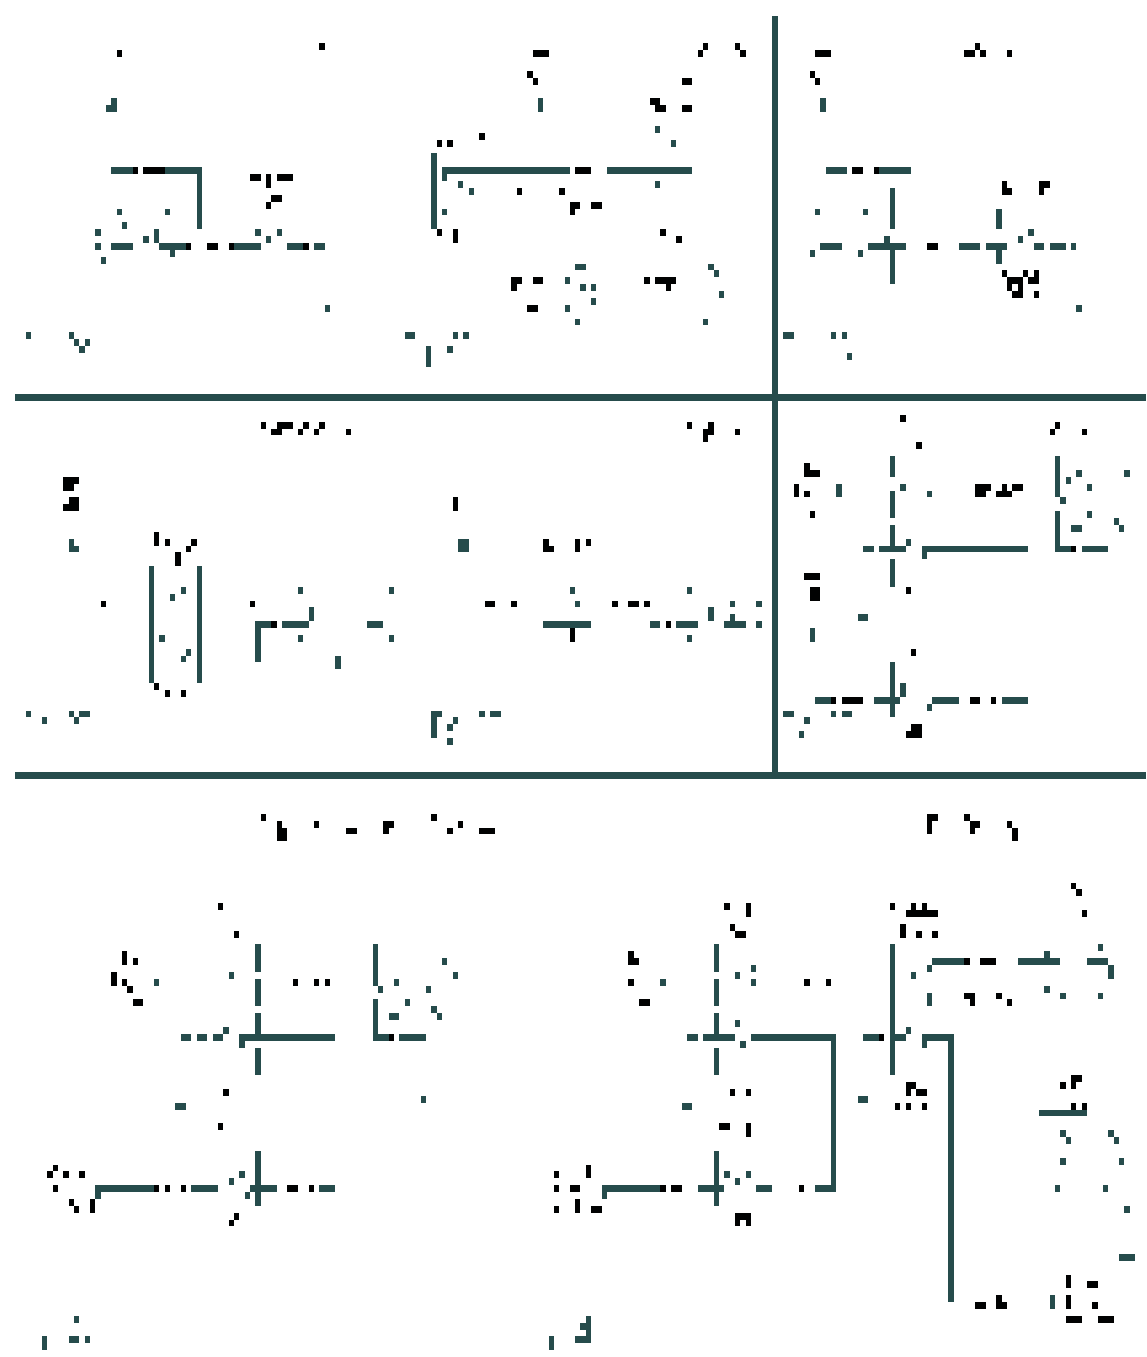


Electrical Diagrams




Electrical Diagrams

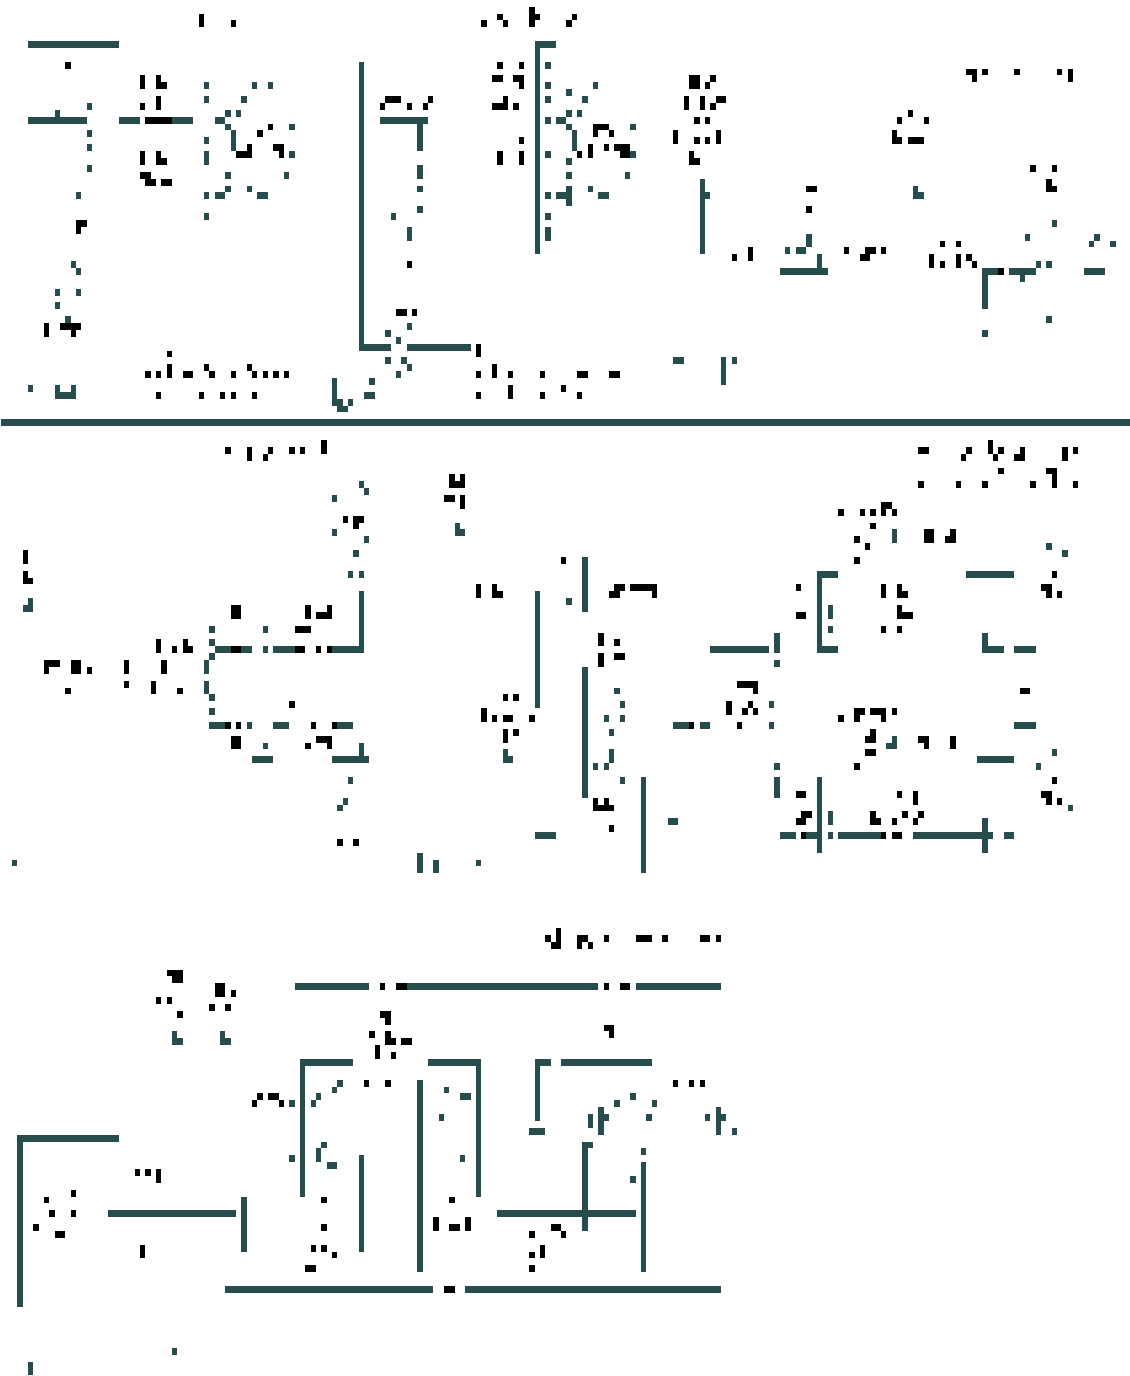


Electrical Diagrams

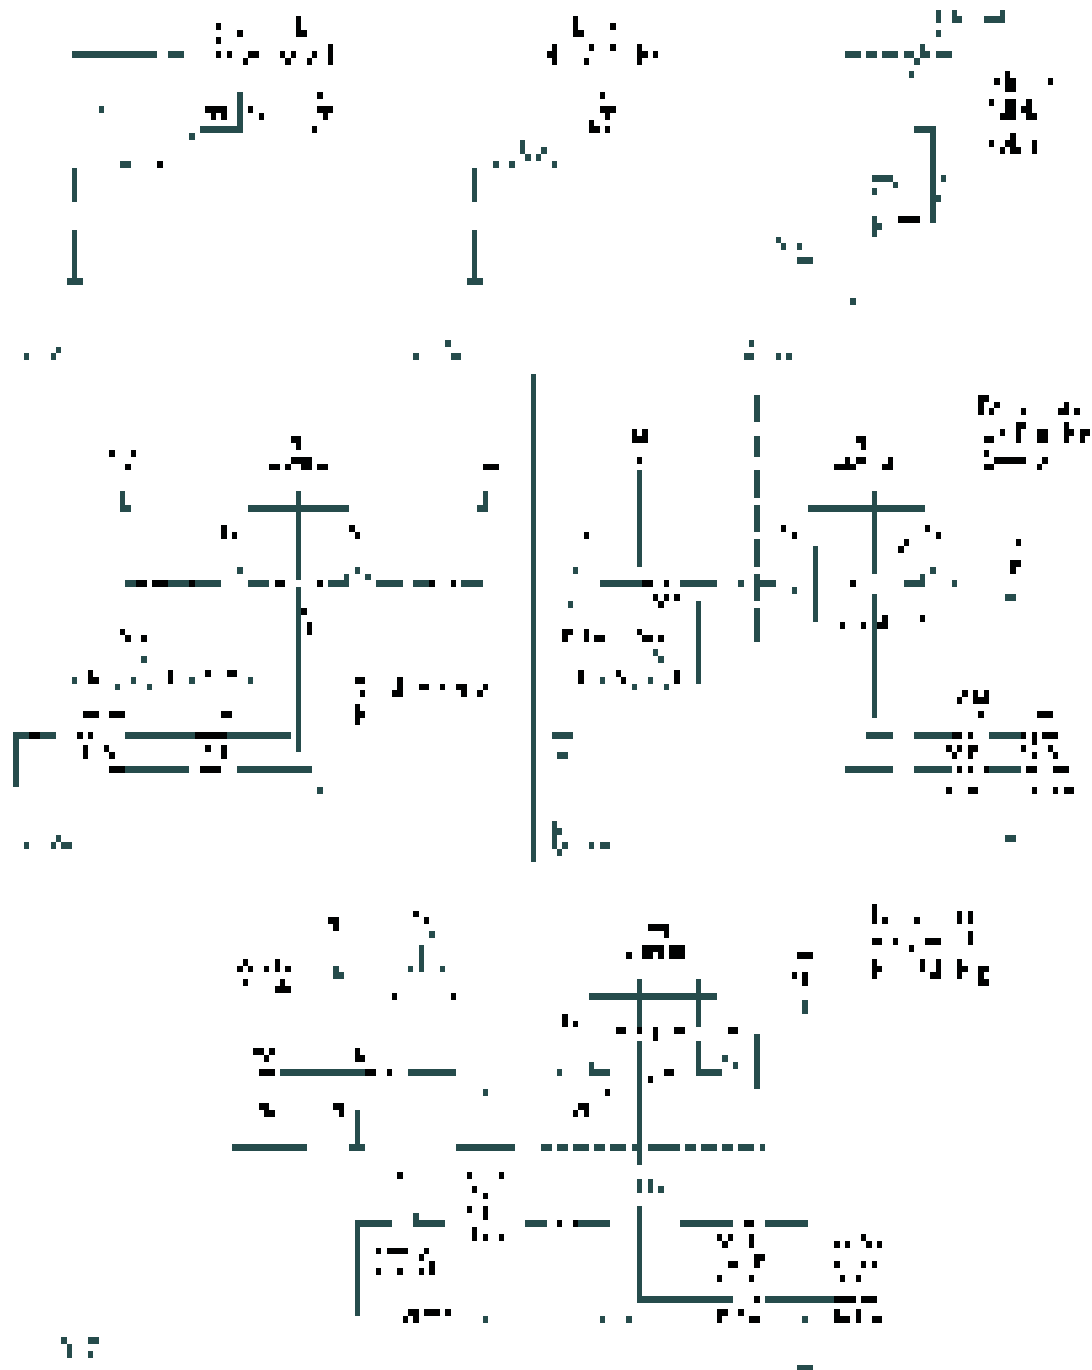


Electrical Diagrams

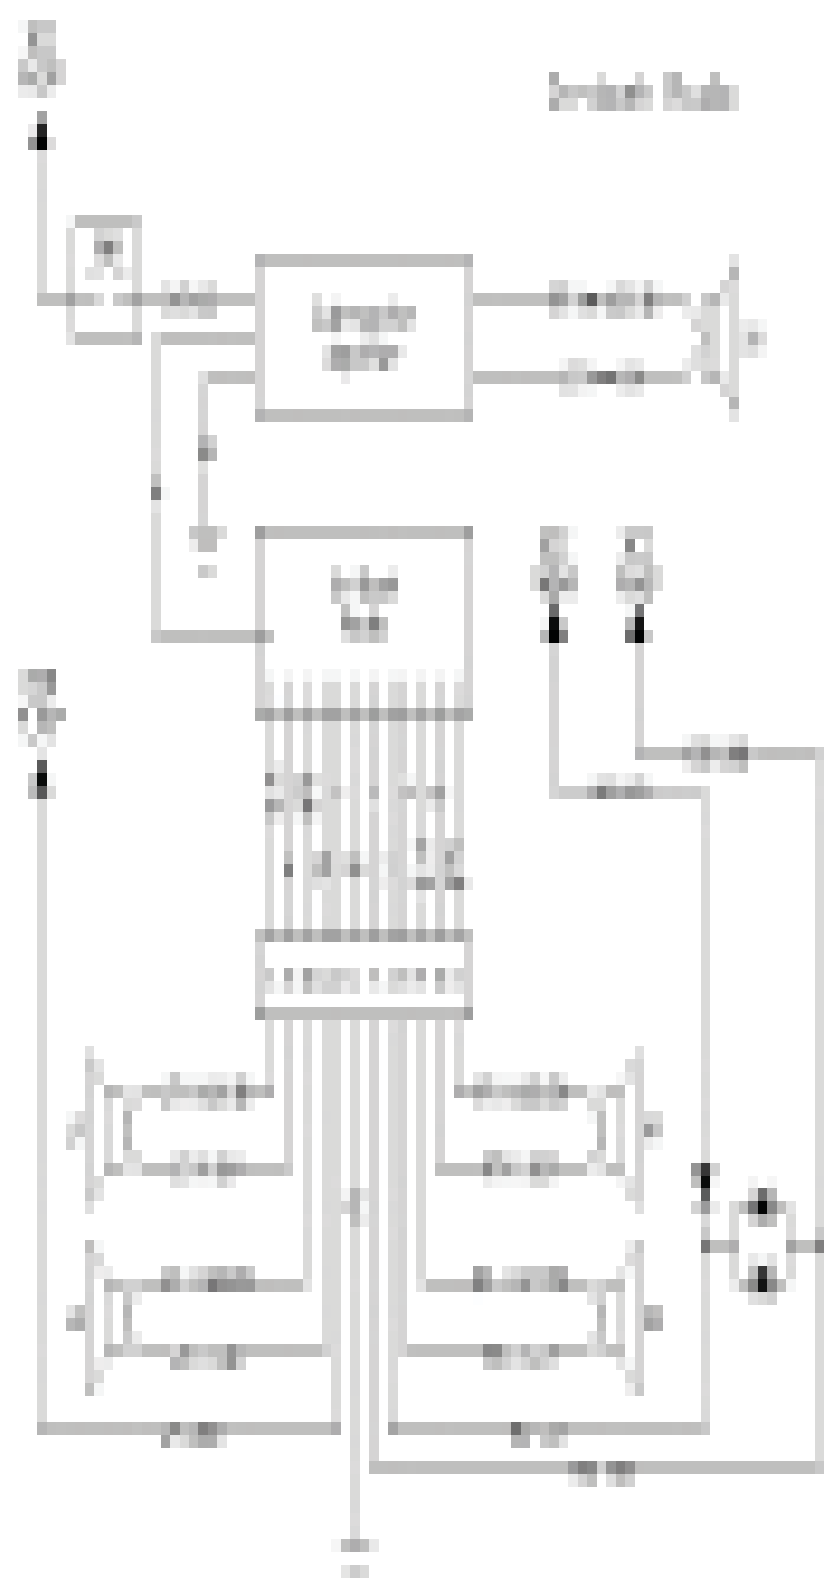


Electrical Diagrams

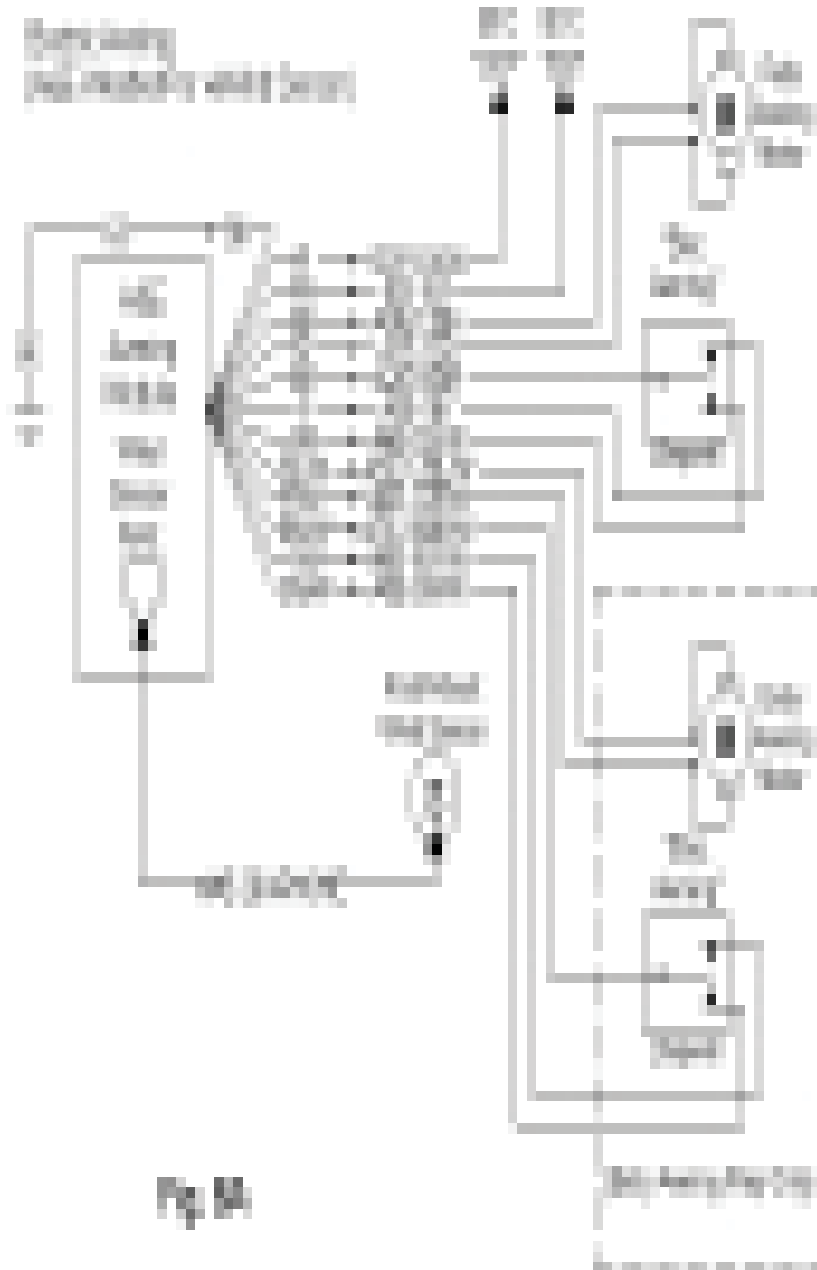


Electrical Diagrams

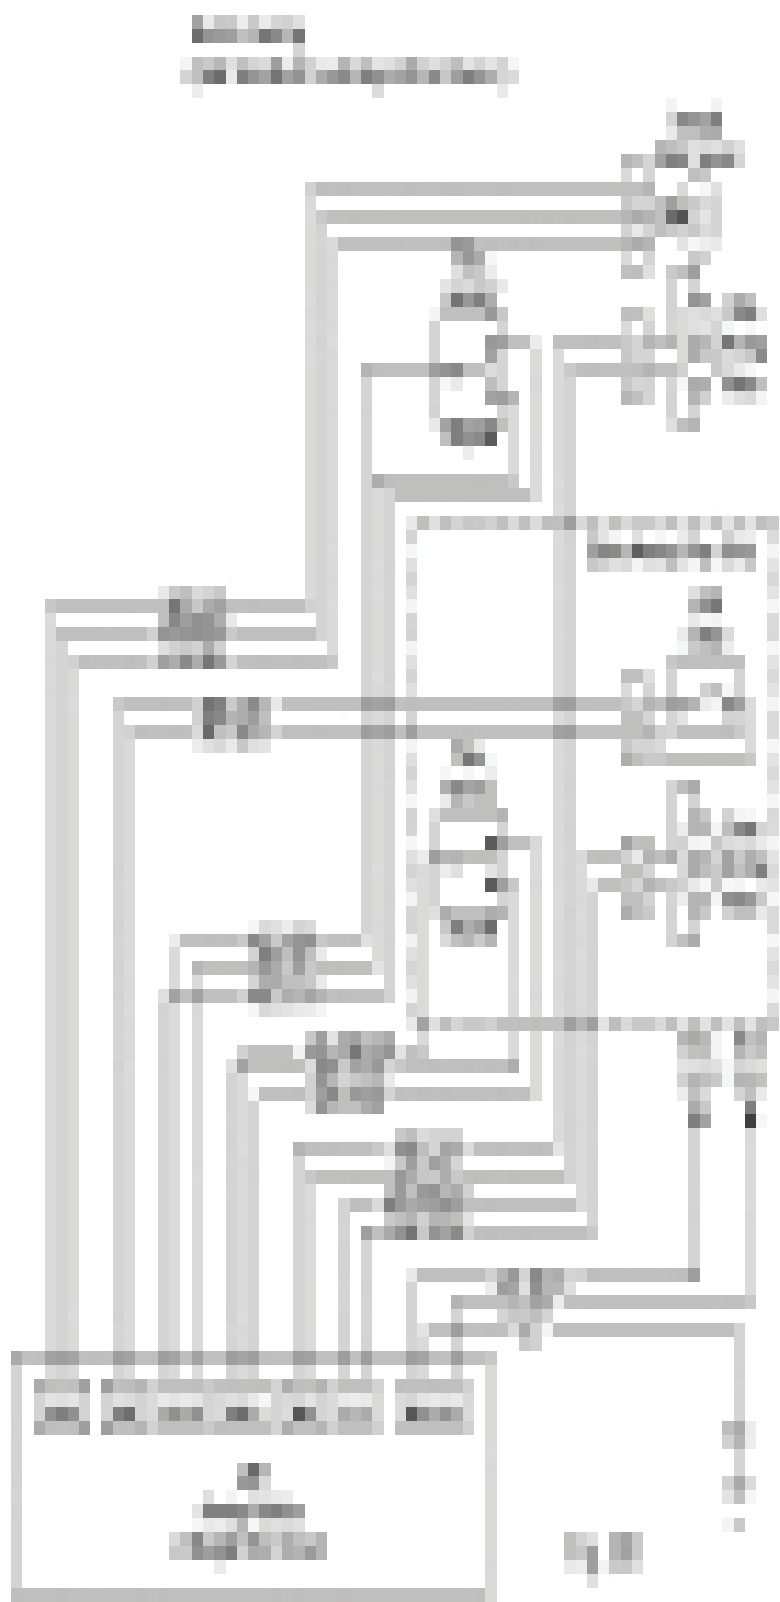


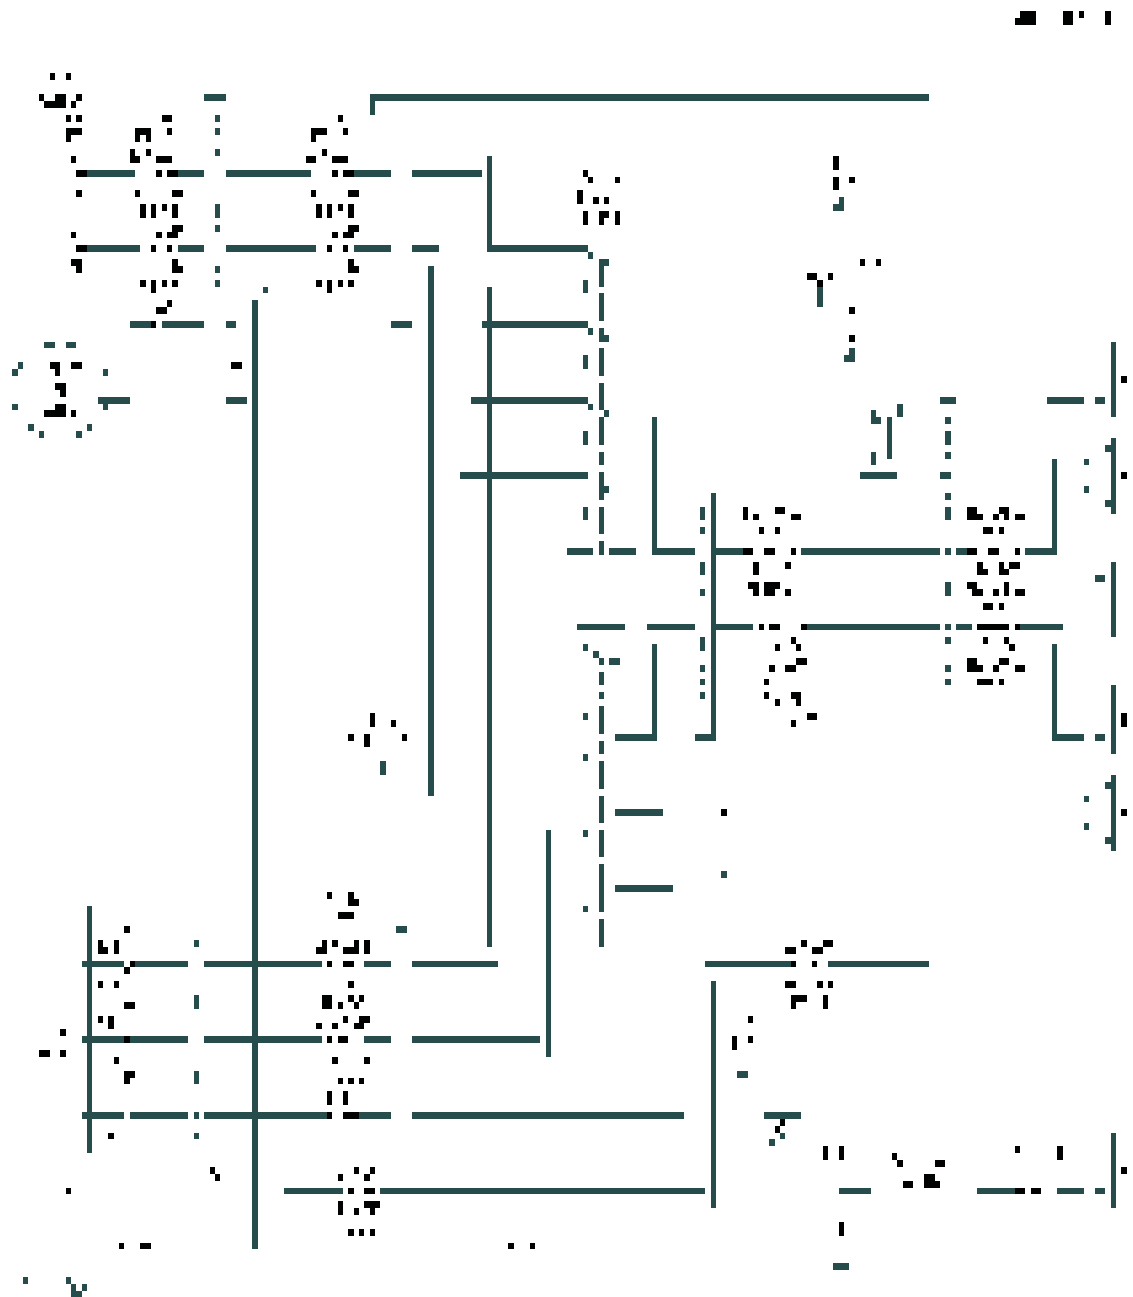

Electrical Diagrams

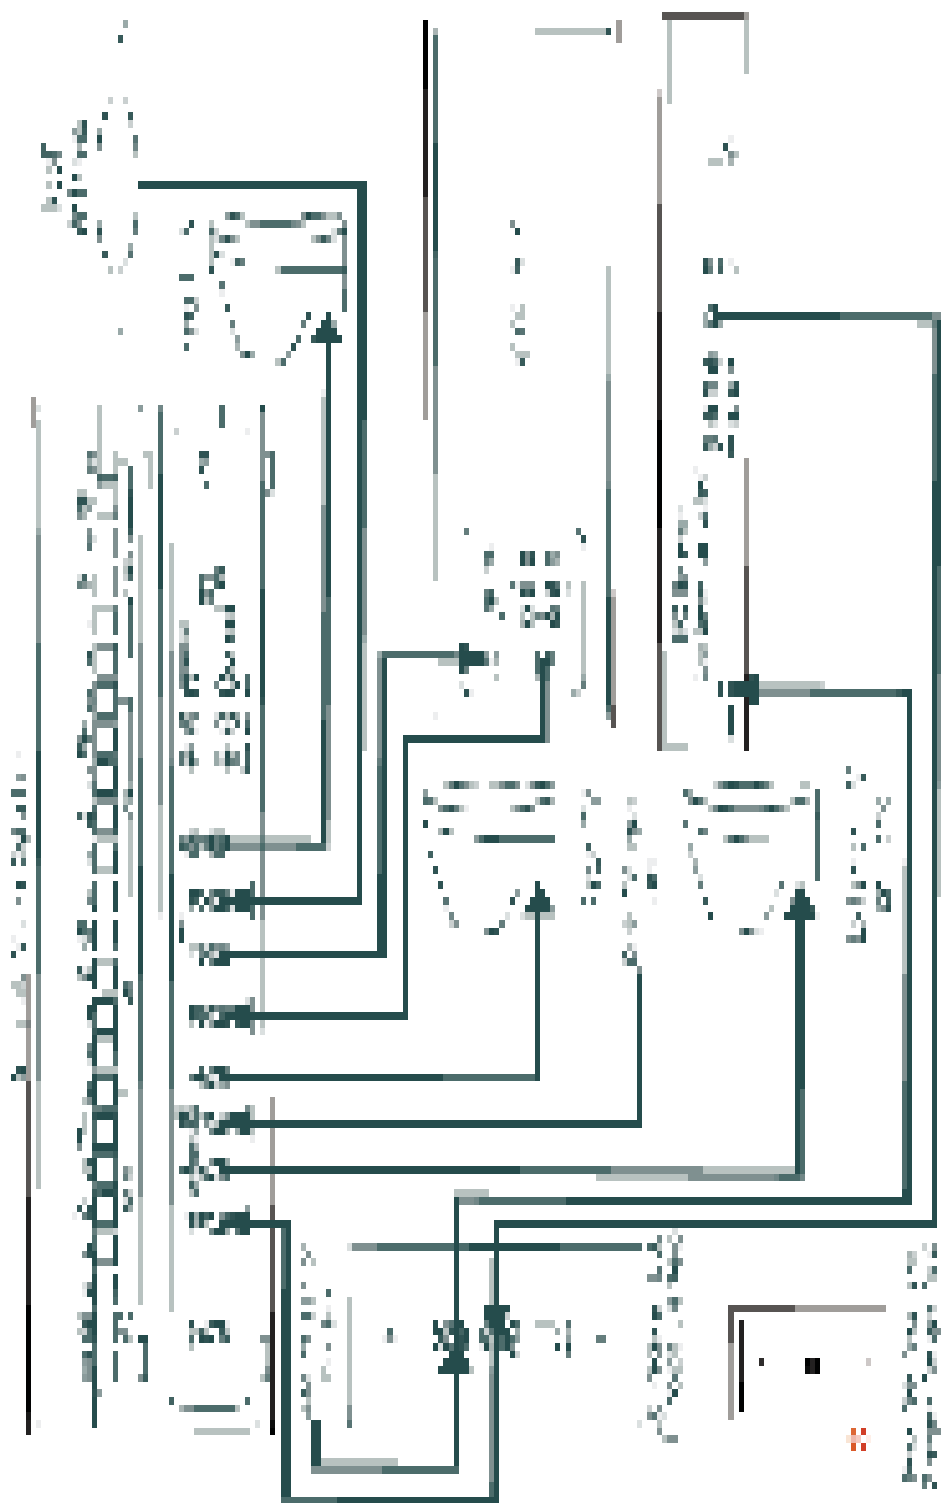

Electrical Diagrams

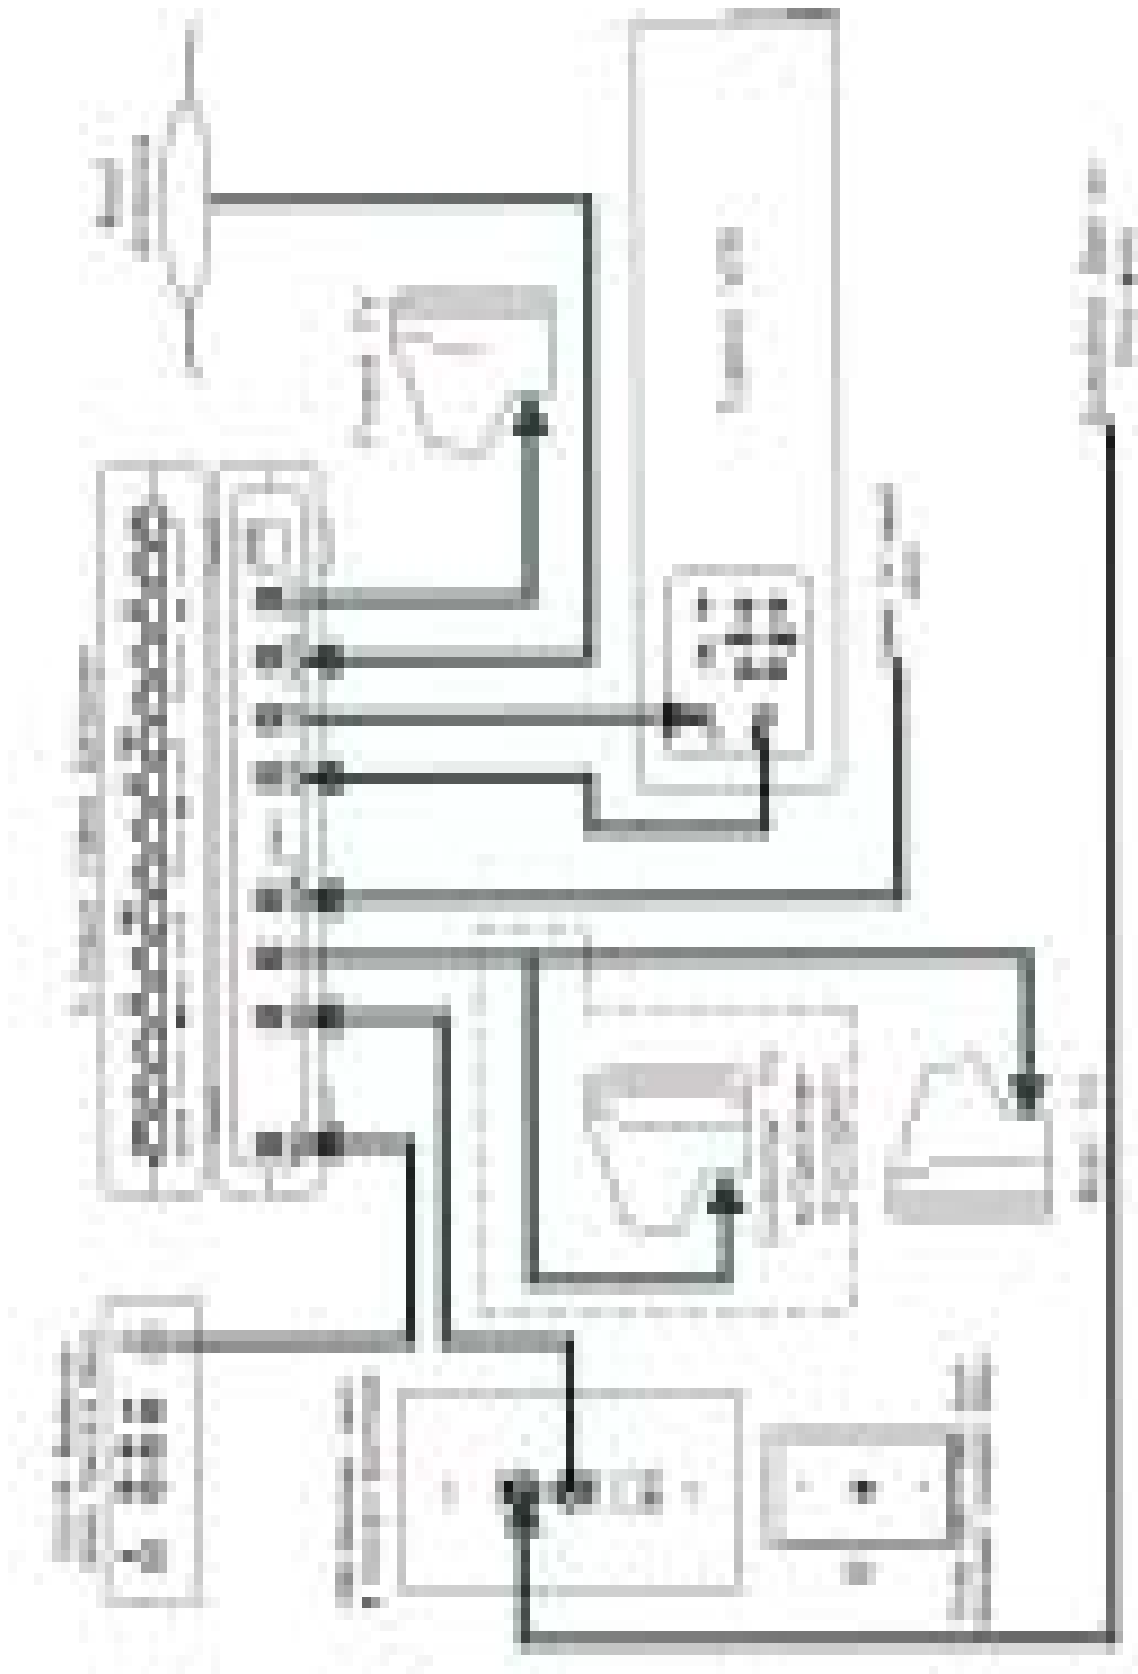

Electrical Diagrams

120 Volt Outdoor Outlet	50	Electric Step	49&82
120 Volt Powercord	12&50	Electrical Diagrams.....	91
50 Amp Smart Energy Management System	32	Electrical System.....	29&54&82
ABS Plastic Parts	55	Electronic Gear Selector.....	39
AC System.....	32	Engine Block Heater.....	39
Air Conditioner.....	32&83	Engine Brake Switch	42
Air Pressure.....	21	Engine Access Panel	44
Air Suspension	42	Entry Step.....	12
Alignment.....	9&55	Entry Step Storage	44
Appliances.....	62	Exit Locations	24
Automotive Dash Air Conditioner.....	44	Exterior Care	9&59
Automotive Fuse Block.....	31&51	Exterior Lights.....	56&90
Auxiliary Start Function.....	42	Exterior Step.....	10&12
Awning.....	49&55	Fantastic Power Vent	51
Back up Monitor.....	42	Faucets.....	49
Bath Fixtures	62	Federal Certification Label.....	14
Bath Receptacle	30-31	Fiberglass Exterior.....	56
Bath Tub Seal.....	62	Fire Extinguisher.....	23
Bath Vent.....	48	Food Storage.....	65
Batteries (Main & Auxiliary)	8&53&88	Fresh Water System.....	25&54
BCC (Battery Control Center).....	31&81	Fresh Water Fill	25
Bedspread / Draperies / Valance / Headboards	62	Front Television	44
Cabinets	46	Fuel/Oil Record.....	74-75
Cable Jack Connection.....	52	Fuel Selection.....	39
Capacities.....	15	Fuel System.....	19
Carbon Monoxide Detector.....	24&62	Fuse Block.....	53
Carbon Monoxide Precautions	24	Furnace	50&82
Carpet.....	62	Furnace Thermostat	46
Ceramic Tile	62	Galley Area	47
Changing tires	20	Generator & Power Plant Service.....	31&54&83
Chassis.....	56	Generator Compartment.....	50
Chassis Climate Control	44	GFCI	30-31
Chassis Electrical	29&55	Graphics	58
City Water Fill	25	Hardware.....	63
CO Detector.....	24&62	Heating and Cooling Controls (Dash).....	42
CO Detector Battery Installation	24	Heated Holding Tanks	27
Coach Electrical.....	29	Heating.....	65
Compartment Doors	13&49	Hide – A – Bed.....	46
Condensation	8&65	Hitch	17
Controlling the Motorhome	11&17&19	Home Theater Operation.....	36
Converter.....	30	Home Theater Programming	35
Counter Tops and High-Pressure Laminates.....	64	Home Theater Trouble Shooting	38
Damon Limited Warranty.....	5-6	How to use this manual	2
Dash Board Controls	40	Hydraulic Fluid	61
Dash Control Symbols.....	40	Insurance.....	11
Day / Night Shades.....	46&63	Interior Care.....	9
DC System	29	Interior Lights.....	83
Dinette Conversion.....	48	Inverter	30&86
Doors and Door Locks.....	13&56	Kitchen Fixtures	63
Drain Systems Termination Valve.....	28		
Drainage Systems, Waste Water System.....	26		
Driving	19		
Dual Stage Gas Support Pistons.....	51		
Dumping the Holding Tanks.....	27		

Index

Leveling Jacks.....	42&83	Service.....	9
Licenses	11	Service Maintenance Record	73
Lighting Appliances.....	24	Sewage.....	12
Lights.....	12&56&83&88	Shower Head and Hose	48
Limited Warranty	5	Sidewalls	58
Loading.....	9&11&16	Sinks.....	47&63
Low Point Drains	26	Slide Out Operation.....	10&44&60&86
LP Gas Detector	23	Sliding Bedroom Door and Latch.....	46
LP Gas Regulator.....	34	Smoke Detector.....	23
LP Gas System.....	33&55&65&84	Solid Surface Countertops.....	63
LP Gas tank.....	12&34	Sofa Bed	46
Main Entrance	49	Steering Wheel	41
Maintenance Schedule	71	Step Lubrication.....	10
Major Equipment Suppliers	3	Storage above Cockpit	43
Microwave Oven.....	47&85	Storage and Winterization Checklist.....	68
Mini Blinds / Day Night Shades	47&63	Storage.....	45-46
Mirrors	12	Storage under Bed	46
Monitor Panel	32&85	Symbols of Switches	42-43
Notations	2	Telephone Jack Connection	52
Notes	76	Termination Compartment Fixtures	28
Opening Checklist	13	Termination Valve	28&88
Outside Receptacle	52&85	Tips for Winter Use.....	67
Oven.....	48&85	Tire Care.....	21&60
Owner Obligations	6	Tires.....	10&12&60
Owner Responsibility Checklist	8	Toilet	48
Pantry	47	Towing	17-18
Parking	20	Travel Bars	10
Parking Brakes	42	Travel Preparation Checklist	72
Potable Water Fill	25	Troubleshooting.....	83-92
Potable Water Tank	9	TV Antenna.....	60&88
Power Converter.....	30&86	TV Booster.....	45
Power Cord.....	12	TV Cable Connection	50
Pre-Travel Checklist	12	Underbody.....	61
Production Changes.....	8	Upholstery and Fabrics.....	64
Range.....	47	Vinyl Cabinetry	64
Rear Ladder.....	59	Wall Coverings	64
Rear View Mirrors.....	12	Warranty	5-6
Refrigerator.....	13&47&51&87	Washer/Dryer Combination Machine	48
Reporting Safety Defects.....	2	Waste Tanks	12&89
Roof	58	Waste Water System	26&54
Roof Air Conditioner	32&81	Water Fill	12&25
Roof Vents.....	59	Water Filter	25
RV Coach Battery.....	29&90	Water Heater Switch.....	46
RVIA Weight Label	15	Water Heater	50&90
Safety Belts	19	Water Heater Bypass	67
Safety Provisions.....	23		
Sanitizing the Fresh Water System	26		
Satellite Dish.....	61&89		
Seals and Adhesives	9&59		